


Installation Instructions

Part #: RG5224 (Conventional)
RG5225 (Addressable)


1.

Remove ISB lid from box. Use a hammer and a flat head screw driver to remove side knock outs.

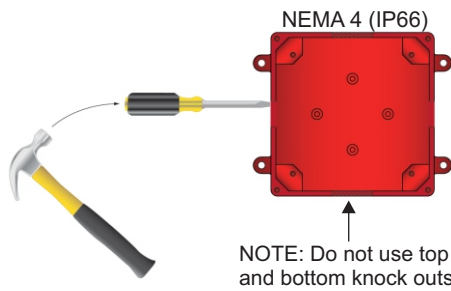


2.

Loosen the strain relief connector and run the cable through the strain relief and the knock out hole in the ISB Box. Reinstall and tighten ring.

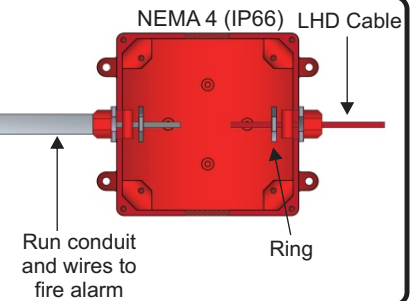


3.

Strip off one inch of the outer jacket both cables. Strip the wires 1/4 inch to expose the inner cores.

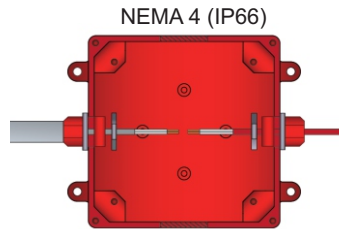


4.

Connect the ISB to the Din rail.

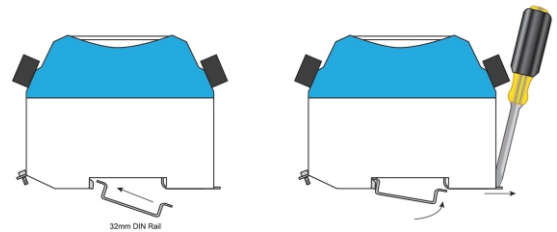


5.

Attach cables to the ISB terminals.

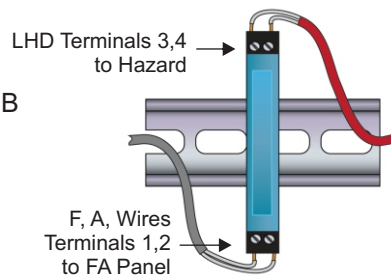


6.

Mount the Din rail, with ISB attached, to the ISB Box with the two screws and washers provided.

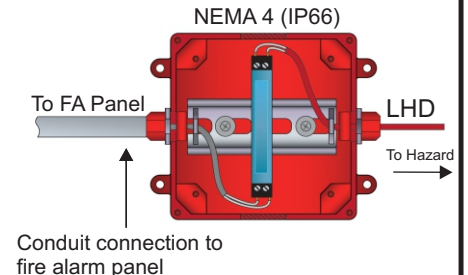

7.

Tighten the rings to the strain relief connector to secure them to the ISB Box.

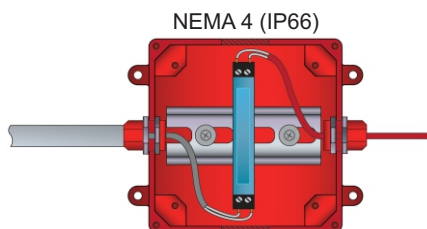

NOTE: ISB can be used in either orientation, knockout sizes are 1/2" and 3/4".

Note: Please refer to all federal, state and local codes, and manufacturer's recommendations prior to design or installation.