

**ADEMCO VISTA SERIES  
VISTA-32FB/VISTA-128FB**

**Commercial Fire and Burglary  
Partitioned Security System  
With Scheduling**

**Programming Guide**

## Table of Contents

Recommended Programming Procedure.....	3	Output Programming .....	32
Program Field Index .....	4	Relay Voice Descriptors .....	36
VISTA-32FB/VISTA-128FB Programming Form.....	5	Relay Voice Descriptors and Custom Word Substitutes Vocabulary.....	37
Partition-Specific Fields.....	10	Custom Word Substitutes for VIP Module Annunciation.....	37
Programming With #93 Menu Mode.....	12	System Layout Worksheets.....	38
Zone Programming.....	13	Output Devices Worksheets .....	50
5800 Series Transmitters Loop Designations .....	16	Scheduling Menu Prompts .....	56
Expert Mode Zone Programming .....	17	Scheduling Worksheets.....	57
Report Code Programming .....	21	VISTA-32FB Summary of Connections Diagram ...	62
Alpha Descriptors Programming .....	24	VISTA-128FB Summary of Connections Diagram .	63
Alpha Descriptor Vocabulary.....	28		
Device Programming.....	29		

**NOTE:** All references in this manual for number of zones, user codes, partitions, VistaKey modules, the master partition and the event log capacity, use the VISTA-128FB's features. The following table lists the differences between the VISTA-32FB and the VISTA-128FB control panels. All other features are identical for both panels.

Also, all procedures in this guide for entering zone numbers or user numbers show 3-digit entries, which is valid for the VISTA-128FB. For the VISTA-32FB these entries are only 2-digit.

Feature	VISTA-32FB	VISTA-128FB
<b>Partitions</b>	<b>2</b>	<b>8</b>
<b>Number of Zones</b>	<b>32</b>	<b>128</b>
<b>Number of User Codes</b>	<b>75</b>	<b>150</b>
<b>Master Partition</b>	<b>3</b>	<b>9</b>
<b>VistaKey Modules</b>	<b>4</b>	<b>8</b>

The purpose of this document is to provide a quick and easy way to program your entire system. A recommended programming procedure is included, followed by a list of program fields with the corresponding program group they belong to (system-wide, partition-specific, scheduling, etc.). Two program forms are included. One contains all the programming fields, and the other contains the partition-specific fields. If you are setting up a single-partition system, the partition-specific fields become system-wide fields.

Following the program forms are system layout worksheets. We recommend that you use these sheets to plan your system before programming is performed. If you need further information about specific programming options, see the *VISTA-32FB/VISTA-128FB Installation and Setup Guide*.

Make sure that one two-line alpha keypad is connected to the control and is set to device address "00."

### Single-Partition System

The system default is for a single-partition system. Use the VISTA-32FB/VISTA-128FB SINGLE PARTITION PROGRAMMING FORM when programming for single-partition usage. Follow the steps outlined in RECOMMENDED PROGRAMMING PROCEDURE of this document for proper programming procedure.

### Multiple-Partition System

You must enter the number of partitions you are using in data field 2\*00 to set the system for multiple partitions. Use the VISTA-32FB/VISTA-128FB SINGLE PARTITION and the PARTITION-SPECIFIC PROGRAM FORMS when programming the system for multiple partitions. Follow the steps outlined in RECOMMENDED PROGRAMMING PROCEDURE of this document for proper programming procedure.

### SUMMARY OF PROGRAMMING COMMANDS

- **To enter program mode**, enter installer code + [8] + [0] + [0] + [0]. For the VISTA-32FB installer code + [8] + [0] + [0].
- **To set standard defaults**, press \*97
- **To change to next page of program fields**, press \*94
- **To return to previous set of fields**, press \*99
- **To erase account and phone number field entries**, press [\*] + field number + [\*]
- **To assign zone descriptors**, press #93 + follow menu prompts
- **To add custom words**, press #93 + follow menu prompts
- **To enter Installer's Message**, press #93 + follow menu prompts
- **To exit program mode**, enter \*99 OR \*98: \*99 allows re-access to programming mode by installer code. \*98 prevents re-access to programming mode by installer code.

Standard default (\*97) values are shown in brackets [ ], otherwise default = 0.

## Recommended Programming Procedure

---

The following is a step-by-step procedure recommended for programming your system.

- 1. Set the keypads (and other peripheral devices) to the appropriate addresses.**
- 2. Set factory defaults by pressing \*97.**

This will automatically enable keypad addresses 00-01, so be sure at least one keypad is set to one of these addresses.
- 3. Program system-wide (global) data fields.**

Using the programming form as a guide, enter program mode and program all system-wide programming fields. These options affect the entire system, regardless of partitions. They include control options, downloader and dialer options, RF options, event logging options, etc. Refer to the *Program Field Index* for a listing of the program fields and their function.

**Note that field 2\*00 (number of partitions) must be programmed before continuing.**
- 4. Program partition-specific fields.**

When the system-wide fields have been programmed, program all partition-specific programming fields by first pressing \*91 to select a partition (while still in data field program mode). Then enter the first partition-specific field number \*09. When you are finished, the next partition-specific field is automatically displayed. Partition-specific fields can have different values for each partition. To program the fields for the next partition, press \*91, enter the desired partition number, then enter field \*09. Refer to the *MECHANICS OF PROGRAMMING* section in the *VISTA-32FB/VISTA-128FB Installation and Setup Guide* for detailed instructions.
- 5. Use #93 Menu Mode for device programming.**

Refer to *Device Programming* in this guide to assign keypad ID numbers and default partitions for each keypad, and to selectively suppress certain keypad sounding options. Also use this mode to assign RF receivers, relay modules, the VIP module, the ECP Long Range Radio, and the VISTA Gateway Module.
- 6. Use #93 Menu Mode for zone programming.**

Refer to *Zone Programming* in this guide to program zone response types, assign right loop zones and wireless zones, assign zones to partitions, and to program alarm report codes.
- 7. Use #93 Menu Mode for programming outputs.**

Refer to *Output Programming* in this guide to program desired output operation.
- 8. Program Communication options.**

Refer to *System Communication* section in the *VISTA-32FB/VISTA-128FB Installation and Setup Guide* for detailed instructions. Then use #93 menu mode to program report codes.
- 9. Use #93 Menu Mode for programming alpha descriptors.**

Refer to *Alpha Programming* in this guide to enter zone and partition descriptors and a custom installer's message.
- 10. Use #93 Menu Mode for relay voice descriptors and custom word substitutes.**

Refer to *Relay Voice Descriptors* in this guide for further instructions for programming relay descriptors to be announced by the VIP module, as well as the *Custom Index* section for custom word substitutes.
- 11. Use #80 Mode for programming schedules.**

Refer to the *Scheduling Menu Prompts* in the *VISTA-32FB/VISTA-128FB Installation and Setup Guide* to program open/close schedules, temporary and holiday schedules, limitation of access schedules, and time-driven events.
- 12. Define user access codes.**

Refer to *User Access Codes* in the *VISTA-32FB/VISTA-128FB Installation and Setup Guide* to program authority level, O/C reporting option, partition assignments, and wireless key assignments for each user.
- 13. Exit Programming Mode.**

Exit programming mode by pressing either \*98 or \*99. Additional entries of \*99 are required if the exit is being done from fields 1\*00 and above.

To prevent re-access to programming mode using the Installer's code, use \*98. The only way to re-access programming mode is by depressing both the [\*] and [#] keys at the same time within 30 seconds of power-up.

Exiting by using \*99 always allows reentry into programming mode using the Installer code. Either way of exiting allows access via downloading. Note that if local programming lockout is set via downloading, programming mode cannot be entered at the keypad.

## Program Field Index

On the following pages, the programming fields have been arranged in numerical order. Use this index to cross-reference the fields on the programming form.

Field	Group	Field	Group	Field	Group
*00	System-Wide	*65	Communications	1*60	System-Wide
*08	System-Wide	*66	Communications	1*70	System-Wide
*09	Partition-Specific	*67	Communications	1*71	System-Wide
*10	Partition-Specific	*68	Communications	1*72	System-Wide
*11	Partition-Specific	*69	Communications	1*73	System-Wide
*12	Partition-Specific	*70	Communications	1*74	System-Wide
*13	Partition-Specific	*71	Communications	1*75	System-Wide
*15	System-Wide	*72	Communications	1*76	Partition-Specific
*16	Partition-Specific	*73	Communications	1*77	System-Wide
*17	System-Wide	*74	Communications	2*00	System-Wide
*19	System-Wide	*75	Communications	2*01	System-Wide
*20	System-Wide	*76	Communications	2*02	System-Wide
*22	Partition-Specific	*79	Communications	2*05	Partition-Specific
*23	Partition-Specific	*80	Communications	2*06	Partition-Specific
*24	System-Wide	*83	Communications	2*07	Partition-Specific
*25	System-Wide	*84	Partition-Specific	2*08	Partition-Specific
*26	Communications	*85	Partition-Specific	2*09	Partition-Specific
*27	Communications	*87	Partition-Specific	2*10	Partition-Specific
*28	System-Wide	*88	Partition-Specific	2*11	System-Wide
*29	Partition-Specific	*89	Communications	2*18	Partition-Specific
*30	Communications	*90	Partition-Specific	2*19	Partitioning
*31	Communications	1*17	System-Wide	2*20	Partition-Specific
*32	Partition-Specific	1*18	Partition-Specific	2*21	System-Wide
*33	Communications	1*19	Partition-Specific	2*22	Partition-Specific
*34	Communications	1*20	System-Wide	2*23	Partition-Specific
*35	System-Wide	1*21	System-Wide	2*24	Partition-Specific
*36	System-Wide	1*22	System-Wide	3*00	System-Wide
*37	System-Wide	1*23	System-Wide	3*01	System-Wide
*38	Partition-Specific	1*24	System-Wide	3*12	System-Wide
*39	Partition-Specific	1*25	System-Wide	3*13	System-Wide
*40	Communications	1*26	Partition-Specific	3*14	System-Wide
*41	System-Wide	1*28	System-Wide	3*15	System-Wide
*42	Communications	1*29	System-Wide	3*16	System-Wide
*43	Communications	1*30	System-Wide	3*17	System-Wide
*44	Communications	1*31	System-Wide	3*18	System-Wide
*45	Communications	1*33	Communications	3*19	System-Wide
*46	Communications	1*34	Communications	3*20	System-Wide
*47	Communications	1*35	Communications	3*21	System-Wide
*48	Communications	1*42	Communications	3*30	System-Wide
*49	Communications	1*43	Partition-Specific	3*31	System-Wide
*50	Communications	1*44	System-Wide	3*50	System-Wide
*51	Communications	1*45	Partition-Specific	3*55	System-Wide
*52	Communications	1*47	Partition-Specific	3*56	System-Wide
*53	Communications	1*48	System-Wide	3*57	Partition-Specific
*54	System-Wide	1*49	System-Wide	3*59	Partition-Specific
*56	Communications	1*52	Partition-Specific	3*60	Partition-Specific
*57	Communications	1*53	System-Wide	3*61	System-Wide
*58	Communications	1*56	System-Wide	3*82	System-Wide
*59	Communications	1*57	System-Wide	3*85	System-Wide
*64	Communications	1*58	System-Wide		

# VISTA-32FB/VISTA-128FB Programming Form

Some fields are programmed for each partition (shown as shaded fields). If you are programming a multiple-partition system, see the *Partition-Specific Fields* section for programming these fields. Standard default (\*97) values are shown in brackets [ ]; otherwise, default = 0.

**\*00** INSTALLER CODE   
Enter 4 digits, 0-9 [5140]

**\*08** TEMPORAL SIREN PULSE [0]   
1=enable; 0=disable

**\*09** ENTRY DELAY #1 [02]   
00, 02-15 times 15 seconds  
Maximum "03" for UL Commercial Burglary installations.

**\*10** EXIT DELAY #1 [03]   
00, 03-15 times 15 seconds  
Maximum "04" for UL Commercial Burglary installations.

**\*11** ENTRY DELAY #2 [06]   
00, 02-15 times 15 seconds (must be longer than Entry Delay #1). Maximum "03" for UL Commercial Burglary installations.

**\*12** EXIT DELAY #2 [08]   
00, 03-15 times 15 seconds (must be longer than Exit Delay #1). Maximum "04" for UL Commercial Burglary installations.

**\*13** BELL 1 TIMEOUT [04]   
01-15 times 2 minutes. Minimum 16 minutes for UL Commercial Burglary installations and minimum 6 minutes for UL Commercial Fire installations

**\*15** KEYSWITCH ASSIGNMENT [0]   
Enter partition in which keyswitch used, 1-8; 9=silences Notification Appliance Circuit if fire present; 0=disable

**\*16** BELL 1 CONFIRMATION OF ARMING DING [0]   
1=enable; 0=disable.  
Must be "1" for UL Commercial Burglary installations.

**\*17** AC LOSS KEYPAD SOUNDING [0]   
1=enable; 0=disable

**\*19** RANDOMIZE AC LOSS REPORT [2]   
1=10-40 min; 2= 6-12 hours; 0=normal report (about 2 min. after AC loss).  
Must be "2" for central and remote fire alarm systems.

**\*20** VIP MODULE PHONE CODE   
Enter 01 - 09 for the first digit; enter [00], [11]  
11 for "\*" or 12 for "#" for the second digit.  
Must be set to "0" for UL Commercial Burglary and UL Commercial Fire installations.

**\*22** KEYPAD PANIC ENABLES [001]   
1=enable; 0=disable 995 996 999

**\*23** MULTIPLE ALARMS [1]   
1=enable; 0=disable  
Must be "1" for UL Commercial Burglary installations

**\*24** IGNORE EXPANSION ZONE TAMPER [0]   
1=Ignore; 0=Enable tamper for RF and RPMs.  
Must be "0" for UL Commercial Burglary and Commercial Fire installations if using these devices.

**\*25** BURG.TRIGGER FOR RESPONSE TYPE 8 [1]   
1=enable; 0=disable

**\*26** INTELLIGENT TEST REPORTING [0]   
1=enable (no report sent if any other report was recently sent); 0=disable (send report at programmed interval, field \*27)  
Must be "0" for UL Commercial Burglary and Commercial Fire installations.

**\*27** TEST REPORT INTERVAL [024]   
Enter interval in hours, 001-999; 000=no report;  
Max. 024 for UL Commercial Burglary and Commercial Fire installations.

**\*28** POWER UP IN PREVIOUS STATE [1]   
1=enable; 0=disable  
Must be "0" for UL Commercial Burglary and Commercial Fire installations.

**\*29** QUICK ARM [1]   
1=enable; 0=disable

**\*30** MAIN DIALER TOUCHTONE OR ROTARY [0]   
1=TouchTone; 0=rotary

**\*31** PABX ACCESS CODE   
00-09; B-F (11-15)

**\*32** PRIM. SUBS. ACCT #   
Enter 00-09; B-F (11-15) [15 15 15 15]

**\*33** PRIMARY PHONE NUMBER  
  
  
Enter 0-9 for each digit. Enter #11 for \*, #12 for #, #13 for 2 second pause

**\*34** SECONDARY PHONE NUMBER  
  
  
Enter 0-9 for each digit. Enter #11 for \*, #12 for #, #13 for 2 second pause

**\*35** DOWNLOAD PHONE NO.  
  
  
Enter 0-9 for each digit. Enter #11 for \*, #12 for #, #13 for 2 second pause

**\*36** DOWNLOAD ID NO.  
  
Enter 00-09; A-F (10-15) [15 15 15 15 15 15 15 15]



**\*72 PAGER ID # FOR OPENS/CLOSES**

Enter up to 10 digits for the pager id #

**\*73 PAGER PHONE # FOR SYSTEM**

Enter 0-9 for each digit. Enter #11 for \*, #12 for #, #13 for 2 second pause

**\*74 PAGER ID # FOR SYSTEM**

Enter up to 10 digits for the pager id #

**\*75 PAGER PHONE # FOR TEST**

Enter 0-9 for each digit. Enter #11 for \*, #12 for #, #13 for 2 second pause

**\*76 PAGER ID # FOR TEST**

Enter up to 10 digits for the pager id #

**ZONE TYPE RESTORE ENABLES**

**\*79 FOR ZONE TYPES 1-8**

1 2 3 4 5 6 7 8  
 1=enable; [0=disable]

**\*80 FOR TYPES 9 and 10**

9 10  
 1=enable; [0=disable]

**\*83 FIRST TEST REPORT TIME**

[Day 00; hour 12; min 00]. Days 01-07, Hours 00-23, Min 00-59; 00 in all boxes = instant (Day 01= Monday)

**\*84 SWINGER SUPPRESSION** [03]

01-15 alarms  
 Must be "00" (disabled) for UL Commercial Burglary and Commercial Fire installations.

**\*85 ENABLE DIALER REPORTS FOR PANICS & DURESS**

1=enable; [0=disable] 995 996 999 Duress

**\*87 ENTRY WARNING** [1]

1=continuous; 0=3 beeps

**\*88 BURG. ALARM COMM. DELAY** [0]

1=16 seconds; 0=no delay  
 Must be "0" for UL Commercial Burglary installations.

**\*89 RESTORE REPORT TIMING** [0]

0=Instant; 1=After bell timeout if zone is restored; 2=when system is disarmed. Must be "0" for UL Commercial Burglary and Commercial Fire installations.

**\*90 SEC. SUBS. ACCT #**

Enter 00-09; B-F (11-15) [15 15 15 15]

**1\*17 LOBBY PARTITION** [0]

Enter the "common lobby" partition (1-8)

**1\*18 AFFECTS LOBBY** [0]

Enter 1 if this partition affects the common lobby; Enter 0 if it does not.  
 Must be "0" for UL Commercial Burglary and Commercial Fire installations.

**1\*19 ARMS LOBBY** [0]

Enter 1 if arming this partition attempts to arm lobby; Enter 0 if it does not.  
 Must be "0" for UL Commercial Burglary and Commercial Fire installations.

**1\*20 EXIT ERROR LOGIC ENABLE** [0]

0=No; 1=Bypass E/E and Interior zones faulted after exit delay.  
 Must be "0" for UL Commercial Burglary and Commercial Fire installations.

**1\*21 EXIT DELAY RESET** [0]

0=No; 1=Resets Exit Delay to programmed value after zone is closed and then faulted prior to end of exit delay.  
 Must be "0" for UL Commercial Burglary and Commercial Fire installations.

FIELDS 1\*22-1\*25: Allow four sets of two zones each to be linked so that both must fault within a five minute period to cause an alarm. Default for these fields = [000], [000].

**1\*22 CROSS-ZONING PAIR ONE**

**1\*23 CROSS-ZONING PAIR TWO**

**1\*24 CROSS-ZONING PAIR THREE**

**1\*25 CROSS-ZONING PAIR FOUR**

**1\*26 PANIC BUTTON OR SPEEDKEY**  
 [00, 00, 00, 00]

**A B C D**

Enter speedkey macro # (01-35) to use keys A-C for macro. Otherwise enter 00 to use as panic. For D key, enter macro # or 00 to select macro when key is pressed.  
**33** = fire sounder silence.  
**34** = display next fire alarm.  
**35** = display previous fire alarm.  
**NOTE:** For selection 33 enable field 3\*15 for pulsing. For selections 34 and 35 set field 3\*01.

**Fields 1\*28 - 1\*31 are not applicable for UL Commercial Burglary and Commercial Fire installations.**

**1\*28 RF TX LOW BATTERY SOUND** [0]

1=immediate; 0=when disarmed

**1\*29 RF TX LOW BATTERY REPORTING** [0]

1=enable; 0=disable

**1\*30 RF RCVR CHECK-IN INTERVAL** [02]

02-15 times 2 hours; 00 disables supervision

**1\*31 RF XMITTER CHECK-IN INTERVAL** [02]

02-15 times 2 hours; 00 disables transmitter supervision

**1\*33 TOUCHTONE W/ROTARY BACKUP** [0]

1=enable; 0=disable

**1\*34 COMM. SPLIT REPORTING** [0]

0=no; 1=alarms and alarm restores primary, others secondary; 2=open/close, test secondary, others primary; 3=fire alarms & troubles primary, all others to secondary. See \*51 for comments if using with dual reporting.

**1\*35 ACCESS CONTROL DIALER ENABLES**

[0 0 0 0 0 0]        
Trace Trbl Byp Not Used Syst Alm  
1=enable; 0=disable

**1\*42 CALL WAITING DEFEAT** [0]

1=enable; 0=disable

**1\*43 PERM. KEYPAD BACKLIGHT** [0]

1=enable; 0=disable, when disabled, display lights when any key is pressed, and turns off after period of keypad inactivity.

**1\*44 WIRELESS KEYPAD TAMPER** [0]

DETECTION  
1=enable; 0=disable.  
Must be "0" for UL Commercial Burglary and Commercial Fire installations.

**1\*45 EXIT DELAY SOUNDING** [0]

1=enable; 0=disable. Produces quick beeping during exit delay if enabled.

**1\*47 CHIME ON BELL 1** [0]

1=enable; 0=disable

**1\*48 WIRELESS KEYPAD ASSIGNMENT** [0]

0=disable; enter partition in which RF keypad used, 1-8. Must be "0" for UL Commercial Burglary and Commercial Fire installations.

**1\*49 SUPPRESS TX SUPERVISION SOUND** [1]

1=disable; 0=enable.  
Must be "0" for UL Commercial Burglary and Commercial Fire installations.

**1\*52 SEND CANCEL IF ALARM + OFF** [0]

1=no restriction; 0=within bell timeout period only.

**1\*53 DOWNLOAD CALLBACK** [0]

1=callback not required; 0=callback required.  
Must be "0" for UL Commercial Burglary and Commercial Fire installations.

**1\*56 AC 50/60 Hz CLOCK SPEED** [0]

1=50 Hz; 0=60 Hz.

**1\*57 5800 RF BUTTON GLOBAL ARM** [0]

1=enable; 0=disable

**1\*58 5800 RF BUTTON FORCE ARM** [0]

1=enable. If a zone is faulted after pressing button, console will beep once. User should press button again within 4 sec. to force bypass those zones. 0=disable.  
Must be "0" for UL Commercial Burglary and Commercial Fire installations.

**1\*60 ZONE 5 AUDIO ALARM VERIFICATION** [0]

Enter 1 if 2-way audio (AAV) is being used; Enter 0 if it is not. Must be "0" for UL Commercial Burglary and Commercial Fire installations.

**1\*70 EVENT LOG TYPES**

[1 0 0 0 1 0]        
Alarm Chk Byp O/C Syst Test  
1=enable; 0=disable

**1\*71 12/24 HOUR TIME STAMP FORMAT** [0]

0=12 hour; 1=24 hour

**1\*72 EVENT LOG PRINTER ON-LINE** [0]

0=disable; 1=enable

**1\*73 PRINTER BAUD RATE** [0]

1=300; 0=1200

**1\*74 RELAY TIMEOUT XXX MINUTES** [000]

Enter relay timeout, **0-127** in multiples of 2 minutes, desired for #80 Menu Mode time-driven event relay command numbers "04/09" and #93 Menu Mode Output Programming output command "56."

**1\*75 RELAY TIMEOUT YYY SECONDS** [000]

Enter relay timeout, **0-127** seconds, desired for #80 Menu Mode time driven event relay command numbers "05/10" and #93 Menu Mode Output Programming command "57."

**1\*76 ACCESS CONTROL RELAY** [00]

Relay will be pulsed for 2 seconds whenever code + [0] is pressed. Enter 00-96; 00=none.  
Must be "00" for UL Commercial Burglary and Commercial Fire installations.

**1\*77 LOG FIRST MAINTENANCE SIGNAL** [0]

0=No Log; 1=Log first maintenance signal from each smoke detector.

**3rd Page Programming Fields (press \*94)**

**2\*00 NUMBER OF PARTITIONS** [1]

Enter 1-8

**2\*01 DAYLIGHT SAVING TIME** [04, 10]

START/END MONTH Start End  
00-12; if no daylight saving time, enter 00,00

**2\*02 DAYLIGHT SAVING TIME** [1, 5]

START/END WEEKEND Start | End  
Enter 1-7. 1=first; 2=second; 3=third; 4=fourth; 5=last; 6=next to last; 7=3rd from last [1,5]

**2\*05 AUTO-ARM DELAY** [15]

Enter the time between the end of the arming window and the start of auto-arming warning period, in values of 1-14 times 4 minutes 00=instant; [15=no auto arm at all]. When this delay expires, the Auto-Arm Warning Period begins.

**2\*06 AUTO-ARM WARNING PERIOD** [15]

This is the time during which the user is warned to exit the premises prior to the auto-arming of the system (beeps every 15 seconds; "ALERT" displayed). Enter 01-15 minutes. 00=instant at end of arming delay.

**2\*07 AUTO-DISARM DELAY** [15]

This is the time between the end of the disarming window and the start of auto-disarming. Enter 01-14 times 4 minutes; 00=instant at end of window; 15=no auto-disarm.

**2\*08 ENABLE FORCE ARM FOR AUTO-ARM** [0]

0=disable; 1=enable





**3\*85** ENABLE FIRE & SYSTEM ZONE BYPASS [1]

0=disable; 1=only installer can bypass;  
2=only installer & master can bypass.  
Applies to fire zone types 9, 16, 17, & 18 and system zones  
970-977 and to partition 1 only.

## Partition-Specific Fields

(Duplicate this page for each partition in the installation.)

To program these fields,

1. Press \*91 to select a partition.
2. Enter a partition-specific field number (ex. \*09).
3. Make the required entry.
4. Repeat steps 1-3 for each partition in the system.

### PARTITION # \_\_\_\_\_ PROGRAM FIELDS

#### 1st Page Fields

**\*09** ENTRY DELAY #1 [02]  |   
00, 02-15 times 15 seconds  
Maximum "03" for UL Commercial Burglary installations.

**\*10** EXIT DELAY #1 [04]  |   
00, 03-15 times 15 seconds  
Maximum "04" for UL Commercial Burglary installations.

**\*11** ENTRY DELAY #2 [06]  |   
00, 02-15 times 15 seconds (must be longer than Entry Delay #1). Maximum "03" for UL Commercial Burglary installations.

**\*12** EXIT DELAY #2 [08]  |   
00, 03-15 times 15 seconds (must be longer than Exit Delay #1). Maximum "04" for UL Commercial Burglary installations.

**\*13** BELL 1 SOUNDER DURATION [04]  |   
01-15 times 2 minutes. Minimum 16 minutes for UL Commercial Burglary installations and minimum 6 minutes for UL Commercial Fire installations

**\*16** BELL 1 CONFIRMATION OF ARMING DING [0]   
1=enable; 0=disable.  
Must be "1" for UL Commercial Burglary installations.

**\*22** KEYPAD PANIC ENABLES [001]     
1=enable; 0=disable  
995 996 999

**\*23** MULTIPLE ALARMS [1]   
1=enable; 0=disable.  
Must be 1 for UL Commercial Burglary installations.

**\*29** QUICK ARM [1]   
1=enable; 0=disable

**\*32** PRIM. SUBS. ACCT #  |  |  |   
Enter 00-09; B-F (11-15) [15 15 15 15]

**\*38** PREVENT ZONE XXX BYPASS [000]  |   
001-128; 000 if all zones can be bypassed

**\*39** ENABLE OPEN/CLOSE REPORT [1]   
FOR INSTALLER CODE  
1=enable; 0=disable

**\*84** SWINGER SUPPRESSION [03]  |   
01-15 alarms;  
Must be "00" (disabled) for UL Commercial Burglary and Commercial Fire installations.

**\*85** ENABLE DIALER REPORTS FOR PANICS & DURESS  
     
1=enable; [0=disable]  
995 996 999 Duress

**\*87** ENTRY WARNING [1]   
1=continuous; 0=3 beeps

**\*88** BURG. ALARM COMM. DELAY [0]   
1=16 seconds; 0=no delay.  
Must be "0" for UL Commercial Burglary installations.

**\*90** SEC. SUBS. ACCT #  |  |  |   
Enter 00-09; B-F (11-15) [15 15 15 15]

#### 2nd Page Fields

**1\*18** AFFECTS LOBBY [0]   
Enter 1 if this partition affects the common lobby; enter 0 if it does not.  
Must be "0" for UL Commercial Burglary and Commercial Fire installations.

**1\*19** ARMS LOBBY [0]   
Enter 1 if arming this partition attempts to arm lobby; enter 0 if it does not  
Must be "0" for UL Commercial Burglary and Commercial Fire installations.

**1\*26** PANIC BUTTON OR SPEEDKEY  
[00, 00, 00, 00]  |  |  |   
A B C D

Enter speedkey macro # (01-35) to use keys A-C for macro. Otherwise enter 00 to use as panic. For D key, enter macro # or 00 to select macro when key is pressed.

**1\*43** PERM. KEYPAD BACKLIGHT [0]   
1=enable; 0=disable When disabled, display lights when any key is pressed, and turns off after period of keypad inactivity.

**1\*45** EXIT DELAY SOUNDING [0]   
1=enable; 0=disable Produces quick beeping during exit delay if enabled.

- 1\*47** CHIME ON BELL 1 [0]   
1=enable; 0=disable
- 1\*52** SEND CANCEL IF ALARM + OFF [0]   
1=no restriction; 0=within Bell Timeout period only.
- 1\*76** ACCESS CONTROL RELAY FOR PART.[00]  |   
Relay will be pulsed for 2 seconds whenever code + [0] is pressed. Enter 00-96; 00=none.  
Must be "00" for UL Commercial Burglary and Commercial Fire installations.

**3rd Page Fields**

- 2\*05** AUTO-ARM DELAY [15]  |   
Enter the time between the end of the arming window and the start of auto-arming warning period, in values of 1-14 times 4 minutes 00=instant; [15=no auto arm at all]. When this delay expires, the Auto-Arm Warning Period begins.
- 2\*06** AUTO-ARM WARNING PERIOD [15]  |   
This is the time during which the user is warned to exit the premises prior to the auto-arming of the system (beeps every 15 seconds; "ALERT" displayed). Enter 01-15 minutes. 00=instant at end of arming delay.
- 2\*07** AUTO-DISARM DELAY [15]  |   
This is the time between the end of the disarming window and the start of auto-disarming. Enter 01-14 times 4 minutes; 00=instant at end of window; 15=no auto-disarm
- 2\*08** ENABLE FORCE ARM FOR AUTO-ARM [0]   
0=disable; 1=enable
- 2\*09** OPEN/CLOSE REPORTS BY EXCEPTION [0]   
1=enable; 0=disable If enabled, only openings and closings occurring outside the scheduled opening/closing windows will trigger dialer reports. Opening reports will also be suppressed during the closing window, in order to prevent false reports when the user arms the system and then re-enters the premises to retrieve a forgotten item.
- 2\*10** ALLOW DISARMING ONLY DURING [0]   
ARMING/DISARMING WINDOWS  
See system-wide field 2\*11 if enabling field 2\*10. This feature adds high security to the installation.  
0=disable; 1=enable
- 2\*18** ENABLE GOTO FOR THIS PARTITION [0]   
1=Allow log-on from other partitions; 0=disable
- 2\*20** ENABLE J2 TRIGGERS BY PARTITION [1]   
0=disable for displayed partition; 1=enable for displayed partition

- 2\*22** DISPLAY FIRE ALARMS OF [0]   
OTHER PARTITIONS  
0=disable; 1=enable
- 2\*23** DISPLAY BURG/PANIC ALARMS OF [0]   
OTHER PARTITIONS  
0=disable; 1=enable
- 2\*24** DISPLAY TROUBLES OF OTHER [0]   
PARTITIONS  
0=disable; 1=enable

**4th Page Fields**

- 3\*57** BELL 2 & AUX RELAY CONFIRM [0,0]    
ARMING DING Bell 2 Aux  
0=disable; 1=enable. Must be "1" for UL Commercial Burglary installations.
- 3\*59** ENABLE BELL 2 & AUX RELAY [0,0]    
CHIME ANNUNCIATION Bell 2 Aux  
0=disable; 1=enable
- 3\*60** BELL 2 & AUX RELAY TIMEOUT  |   
Bell 2 Aux  
Enter 00-15 times 2 minutes; 00=no timeout [00,00]  
Minimum 16 minutes for UL Commercial Burglary installations.

**SUMMARY OF PROGRAMMING COMMANDS**

- **To enter program mode**, enter installer code + [8] + [0] + [0] + [0]
- **To set standard defaults**, press \*97
- **To change to next page of program fields**, press \*94
- **To return to previous set of fields**, press \*99
- **To erase account and phone number field entries**, press [\*] + field number + [\*]
- **To assign zone descriptors**, press #93 + follow menu prompts
- **To add custom words**, press #93 + follow menu prompts
- **To enter Installer's Message**, press #93 + follow menu prompts
- **To exit program mode**, enter \*99 OR \*98: \*99 allows re-access to programming mode by installer code. \*98 prevents re-access to programming mode by installer code.

## Programming With #93 Menu Mode

**NOTE: The following field should be preset before beginning: 2\*00 Number of Partitions. In addition, receivers should be programmed via Device programming.**

After programming all system related programming fields in the usual way, press #93 while still in programming mode to display the first choice of the menu driven programming functions. Press 0 (NO) or 1 (YES) in response to the displayed menu selection. Pressing 0 will display the next choice in sequence.

**NOTE: All references in this manual for number of zones, user codes, partitions, VistaKey modules, the master partition and the event log capacity, use the VISTA-128FB's features. See page 2 for the table listing the differences between the VISTA-32FB and the VISTA-128FB control panels. All other features are identical for both panels.**

# UL

For UL installations, verify that the audio alarm verification feature is disabled.

### #93 MENU MODE KEY COMMANDS

The following is a list of commands used while in the menu mode.

#93	Enters Menu mode
[*]	Serves as ENTER key. Press to have keypad accept entry.
[#]	Backs up to previous screen.
0	Press to answer NO
1	Press to answer YES
001-009	All data entries are either 2-digit or 3-digit entries.
000	Exits menu mode, back into field programming mode, when entered at the first question for each category.

Menu selections are as follows:

PROMPT	EXPLANATION
ZONE PROG? 1 = YES 0 = NO 0	For programming the following: <ul style="list-style-type: none"> <li>• Zone Number</li> <li>• Zone Response Type</li> <li>• Partition Number for Zone</li> <li>• Dialer report code for zone</li> <li>• Input Device Type for zone (whether RF, polling loop, etc.)</li> <li>• Enrolling serial numbers of 5800 Series transmitters &amp; serial polling loop devices into the system.</li> <li>• Zone Attributes (e.g., Arm w/Fault, Silent, etc.)</li> </ul>
EXPERT MODE? 1 = YES 0 = NO 0	Same as Zone Programming except: <ul style="list-style-type: none"> <li>• Done with a minimum number of keystrokes.</li> <li>• Can program wireless keys using pre-defined templates.</li> </ul> <b>NOTE:</b> Be aware some of the zone attributes cannot be programmed in the Expert Mode. These can only be done in Zone Programming.
REPORT CODE PROG? 1 = YES 0 = NO 0	For programming the following: <ul style="list-style-type: none"> <li>• Alarm report codes for zones</li> <li>• Restore &amp; supervisory codes</li> <li>• All other system report codes</li> </ul>
ALPHA PROG? 1 = YES 0 = NO 0	For entering alpha descriptors for the following: <ul style="list-style-type: none"> <li>• Zone Descriptors</li> <li>• Installer's Message</li> <li>• Custom Words</li> <li>• Partition Descriptors</li> <li>• Relay Descriptors</li> </ul>
DEVICE PROG? 1 = YES 0 = NO 0	For defining the following device characteristics for addressable devices, including keypads, RF receivers (5881), output relay modules (4204/4204CF), FSA modules, 4285/4286 VIP Module, ECP Long Range Radio (7820), Panel Link module, and VISTA gateway module: <ul style="list-style-type: none"> <li>• Device Address</li> <li>• Device Type</li> <li>• Keypad Options (incl. partition assignment)</li> <li>• RF House ID</li> <li>• LRR Options (incl. programming radio)</li> </ul>

PROMPT	EXPLANATION
OUTPUT PGM? 1 = YES 0 = NO 0	For defining output relay functions.
RLY VOICE DESCR? 1 = YES 0 = NO 0	For entering voice descriptors for relays to be used with the 4285/4286 VIP Module.
CUSTOM INDEX ? 1 = YES 0 = NO 0	For creating custom word substitutes for VIP Module annunciation.
ACCESS POINT PGM 1 = YES 0 = NO 0	For defining the parameters for each of the VistaKey access points, including which group(s) have access through an access point (door). See the <i>VistaKey-SK Installation and Setup Guide</i> for the detailed programming instructions.
ACCESS GRP PGM 1 = YES 0 = NO 0	For defining the capabilities (privileges) for each group of users. See the <i>VistaKey-SK Installation and Setup Guide</i> for the detailed programming instructions.
EVENT/ACTION PGM 1 = YES 0 = NO 0	For defining events and time windows for an access group. See the <i>VistaKey-SK Installation and Setup Guide</i> for the detailed programming instructions.

## Zone Programming




If using 5800 Series transmitters, do not the install batteries until you are ready to enroll them. After enrolling the transmitter, the battery need not be removed. This is to prevent enrolling the wrong serial number.

PROMPT	EXPLANATION
ZONE PROG? 1 = YES 0 = NO 0	Press 1 to enter ZONE PROGRAMMING mode. The following screens appear. Press [*] to display the next screen. Press # to display a previous screen.
SET TO CONFIRM? 1 = YES 0 = NO 0	This prompt appears once upon entering Zone Programming Mode. If "Yes," Confirmation prompts will be displayed after the device's Serial and Loop numbers have been entered later.
ENTER ZONE NO. 000 = QUIT 010 Zone 010 entered ↑	Enter the 3-digit zone number to be programmed, as follows: Protection Zones = 001–128 Relay Zones = 601–632 ECP Device Supervisory Zones = 800–830 System Supervisory Zones = 988, 990, 992 (duress), 997 Keypad Panic Zones = 995, 996, 999 Press [*] to continue.
010 ZT P RC In L 00 1 10 00 1	This display appears, showing a summary of the zone's current programming. <b>ZT</b> = Zone Type, <b>P</b> = Partition, <b>RC</b> = Report Code, <b>In</b> = the input type of device, and <b>L</b> = the device's loop number to which the sensor is connected. Some devices can support more than one zone by means of individual loops (for example, 5801, 5804, 5816, 5817, etc.). If the zone is not programmed, the display appears as shown here. If you are checking a zone's programming, and it is programmed satisfactorily, press [#] to back up one step and enter another zone number, if desired. Press [*] to continue.

PROMPT	EXPLANATION																						
<p>010 ZONE TYPE PERIMETER 03</p> <p>Zone number 010 and Zone Type 03 entry shown † These are special zone types used with 5800 Series Wireless Pushbutton Units that result in arming the system in the STAY or AWAY mode, or disarming the system, depending on the selection made.</p>	<p>Each zone must be assigned a zone type, which defines the way in which the system responds to faults in that zone. Refer to the <i>Zone Type Definitions</i> section in the <i>VISTA-32FB/VISTA-128FB Installation and Setup Guide</i> for detailed definitions of each zone type. Enter the zone type desired (or change it, if necessary). Available zone types are listed below.</p> <table border="0"> <tr> <td>00 = Assign for Unused Zones</td> <td>16 = Fire With Verification</td> </tr> <tr> <td>01 = Entry/Exit #1, Burglary</td> <td>17 = Waterflow</td> </tr> <tr> <td>02 = Entry/Exit #2, Burglary</td> <td>18 = Fire Supervisory</td> </tr> <tr> <td>03 = Perimeter, Burglary</td> <td>19 = 24-Hour Trouble</td> </tr> <tr> <td>04 = Interior Follower, Burglary</td> <td>20 = Arm-STAY†</td> </tr> <tr> <td>05 = Trouble Day/Alarm Night</td> <td>21 = Arm AWAY†</td> </tr> <tr> <td>06 = 24 Hr. Silent Alarm</td> <td>22 = Disarm†</td> </tr> <tr> <td>07 = 24 Hr. Audible Alarm</td> <td>23 = No Alarm Response (e.g., relay activation)</td> </tr> <tr> <td>08 = 24 Hr. Auxiliary</td> <td>27 = Access Point</td> </tr> <tr> <td>09 = Fire Without Verification</td> <td>28 = MLB Supervision (if VGM installed)</td> </tr> <tr> <td>10 = Interior Delay, Burglary</td> <td>29 = Momentary Exit (used with VistaKey module)</td> </tr> </table> <p>Press [*] to continue.</p>	00 = Assign for Unused Zones	16 = Fire With Verification	01 = Entry/Exit #1, Burglary	17 = Waterflow	02 = Entry/Exit #2, Burglary	18 = Fire Supervisory	03 = Perimeter, Burglary	19 = 24-Hour Trouble	04 = Interior Follower, Burglary	20 = Arm-STAY†	05 = Trouble Day/Alarm Night	21 = Arm AWAY†	06 = 24 Hr. Silent Alarm	22 = Disarm†	07 = 24 Hr. Audible Alarm	23 = No Alarm Response (e.g., relay activation)	08 = 24 Hr. Auxiliary	27 = Access Point	09 = Fire Without Verification	28 = MLB Supervision (if VGM installed)	10 = Interior Delay, Burglary	29 = Momentary Exit (used with VistaKey module)
00 = Assign for Unused Zones	16 = Fire With Verification																						
01 = Entry/Exit #1, Burglary	17 = Waterflow																						
02 = Entry/Exit #2, Burglary	18 = Fire Supervisory																						
03 = Perimeter, Burglary	19 = 24-Hour Trouble																						
04 = Interior Follower, Burglary	20 = Arm-STAY†																						
05 = Trouble Day/Alarm Night	21 = Arm AWAY†																						
06 = 24 Hr. Silent Alarm	22 = Disarm†																						
07 = 24 Hr. Audible Alarm	23 = No Alarm Response (e.g., relay activation)																						
08 = 24 Hr. Auxiliary	27 = Access Point																						
09 = Fire Without Verification	28 = MLB Supervision (if VGM installed)																						
10 = Interior Delay, Burglary	29 = Momentary Exit (used with VistaKey module)																						
<p>010 Partition 1</p>	<p>Enter the partition number (1-8) you are assigning this zone to.</p> <p>Press [*] to continue.</p>																						
<p>010 REPORT CODE 1st 03 2nd 12 3C</p>	<p>Enter the report code. The report code consists of 2 hexadecimal digits, each in turn consisting of 2 numerical digits. For example, for a report code of "3C," enter 03 for "3" and 12 for "C."</p> <p>(Refer to the <i>System Communication</i> section in the <i>Installation and Setup Guide</i> for more information about report codes and reporting formats.)</p> <p>Press [*] to continue.</p>																						
<p>010 INPUT TYPE RF Xmitter 3</p> <p><b>Input types 4 &amp; 5 are valid for certain 5800 Series transmitters only (e.g., 5801, 5802, 5802CP &amp; 5803).</b></p> <p><b>If using input type 02 with a door/window type transmitter, only loop 1 may be used.</b></p> <p><b>Input type 10 is applicable only if PassPoint ACS is installed with the VISTA Gateway Module.</b></p> <p><b>If you selected response type 14, 28, or 29 the input type MUST be 00.</b></p>	<p>Enter the input device type as follows:</p> <table border="0"> <tr><td>00 = not used</td></tr> <tr><td>01 = hardwired</td></tr> <tr><td>03 = supervised RF transmitter (RF type)</td></tr> <tr><td>04 = unsupervised RF transmitter (UR type)</td></tr> <tr><td>05 = RF button-type transmitter (BR type)</td></tr> <tr><td>06 = serial number polling loop device (SL type)</td></tr> <tr><td>07 = DIP switch-type polling loop device</td></tr> <tr><td>08 = right loop of DIP switch type device</td></tr> <tr><td>09 = keypad input (code + #73)</td></tr> <tr><td>10 = PassPoint ACS input</td></tr> <tr><td>11 = VistaKey Door Status Monitor (DM)</td></tr> <tr><td>12 = VistaKey Request to Exit (RE)</td></tr> <tr><td>13 = VistaKey General Purpose (GP)</td></tr> </table> <p>Right loops refer to the use of the right loop on a 4190WH Zone Expander Module and/or 4278 PIR, which allow hardwired devices to be monitored by the polling loop.</p> <p>If you are programming hardwired or DIP switch polling loop devices, the summary display appears after completing this entry.</p> <p><b>NOTE:</b> Input types 11 (DM), 12 (RE), and 13 (GP) should only be used with VistaKey modules.</p> <p>Press [*] to continue.</p>	00 = not used	01 = hardwired	03 = supervised RF transmitter (RF type)	04 = unsupervised RF transmitter (UR type)	05 = RF button-type transmitter (BR type)	06 = serial number polling loop device (SL type)	07 = DIP switch-type polling loop device	08 = right loop of DIP switch type device	09 = keypad input (code + #73)	10 = PassPoint ACS input	11 = VistaKey Door Status Monitor (DM)	12 = VistaKey Request to Exit (RE)	13 = VistaKey General Purpose (GP)									
00 = not used																							
01 = hardwired																							
03 = supervised RF transmitter (RF type)																							
04 = unsupervised RF transmitter (UR type)																							
05 = RF button-type transmitter (BR type)																							
06 = serial number polling loop device (SL type)																							
07 = DIP switch-type polling loop device																							
08 = right loop of DIP switch type device																							
09 = keypad input (code + #73)																							
10 = PassPoint ACS input																							
11 = VistaKey Door Status Monitor (DM)																							
12 = VistaKey Request to Exit (RE)																							
13 = VistaKey General Purpose (GP)																							
<p>010 ACCESS POINT (00-31) 01</p>	<p><b>If response type 27, or 29 was selected</b>, this prompt will be displayed. Enter the access point to be controlled by the response type (00-31 for type 27; 01-15 for type 29).</p> <p><b>Note:</b> If you are using the VistaKey module, the access point must match the address that was set in the module.</p> <p>Press [*] to continue.</p>																						
<p>010 ENTRY OR EXIT 0</p>	<p><b>If response type 27 selected, or 29 was selected</b>, this prompt will be displayed. Enter whether the access point is an entry or exit point.</p> <p>0 = entry; 1 = exit</p> <p>Press [*] to continue.</p>																						

PROMPT	EXPLANATION
010 BELL/RLY SEL 0	<p>Each zone can be assigned to activate either one or both Notification Appliance Circuits and/or the system's auxiliary relay. Enter one of the following assignments:            0=none; 1=bell 1; 2=bell 2; 3=bell 1 &amp; bell 2; 4=aux relay; 5=bell 1 &amp; aux relay; 6=bell 2 &amp; aux relay; 7=bell 1 &amp; bell 2 &amp; aux relay.            Press [*] to continue.</p>
010 SMART CONTACT 1 = YES 0 = NO	<p>If input type 3 or 6 was selected, this prompt will be displayed. Enter <b>1</b> for devices that monitor maintenance signals (ex. 5192SD, 5192SDT, 5808) or can be used to limit fault signals in the disarmed state (ex. Quest 2260SN). Otherwise, enter <b>0</b>.  <b>NOTE:</b> The Smart Contact option must <b>ONLY</b> be selected for devices that support the feature, otherwise unpredictable results may occur.</p>
010 V-PLEX RELAY? 1 = YES 0 = NO	<p><b>If you selected input type 6</b>, this prompt displays. Enter <b>1</b> if using a 4101SN Relay Module for this zone. Otherwise enter <b>0</b>.            Press [*] to continue.</p>
010 CONS ECP ADDR (00-30) 01	<p><b>If you selected input type 09</b>, this prompt displays. Enter the ECP address of the keypad that is being used for entry/exit for this access point (<b>00-30</b>).            Press [*] to continue.</p>
010 ACS ZONE # (00-31) 01	<p><b>If you selected input type 10</b>, this prompt displays. Enter the PassPoint ACS zone ID that this VISTA zone maps to (<b>00-31</b>).            Press [*] to continue.</p>
010 INPUT S/N: XXXX-XXXX L 1	<p><b>For Serial Number entry and Loop Number entry, do one of the following:</b></p> <ol style="list-style-type: none"> <li>Transmit two open and close (or close and open) sequences. For a button-type transmitter, press and release the button, wait approximately 4 seconds, then press and release the button a second time. OR</li> <li>Manually enter the 7-digit serial number printed on a label on the transmitter, using the Alpha keypad. Then press the [*] key, the cursor moves to the "L" position. You can edit the loop number, if necessary. When the loop number is acceptable, press [*]. OR</li> <li>Press key [C] to copy the last serial number enrolled (used when programming a transmitter with several input loops). Press [*] to accept.</li> </ol>
010 INPUT S/N: A022-4064 L 1	<p>The cursor will then move to the Loop column (L) with the previously entered/transmitted serial number displayed.            Enter the loop number (refer to 5800 Series Transmitters Loop Designations below).  <b>To Delete an Existing Serial Number</b>, enter "0" in the loop number field. The serial number will change to "0"s.            If "0" was entered in error, simply re-enter the loop number or press [#], and the serial number will return to the display.            Press [*] to accept.</p>
010 INPUT S/N: A022-4064 L 1	<p>The system will then check for a duplicate serial/loop number combination.            If a duplicate serial/loop number combination is found, the keypad will emit a single long beep, and display the serial number along with a "?" for the loop number, allowing you to re-enter the correct loop number.            If the serial/loop number combination is not a duplicate in the system, a display appears showing the serial number and loop number entry.            Press [*] to continue.</p>

# 5800 Series Transmitters Loop Designations

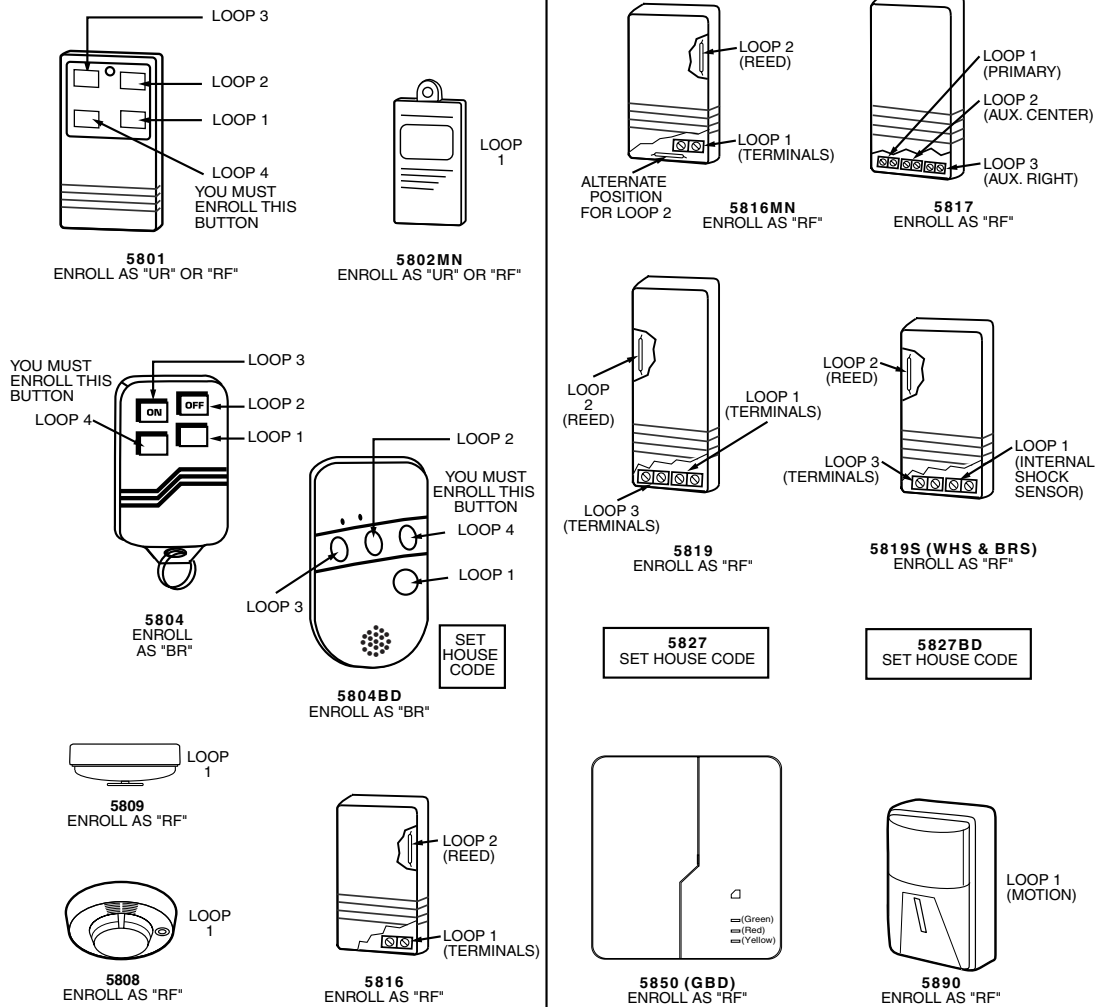

**Note:** For information on any transmitter not shown above, refer to the instructions accompanying that transmitter for details regarding loop numbers, etc.



The 5802MN, 5802MN2, 5804, 5804BD, 5814, 5816TEMP, 5819, 5819WHS & BRS, 5827BD, and 5850 transmitters are not intended for use in UL installations.

PROMPT	EXPLANATION
<p>XMIT TO CONFIRM PRESS *TO SKIP</p>	<p><b>Confirmation Option:</b> This prompt only appears if you answered “Yes” at the first prompt. The system enters a confirmation mode so that the operation of the actual programmed input can be confirmed. Activate the loop input or button that corresponds to this zone. At any time during this step, you may press the [*] key on the keypad to save the serial and loop number combination without confirming.</p>
<p>Entd A022-4063 1 Rcvd A022-4064</p>	<p><b>If the serial number transmitted <u>does not</u> match the serial number entered,</b> a display similar to the one at the left appears. If the loop number does not match, it is also displayed. If so, activate the loop input or button on the transmitter once again. If a match is not obtained (i.e., summary display does not appear), press the [#] key twice and then enter or transmit the correct serial number.</p>
<p>010 ZT P RC In L 03 1 3C RF 1s</p>	<p>If the serial number transmitted <u>does</u> match the serial number entered, the system beeps 3 times and a summary display appears, showing that zone’s programming. Note that an “s” indicates that a transmitter’s serial number has been enrolled. Press [*] to accept the zone information.</p>



PROMPT	EXPLANATION
--------	-------------

ENTER ZONE NO. 000 = QUIT                      011
---

The system now returns to the "ENTER ZONE NO." prompt for the next zone.  
When all zones have been programmed, enter "000" to quit.

After you have enrolled each wireless device, remove ONE of the serial number labels from that device and affix it in the appropriate column on the worksheets provided later in this *Programming Guide*; then enter the other information (zone number, zone type, etc.) relevant to that device.



When you have finished programming all zones, test each using the system's Test Mode. Do not use the Transmitter ID Sniffer Mode. The system checks only for transmission of one zone on a particular transmitter, NOT the zones assigned to each additional loop, and also does not verify polling loop type zones.

## Expert Mode Zone Programming

Expert mode allows you to program zones using the minimum number of screens and keystrokes.



Expert Mode Zone Programming does not provide the capability to program some of the zone's attributes, such as Arm w/Fault, Vent Zone, STAY mode, Auto-STAY, Bypass Group, etc. If you want to program a zone for any of these attributes, you must use Zone Programming.

Enter the Programming mode with **[Installer Code] + 8 0 0 0**

Before programming your zones, do the following:

1. Program field **2\*00: Number of Partitions**.
2. Enable your RF Receiver in *Device Programming* menu mode.

To program your zones, press \*93 to display the "ZONE PROG?" prompt. Enter "0" (NO) to each prompt until the "EXPERT MODE?" prompt appears.

PROMPT	EXPLANATION
--------	-------------

EXPERT MODE? 1 = YES    0 = NO                      0
--

Press 1 to enter Expert mode.

SET TO CONFIRM? 0 = NO    1 = YES                      0
---

This prompt appears once upon entering Expert Mode.  
If you select "Yes," Confirmation prompts will be displayed after the device's Serial and Loop numbers have been entered later.

Zn    ZT    P    RC    In    L 001   03   1   10   HW   -
--

A summary display appears, showing zone 1's current programming or default values.

Zn    ZT    P    RC    In    L 010   03   1   10   RF   1s
---

Enter the desired 3-digit zone number and press [\*].  
**Note:** If you want to exit the Expert mode, enter "000" + [\*].  
If an "s" appears after the loop number, it indicates that the transmitter's serial number has been enrolled.  
Use the [D] key to enter and duplicate wireless keys (see "Entering Wireless Keys" later)

PROMPT	EXPLANATION
<pre> Zn ZT P RC In L 010 03 1 10 RF - </pre>	<p>Enter all zone information except for Loop number, or press “C” to copy the zone information on this screen from the last saved zone (including Loop).</p> <p>ZT = Zone Type  P = Partition  RC = Report Code  In = Input Device Type  L = Loop number to which the sensor is connected.</p> <p><b>NOTE: Pressing the [C] copies the zone information from the last saved zone, which includes the input type. Verify this information is correct for this zone.</b></p> <p><b>On this screen:</b></p> <ul style="list-style-type: none"> <li>• Use the [A] key to move to the right.</li> <li>• Use the [B] key to move to left and to back up to “ZT” field.</li> </ul> <p>Press [*] to accept the existing or newly-entered zone information.</p>
<pre> ZN B M V A C E AD 010 2 1 1 0 1 1 01 </pre>	<p>Enter the remainder of the zone’s information, or press the [C] key to copy the zone attributes on this screen from the last saved zone.</p> <p>B = Bell/Relay Assignment  M = Maintenance (only used if “In” = 3 or 6)  V = V-plex Relay? (only used if “In” = 6)  AC = Access Point (only used if ZT = 27, 29 or In = 6, 11, 12, 13)  E = Entry or Exit? (only used if ZT = 27)  AD = Address (only used if “In” = 9 or 10)  If “In” = 9, enter the Device Address  If “In” = 10, enter the PassPoint Zone Number</p> <p><b>NOTE: Pressing the [C] copies the zone attributes from the last saved zone. Verify the attributes for this zone are correct.</b></p> <p><b>On this screen:</b></p> <ul style="list-style-type: none"> <li>• Use the [A] key to move to the right.</li> <li>• Use the [B] key to move to left and to back up to “V” field.</li> </ul> <p>Press [*] to accept existing information.</p>
<pre> 010 INPUT S/N: L A XXX-XXXX - </pre>	<p>If you entered RF, BR, UR or SL for the Input Type, this screen displays. Otherwise the summary screen for the next zone displays.</p> <p>Enter the 7-digit serial number, using one of the following methods:</p> <ol style="list-style-type: none"> <li>Transmit two open and close (or close and open) sequences. For a button-type transmitter, press and release the button, wait approximately 4 seconds, then press and release the button a second time. OR</li> <li>Manually enter the 7-digit serial number printed on a label on the transmitter, using the alpha keypad. Then press the [*] key, the cursor will move to the “L” position. You can edit the loop number, if necessary. When the loop number is acceptable, press [*]. OR</li> <li>Press key [C] to copy the last serial number enrolled (used when programming a transmitter with several input loops).</li> </ol> <p>Remember, you can use the [A] key to move to the right or the [B] key to move to the left. You can also use the [#] key to back up without saving.</p>
<pre> 010 INPUT S/N: L A022-4064 1 </pre>	<p>Press [*] to accept the serial number and advance to the “L” position (if method “a” or “c” was used), then enter the loop number.</p> <p>If necessary, press the [#] key to back up without saving, and re-enter or edit the serial number before pressing [*] to save</p> <p>The system checks for a duplicate. If a duplicate serial/loop number combination is found, the keypad will emit a single long beep, and display the serial number along with a “?” for the loop number, allowing you to re-enter the correct loop number.</p>
<pre> 010 INPUT S/N: L A000-0000 1 </pre>	<p><b>To Delete an Existing Serial Number</b>, enter “0” in the loop number field. The serial number will change to “0”s.</p> <p>If “0” was entered in error, simply re-enter the loop number or press [#], and the serial number will return to the display.</p>

PROMPT	EXPLANATION
<pre>XMIT TO CONFIRM PRESS *TO SKIP</pre>	<p>The prompt to confirm appears. This prompt only appears if you answered "Yes" at the "SET TO CONFIRM?" prompt.</p> <p>The system enters a confirmation mode so that the operation of the actual programmed input can be confirmed. Activate the loop input or button that corresponds to this zone. At any time during this step, you may press the [*] key on the keypad to save the serial and loop number combination without confirming.</p>
<pre>Entd  A022-4063  1 Rcvd  A022-4064</pre>	<p><b>If the serial number transmitted <u>does not</u> match the serial number entered</b>, a display similar to the one at the left appears. If the loop number does not match, it also is displayed.</p> <p>If so, activate the loop input or button on the transmitter once again. If a match is not obtained (i.e., summary display for the next zone does not appear), press the [#] key twice and then enter or transmit the correct serial number.</p> <p>Activate the button on the wireless key again after re-entering the serial number.</p>
<pre>Zn  ZT  P  RC  In  L 011 00  1  10  00  1</pre>	<p><b>If the serial number transmitted <u>matches</u> the serial number entered</b>, the system beeps 3 times and advances to the summary display for the next zone's programming.</p> <p>After all the zones have been programmed, enter <b>000</b> for the zone number to quit.</p>

**After you have enrolled each wireless device, remove ONE of the serial number labels from that device and affix it in the appropriate column on the worksheets provided later in this *Programming Guide*; then enter the other information (zone number, zone type, etc.) relevant to that device.**

### Entering Wireless Keys

If you pressed the D key previously to enter defaults for 5804 and/or 5804BD wireless keys, the following screens appear:

PROMPT	EXPLANATION
<pre>FROM TEMPLATE 1-6 1</pre>	<p>Enter template number (1–6).</p> <p>1–3 = 5804 templates; 4–6 = 5804BD templates. See the defaults provided for each template in the chart that follows these procedures.</p> <p>Select from templates. Press [*] to display template (template 1 shown selected).</p> <p><b>Note:</b> If necessary, press [#] to back up and re-enter template number.</p> <p>Press [#] if you want to return to zone attributes screen.</p>
<pre>L  01 02 03 04 ZT 23 22 21 23 1</pre>	<p>When you press [*], the selected template is displayed.</p> <p>Top line of display represents loop numbers; bottom line represents zone type.</p> <p>Press [*] to accept template.</p>
<pre>PARTITION 1</pre>	<p>Enter partition number for wireless key.</p> <p>Press [*] to continue.</p>
<pre>ENTER ZONE NO 000 = QUIT  024</pre>	<p>The system searches for the highest available, consecutive 4-zone group (the four zones required for the 5804 and 5804BD), and displays the lowest zone number of the group.</p> <p>If you want to start at a different zone number, enter the zone desired and press [*].</p> <p>If that zone number is displayed, the system has the required number of consecutive zones available, beginning with the zone you entered. If not, the system again displays a suggested zone that can be used.</p> <p>If the required number of consecutive zones is not available at all, the system will display "000."</p> <p>Press [*] to accept.</p>
<p>▲ Example of zone number suggested by the system. This indicates that zones 24, 25, 26, and 27 are available.</p> <pre>024 INPUT S/N  L AXXX-XXXX  1</pre>	<p><b>To enter the serial number:</b></p> <p>Press and release a button on the wireless key. OR</p> <p>Manually enter the 7-digit serial number printed on the device's label.</p> <p>Press [*] to accept serial number. The system checks for a duplicate.</p> <p>If a duplicate exists, a long error beep will sound and the serial number reverts back to all "X"s allowing you to re-enter the serial number.</p> <p>Use the [A] key to move forward within the screen, and the [B] key to back up.</p>

PROMPT	EXPLANATION
--------	-------------

XMIT TO CONFIRM PRESS *TO SKIP
-----------------------------------

If you entered YES previously at the SET TO CONFIRM prompt (see first prompt following entry into the **Expert Programming Mode**), the display on the left appears.  
To confirm, activate the button on the wireless key that corresponds to this zone.

Entd    A022-4063
Rcvd    A022-4064

**If the serial number transmitted does not match the serial number entered**, a display similar to the one at the left appears.  
If so, activate the loop input or button on the transmitter once again. If a match is not obtained (i.e., summary display does not appear), press the [#] key and then enter the correct serial number.  
Activate the button on the wireless key again after re-entering the serial number.

ENTER ZONE NO	
000 = QUIT	028

**If the serial number transmitted matches the serial number entered**, the system will beep 3 times and revert to the "Start Zone No." prompt and will show the lowest numbered zone of the next available 4-zone group (4 consecutive zones) that is available for programming.  
After all the wireless keys have been entered, enter **000** for the zone number to quit.

**After you have enrolled each wireless device, remove ONE of the serial number labels from that device and affix it in the appropriate column on the worksheets provided later in this *Programming Guide*; then enter the other information (zone number, zone type, etc.) relevant to that device.**

### Wireless Key Default Templates

5804				5804BD			
Template 1	Loop	Function	Zone Type	Template 4	Loop	Function	Zone Type
	1	No Response	23		1	No Response	23
	2	Disarming	22		2	No Response	23
	3	Arm AWAY	21		3	Arm AWAY	21
	4	No Response	23		4	Disarming	22
Template 2	Loop	Function	Zone Type	Template 5	Loop	Function	Zone Type
	1	No Response	23		1	No Response	23
	2	Disarming	22		2	Arm STAY	20
	3	Arm AWAY	21		3	Arm AWAY	21
	4	Arm STAY	20		4	Disarming	22
Template 3	Loop	Function	Zone Type	Template 6	Loop	Function	Zone Type
	1	24-Hour Panic	07		1	24-Hour Panic	07
	2	Disarming	22		2	Arm STAY	20
	3	Arm AWAY	21		3	Arm AWAY	21
	4	Arm STAY	20		4	Disarming	22

## Report Code Programming

All report codes are entered using #93 Menu Mode Programming, either through *Report Code Programming*, or through *Zone Programming* while entering other zone information. In the VISTA-32FB/VISTA-128FB, reports are divided into six categories. These categories represent the main menu options in *Report Code Programming*. Reports and the categories in which they are found are as follows:

ALARM CODES	RESTR, SUPV. CODES (for groups of 16 zones)	SYSTEM GROUP #1
Zone Alarm Reports	Alarm Restore Trouble Trouble Restore Bypass Bypass Restore	Closing (arm AWAY) Opening (disarm) System Low Battery Low Battery Restore AC Loss AC Restore Periodic Test Power Cancel Program Tamper
SYSTEM GROUP #2	SYSTEM GROUP #3	SYSTEM GROUP #4
Arm STAY Time Set, Log Reset Log 50%, 90% Full Event Log Overflow Exit Error by Zone Exit Error by User Recent Close	Early Open Early Close Late Open Late Close Failed to Open Failed to Close Auto-Arm Failed Schedule Change	Fire Walk-Test Start Fire Walk-Test End Off-Normal

The programming sequence that follows assumes that you will be entering all reports for the system at one time. In actuality, you may skip from one main menu option to another by pressing **0** (N) at each main menu option. Main menu options are highlighted in bold text. To enter report codes, do the following:

Enter Program Mode: **[Installer Code] + 8 0 0 0**. Then press **#93**. Enter **0** (N) at each main menu option until the *Report Code Programming* option is displayed.

PROMPT	EXPLANATION
REPORT CODE PROG 1 = YES 0 = NO 0	Press <b>1</b> (Y) to enter to <i>Report Code Programming</i> .
<b>Zone Alarm Reports</b>	
PROMPT	EXPLANATION
ALARM, ID DIGIT? 1 = YES 0 = NO 0	Press <b>[1]</b> (Y) to enter Alarm Report Codes for zones. Press <b>[0]</b> (N) to skip to the next main menu option.
ENTER ZONE NO. 000 = QUIT 001	Enter the zone number for which you are entering the report code. Press <b>[*]</b> to continue.
001 REPORT CODE 1st 00 2nd 00 00	Enter the first digit of the Alarm report code (double-digit entry) and press <b>[*]</b> . Enter the 2nd digit of the Alarm Report code. Press <b>[*]</b> to continue.
ENTER ZONE NO. 000 = QUIT 001	Enter the zone number for which you are entering the report code. When all zone Alarm Codes have been programmed, enter 000 to Quit. Press <b>[*]</b> to continue.
QUIT REPORT MENU 1 = YES 0 = NO 0	If you have completely finished entering report codes, press <b>[1]</b> (Y) to quit <i>Report Code Programming</i> . If you wish to enter other system report codes, enter <b>0</b> (N). Press <b>[*]</b> to continue.

## Restore/Supervisory Codes

PROMPT	EXPLANATION
RESTR, SUPV. CODE 1 = YES 0 = NO 0	Press <b>[1]</b> (Y) to enter Restore and Supervisory Codes for zones.
ENTER ZN FOR GRP 000 = QUIT 001	Enter one zone for each group of 16 zones (001-016, 017-032, etc.).
ALARM RESTORE GRP 001-016 00	Enter the first digit of the Alarm Restore Report Code for this group of zones (double-digit entry). The second digit (for two-digit reporting formats) is automatically the ID (second) digit of the Alarm Report Code for each zone (if programmed). Press <b>[*]</b> to continue.
TROUBLE GRP 001-016 00	Enter the first digit of the Trouble Report Code for this group of zones (double-digit entry). The second digit (for two-digit reporting formats) is automatically the ID (second) digit of the Alarm Report Code for each zone (if programmed). Press <b>[*]</b> to continue.
TROUBLE RESTORE GRP 001-016 00	Enter the first digit of the trouble restore code (single-digit entry) and press <b>[*]</b> . The second digit (for two-digit reporting formats) is automatically the ID (second) digit of the alarm report code for each zone (if programmed). Press <b>[*]</b> to continue.
BYPASS GRP 001-016 00	Enter the first digit of the Bypass Report Code (double-digit entry) and press <b>[*]</b> . The second digit (for two-digit reporting formats) is automatically the ID (second) digit of the Alarm Report Code for each zone (if programmed). Press <b>[*]</b> to continue.
BYPASS RESTORE GRP 001-016 00	Enter the first digit of the Bypass Restore Report Code (double-digit entry) and press <b>[*]</b> . The second digit (for two-digit reporting formats) is automatically the ID (second) digit of the Alarm Report Code for each zone (if programmed). Press <b>[*]</b> to continue.
ENTER ZN FOR GRP 000 = QUIT 017	Enter one zone for each group of 16 zones. When you are finished entering Restore and Supervisory Codes for all zone groups, enter <b>000</b> . Press <b>[*]</b> to continue.
QUIT REPORT MENU 1 = YES 0 = NO 0	If you have completely finished entering report codes, press <b>[1]</b> (Y) to quit <i>Report Code Programming</i> . If you wish to enter other system report codes, enter <b>0</b> (N). Press <b>[*]</b> to continue.

## System Group #1 Codes

PROMPT	EXPLANATION
SYSTEM GROUP #1? 1 = YES 0 = NO 0	To enter System Group #1 codes, press <b>1</b> (Y).
CLOSE 1st 00 2nd 00	Enter the first digit of the Closing (Arm-AWAY) report. Press <b>[*]</b> . Enter the second digit of the report. If the user number is desired as the second digit, enter <b>01</b> (not necessary for Contact ID or High Speed formats). Press <b>[*]</b> to continue.

PROMPT	EXPLANATION
--------	-------------

Enter the rest of the codes in the same manner. Other report codes in System Group #1 are:

- Opening (Disarm) Also, enable this if you desire Callback Requested reports (the panel answers a phone call from the downloader).
- System Low Battery
- Low Battery Restore
- AC Loss
- AC Restore
- Periodic Test
- Power
- Cancel
- Program Tamper

Once you have entered these report codes, the system prompts you with the Quit menu.

QUIT REPORT MENU 1 = YES 0 = NO 0
--------------------------------------

If you have completely finished entering report codes, press **1** (Y) to quit *Report Code Programming*. If you wish to enter other system report codes, enter **0** (N). Press **[\*]** to continue.

### System Group #2 Codes

PROMPT	EXPLANATION
--------	-------------

SYSTEM GROUP #2 ? 1 = YES 0 = NO 0
---------------------------------------

To enter System Group #2 codes, press **[1]** (Y).

STAY 1st 00 2nd 00
-----------------------

Enter the first digit of the Arm-STAY report. Press **[\*]**. Enter the second digit of the report. If the user number is desired as the second digit, enter **01** (not necessary for Contact ID or High Speed formats). Press **[\*]** to continue.

Enter the rest of the codes in the same manner. Other codes in System Group #2 are:

- Time Set, Log Reset
- Log 50%, 90% Full
- Event Log Overflow
- Exit Error by Zone
- Exit Error by User
- Recent Close

Once you have entered these report codes, the system prompts you with the Quit menu.

QUIT REPORT MENU 1 = YES 0 = NO 0
--------------------------------------

If you have completely finished entering report codes, press **[1]** (Y) to quit *Report Code Programming*. If you wish to enter other system report codes, enter **0** (N). Press **[\*]** to continue.

### System Group #3 Codes

PROMPT	EXPLANATION
--------	-------------

SYSTEM GROUP #3 ? 1 = YES 0 = NO 0
---------------------------------------

To enter System Group #3 codes, press **[1]** (Y).

EARLY OPEN 1st 00 2nd 00
-----------------------------

Enter the first digit of the Early Opening Report Code. Press **[\*]**. Enter the second digit of the report code. If the user number is desired as the second digit, enter **01** (not necessary for Contact ID or High Speed formats). Press **[\*]** to continue.

PROMPT	EXPLANATION
	<p>Enter the rest of the codes in the same manner. Other codes in System Group #3 are:</p> <ul style="list-style-type: none"> <li>• Early Close</li> <li>• Late Open</li> <li>• Late Close</li> <li>• Failed to Open</li> <li>• Failed to Close</li> <li>• Auto-Arm Failed</li> <li>• Schedule Change</li> </ul> <p>Once you have entered these report codes, the system prompts you with the Quit menu.</p>

QUIT REPORT MENU 1 = YES 0 = NO 0	<p>If you have completely finished entering report codes, press <b>[1]</b> (Y) to quit <i>Report Code Programming</i>. If you wish to enter other system report codes, enter <b>0</b> (N) Press <b>[*]</b> to continue.</p>
--------------------------------------	---

**System Group #4 Codes**

PROMPT	EXPLANATION
SYSTEM GROUP #4 ? 1 = YES 0 = NO 0	<p>To enter System Group #4 codes, press <b>[1]</b> (YES).</p>
WALK TEST START 1st 00 2nd 00	<p>Enter the first digit of the Fire Walk Test Start Report Code. Press <b>[*]</b>. Enter the second digit of the report code. Press <b>[*]</b> to continue.</p>
	<p>Enter the rest of the codes in the same manner. Other codes in System Group #4 are:</p> <ul style="list-style-type: none"> <li>• Fire Walk-Test End.</li> <li>• Off-Normal.</li> </ul> <p>Once you have entered these report codes, the system prompts you with the Quit menu.</p>

QUIT MENU MODE? 1 = YES 0 = NO 0	<p>Enter <b>1</b> to exit back to normal Programming mode. Enter <b>0</b> to stay in Menu mode.</p>
-------------------------------------	---

**Alpha Descriptors Programming**

You can program a user-friendly English language description/location for all protection zones, relays, keypad panics, polling loop short, and RF receiver supervision troubles.

Each description can be composed of a combination of words (up to 3) that are selected from a vocabulary of 244 words stored in memory, and any word can have an "s" or " 's " added to it.

**NOTE:** Due to the use of 3-digit zone numbers, the first word of the descriptor is limited to 6 characters if you want it to fit on the top line of the display.

In addition, up to 60 installer-defined words can be added to those already in memory. Thus, when an alarm or trouble occurs in a zone, an appropriate description for the location of that zone will be displayed at the keypad.

A custom installer's message can be programmed for each partition which is displayed when the system is "Ready" (e.g., THE PETERSONS').

1. To program alpha descriptors, enter Programming mode, then press **#93** to display "ZONE PROG?"
2. Press **[0]** (NO) twice to display "ALPHA PROG?".
3. Press **[1]** to enter *Alpha Programming*.  
 There are 6 submenu selections that will be displayed one at a time.  
 Press **[1]** to select the mode desired.



Press [0] to display the next mode available. The alpha menu selections are:

ZONE DESCRIP?	For entering zone descriptors.
DEFAULT SCREEN?	For creating custom message; displayed when system is ready.
CUSTOM WORD?	For creating custom words for use in descriptors.
PART DESCRIP?	For creating 4-character partition names.
EXIT EDIT MODE?	Press [1] to exit back to #93 Menu Mode.

4. Refer to the sections that follow for procedures for adding alpha descriptors.

### Zone Descriptors

1. **Select ZONE DESCRIPTOR mode.**

The keypad keys perform the following functions:

- [3] Scrolls both alphabet and actual words in ascending alphabetical order.
- [1] Scrolls both alphabet and actual words in descending alphabetical order.
- [2] Adds or removes an "s" or " 's " to a vocabulary word.
- [6] Switches between alphabet and actual word list; used to accept entries.
- [8] Saves the zone description in the system's memory.
- [#] [#] plus zone number displays the description for that zone.

2. **Enter the zone number to which you want to assign a descriptor.**

For example, key [\*] 001 to begin entering the description for Zone 1, (key [\*] 002 for Zone 2, [\*] 003 for Zone 3, etc.). The following is displayed: \* ZN 001 A.

Note that the first letter of the alphabet appears after the zone number, and that the zone number is automatically included with the description.

3. **Enter the descriptor for that zone.**

Use one of two methods as follows:

(Assume, for example, that the desired description for Zone 1 is BACK DOOR.)

- a) Press [#] followed by the 3-digit number of the first word from the fixed dictionary shown later in this section (e.g., [0][1][3] for BACK).

Press [6] in order to accept the word and proceed, or press [8] to store the complete descriptor and exit;

or

- b) Select the first letter of the desired description (note that "A" is already displayed). Use the [3] key to advance through the alphabet and the [1] key to go backward.

Press [3] key repeatedly until "B" appears (press [1] to go backwards if you happen to pass it), then press [6] to display the first available word beginning with "B".

Press [3] repeatedly to advance through the available words until the word "BACK" is displayed.



---

To add an "s" or " 's," if you need to, press 2. The first depression adds an "s," the second depression adds an " 's," the third depression displays no character (to erase the character), the fourth depression adds an "s," etc.

---

4. **Accept the word.**

To accept the word, press [6], which switches back to the alphabet list for the next word, or press [8] to store the complete descriptor and then exit.

5. **Select the next word.**

For selection of the next word (DOOR), repeat step 3a (word #057) or 3b, but selecting the word "DOOR."

To accept the word, press [6], which again switches back to alphabet list.

6. **Store the descriptor.**

When all desired words have been entered, press [8] to store the description in memory.

To review the zone descriptors, key [#] plus zone number (e.g., #001).

To edit zone descriptors, key [\*] plus zone number (e.g., \*001)

## 7. Exit Zone Description Mode: enter 000.

### Default Screen (Custom Message Display)

Normally, when the system is in the disarmed state, the following display is present on the keypad.

```
****DISARMED****  
READY TO ARM
```

Part or all of the above message can be modified to create a custom installer message for each partition. For example, "\*\*\*\*DISARMED\*\*\*\*" on the first line or "READY TO ARM" on the second line could be replaced by the installation company name or phone number for service.

**Note:** There are only 16 character spaces on each of the two lines.

To create a custom display message, proceed as follows:

#### 1. Select Default Screen mode.

The keypad asks for the partition number for this message.

Enter the partition number. Press [\*] to accept entry.

The following display appears:

```
****DISARMED****  
READY TO ARM
```

A cursor is present at the extreme left of the first line (over the first "star"). Press [6] to move the cursor to the right and [4] to move the cursor to the left. Press [7] to insert spaces or erase existing characters.

#### 2. Create the message.

For example, to replace "READY TO ARM" with the message "SERVICE 424-0177," proceed as follows:

Press [6] to move the cursor to the right, and continue until the cursor is positioned over the first location on the second line.

Press [3] to advance through the alphabet to the first desired character (in this case, "S"). Press [1] to go backward, when necessary. When the desired character is reached, press [6].

The cursor then moves to the next position, ready for entry of the next character (in this example, "E"). When the cursor reaches a position over an existing character, press [3] or [1] to advance or back up from that character in the alphabet. Proceed in this manner until all characters in the message have been entered.

#### 3. Save the message.

Store the new display message in memory by pressing [8].

#### 4. The system asks for a new partition number.

Enter 0 to quit or 1-8 for a new partition number.

### Custom Words

Up to 60 installer-defined words can be added to the built-in vocabulary. Each of the 60 "words" can actually consist of several words, but bear in mind that a maximum of 10 characters can be used for each word string.

#### 1. Select CUSTOM WORD Mode.

The keys perform the following functions:

[3] Advances through alphabet in ascending order.

[1] Advances through alphabet in descending order.

[6] Selects desired letter; moves the cursor 1 space to the right.

[4] Moves the cursor one space to the left.

[7] Inserts a space at the cursor location, erasing any character at that location.

[8] Saves the new word in the system's memory.

[\*] Returns to Description Entry Mode.

#### 2. Enter the custom word number (01-60) you want to create.

For example, if you are creating the first word (or word string), enter 01; when creating the second word, enter 02, and so on. A cursor now appears at the beginning of the second line.

#### 3. Type the word using one of two methods as follows:

a) Press [#], followed by the 2-digit entry for the first letter you would like to display (e.g., 65 for "A").

When the desired character appears, press [6] to select it. The cursor will then move to the right, in position for the next character. Press [#] plus the 2-digit entry for the next letter of the word.

or

b) Press 3 to advance through the list of symbols, numbers, and letters.

Press 1 to move back through the list.

When you have reached the desired character, press [6] to select it. The cursor then moves to the right, in position for the next character.

**4. Repeat step 3 to create the desired custom word (or words).**

Press [4] to move the cursor to the left if necessary.

Press [7] to enter a blank (or to erase an existing character).

Each word or word string cannot exceed 10 characters.

**5. Save the word by pressing [8].**

This returns you to the "CUSTOM WORD?" display. The custom word (or string of words) is automatically added to the built-in vocabulary at the end of the group of words beginning with the same letter.

Custom words are retrieved as word numbers 245 to 304 for words 1 to 60, respectively, when using method 3a to enter alpha descriptors.

When using method 3b to enter alpha descriptors, each word appears at the end of the group of words that begin with the same letter as it does.

**6. Repeat steps 2 through 6 to create up to a maximum of 60 custom words (or word strings).**

**7. Exit Custom Word Mode by entering 00 at the "CUSTOM WORD" prompt.**

**Partition Descriptors**

**1. Select "Part DESCRIPT." Mode.**

The system asks for the partition number desired. Enter the number as a single-key entry 1-8.

**2. Follow the same procedure as for custom words.**

**Note:** The partition descriptors are limited to 4 characters (e.g., WHSE for warehouse).

# Alpha Descriptor Vocabulary

(For entering alpha descriptors. To select a word, press [#] followed by the word's 3-digit number.)

**NOTE: Use the Relay Voice Descriptors vocabulary list when programming relay voice descriptors.**

- |                  |                   |               |                   |                    |
|------------------|-------------------|---------------|-------------------|--------------------|
| 000 (Word Space) | • 052 DAUGHTERS   | • 103 HALL    | 152 PAINTING      | 204 TAMPER         |
| • 001 AIR        | 053 DELAYED       | • 104 HEAT    | • 153 PANIC       | 205 TAPE           |
| • 002 ALARM      | • 054 DEN         | 105 HIGH      | 154 PASSIVE       | 206 TELCO          |
| 003 ALCOVE       | 055 DESK          | 106 HOLDUP    | • 155 PATIO       | 207 TELEPHONE      |
| 004 ALLEY        | • 056 DETECTOR    | 107 HOUSE     | 156 PERIMETER     | 208 TELLER         |
| 005 AMBUSH       | 057 DIALER 1      | 108 INFRARED  | • 157 PHONE       | • 209 TEMPERATURE  |
| 006 ANTENNA      | 058 DIALER 2      | • 109 INSIDE  | 158 PHOTO         | 210 THERMOSTAT     |
| • 007 AREA       | • 059 DINING      | 110 INTERIOR  | 159 POINT         | • 211 TOOL         |
| • 008 APARTMENT  | 060 DISCRIMINATOR | 111 INTRUSION | 160 POLICE        | 212 TRANSMITTER    |
| 009 ART          | 061 DISPLAY       | 112 JEWELRY   | 161 POOL          | 213 TRAP           |
| • 010 ATTIC      | 062 DOCK          | • 113 KITCHEN | • 162 POWER       | 214 TRIGGERS       |
| 011 AUDIO        | • 063 DOOR        | 114 LAUNDRY   | 163 QUAD          | 215 ULTRA          |
| 012 AUX          | 064 DORMER        | • 115 LEFT    | 164 RADIO         | • 216 UP           |
| 013 AUXILIARY    | • 065 DOWN        | 116 LEVEL     | • 165 REAR        | • 217 UPPER        |
| • 014 BABY       | • 066 DOWNSTAIRS  | • 117 LIBRARY | 166 RECREATION    | • 218 UPSTAIRS     |
| • 015 BACK       | 067 DRAWER        | • 118 LIGHT   | 167 REFRIG        | • 219 UTILITY      |
| • 016 BAR        | • 068 DRIVEWAY    | 119 LINE      | 168 REFRIGERATION | 220 VALVE          |
| 017 BARN         | 069 DRUG          | 120 LIQUOR    | 169 RELAY 1       | 221 VAULT          |
| • 018 BASEMENT   | • 070 DUCT        | • 121 LIVING  | 170 RF            | 222 VIBRATION      |
| • 019 BATHROOM   | • 071 EARTH       | • 122 LOADING | • 171 RIGHT       | 223 VOLTAGE        |
| • 020 BED        | 072 EAST          | 123 LOCK      | • 172 ROOM        | 224 WALL           |
| • 021 BEDROOM    | 073 ELECTRIC      | 124 LOOP      | 173 ROOF          | 225 WAREHOUSE      |
| 022 BELL         | 074 EMERGENCY     | 125 LORRA     | 174 SAFE          | 226 WASH           |
| 023 BELL 1       | 075 ENTRY         | 126 LOW       | 175 SCREEN        | • 227 WEST         |
| 024 BELL 2       | • 076 EQUIPMENT   | • 127 LOWER   | 176 SENSOR        | • 228 WINDOW       |
| • 025 BLOWER     | 077 EXECUTIVE     | • 128 MACHINE | • 177 SERVICE     | 229 WINE           |
| • 026 BOILER     | • 078 EXIT        | 129 MAGNETIC  | • 178 SHED        | • 230 WING         |
| 027 BOTTOM       | 079 EXTERIOR      | 130 MAIDS     | 179 SHOCK         | 231 WORK           |
| 028 BOX          | • 080 FACTORY     | 131 MAIN      | • 180 SHOP        | 232 XMITTER        |
| 029 BREAK        | 081 FAILURE       | • 132 MASTER  | 181 SHORT         | 233 YARD           |
| • 030 BUILDING   | 082 FAMILY        | 133 MAT       | 182 SHOW          | 234 ZN-1           |
| 031 BURNER       | • 083 FATHERS     | • 134 MEDICAL | • 183 SIDE        | • 235 ZONE         |
| 032 CABINET      | • 084 FENCE       | 135 MEDICINE  | 184 SKYLIGHT      | • 236 0            |
| • 033 CALL       | 085 FILE          | 136 MICROWAVE | 185 SLIDING       | • 237 1            |
| 034 CAMERA       | • 086 FIRE        | 137 MONEY     | • 186 SMOKE       | • 238 1ST          |
| 035 CAR          | • 087 FLOOR       | 138 MONITOR   | 187 SONIC         | • 239 2            |
| 036 CASE         | 088 FLOW          | • 139 MOTHERS | • 188 SONS        | • 240 2ND          |
| 037 CASH         | 089 FOIL          | • 140 MOTION  | • 189 SOUTH       | • 241 3            |
| 038 CCTV         | • 090 FOYER       | 141 MOTOR     | 190 SPRINKLER     | • 242 3RD          |
| 039 CEILING      | 091 FREEZER       | 142 MUD       | • 192 STATION     | • 243 4            |
| 040 CELLAR       | • 092 FRONT       | • 143 NORTH   | 193 STEREO        | • 244 4TH          |
| • 041 CENTRAL    | 093 FUR           | 144 NURSERY   | 194 STORE         | • 245 5            |
| 042 CIRCUIT      | 094 FURNACE       | • 145 OFFICE  | • 195 STORAGE     | • 246 5TH          |
| 043 CLIP         | 095 GALLERY       | 146 OIL       | 196 STORY         | • 247 6            |
| • 044 CLOSED     | • 096 GARAGE      | • 147 OPEN    | 197 STRESS        | • 248 6TH          |
| 045 COIN         | • 097 GAS         | 148 OPENING   | 198 STRIKE        | • 249 7            |
| 046 COLD         | 098 GATE          | • 149 OUTSIDE | 199 SUMP          | • 250 7TH          |
| 047 COATROOM     | • 099 GLASS       | 150 OVERFLOW  | 200 SUPERVISED    | • 251 8            |
| 048 COLLECTION   | 100 GROUND        | 151 OVERHEAD  | 201 SUPERVISION   | • 252 8TH          |
| 049 COMBUSTION   | 101 GUEST         | • 103 HALL    | 202 SWIMMING      | • 253 9            |
| • 050 COMPUTER   | 102 GUN           | • 104 HEAT    | 203 SWITCH        | • 254 9TH          |
| 051 CONTACT      |                   | 105 HIGH      |                   | 255 Custom Word 1  |
|                  |                   | 106 HOLDUP    |                   | to                 |
|                  |                   | 107 HOUSE     |                   | 314 Custom Word 60 |

## CHARACTER (ASCII) CHART

(For Adding Custom Words)

32 (space)	42 *	52 4	62 >	72 H	82 R
33 !	43 +	53 5	63 ?	73 I	83 S
34 "	44 ,	54 6	64 @	74 J	84 T
35 #	45 -	55 7	65 A	75 K	85 U
36 \$	46 .	56 8	66 B	76 L	86 V
37 %	47 /	57 9	67 C	77 M	87 W
38 &	48 0	58 :	68 D	78 N	88 X
39 '	49 1	59 ;	69 E	79 O	89 Y
40 (	50 2	60 <	70 F	80 P	90 Z
41 )	51 3	61 =	71 G	81 Q	

**Notes:** This factory-provided vocabulary of words is subject to change.

Bulleted words in **bold face type** are those that are also available for use by the 4285/4286 VIP Module. If you are using a VIP Module, and words other than these are selected for alpha descriptors, the Voice Module will not provide announcement of those words.

## Device Programming

This menu is used to program keypads, receivers, and relay modules, etc.



Device Address **00** is always set as an alpha keypad assigned to Partition 1 with no sounder suppression options, and these settings cannot be changed.

From Data Field Programming mode, press **#93** to display "ZONE PROG?" Press **[0]** repeatedly to display "DEVICE PROG?"

PROMPT	EXPLANATION		
<div style="border: 1px solid black; padding: 5px;">                     DEVICE PROG?                      1=YES 0=NO      0                 </div>	Press <b>[1]</b> to enter <i>Device Programming</i> .		
<div style="border: 1px solid black; padding: 5px;">                     DEVICE ADDRESS                      01-30, 00=QUIT      01                 </div>	The device address identifies the device to the control. Enter the 2-digit device address number to match the device's physical address setting ( <b>01-30</b> ). <b>Note:</b> Device Address 04 must be used for the 4285/4286 Voice Module, if one is utilized. If not, it can be used for another device type. Press <b>[*]</b> to accept entry.		
<div style="border: 1px solid black; padding: 5px;">                     DEVICE TYPE  <span style="float: right;">00</span> </div>	Select the type of addressable device as follows: <table style="width: 100%; border: none;"> <tr> <td style="width: 50%; vertical-align: top;"> <b>00</b> = device not used  <b>01</b> = alpha keypad (6139/6160)  <b>03</b> = RF receiver (5881)  <b>04</b> = output relay module (4204/4204CF)                         </td> <td style="width: 50%; vertical-align: top;"> <b>05</b> = voice (VIP) Module (4285/4286)  <b>06</b> = long range radio  <b>08</b> = fire display (FSA)  <b>09</b> = Vista Gateway Module (VGM)                         </td> </tr> </table> Press <b>[*]</b> to accept entry.	<b>00</b> = device not used <b>01</b> = alpha keypad (6139/6160) <b>03</b> = RF receiver (5881) <b>04</b> = output relay module (4204/4204CF)	<b>05</b> = voice (VIP) Module (4285/4286) <b>06</b> = long range radio <b>08</b> = fire display (FSA) <b>09</b> = Vista Gateway Module (VGM)
<b>00</b> = device not used <b>01</b> = alpha keypad (6139/6160) <b>03</b> = RF receiver (5881) <b>04</b> = output relay module (4204/4204CF)	<b>05</b> = voice (VIP) Module (4285/4286) <b>06</b> = long range radio <b>08</b> = fire display (FSA) <b>09</b> = Vista Gateway Module (VGM)		

### Alpha Keypad

PROMPT	EXPLANATION				
<div style="border: 1px solid black; padding: 5px;">                     01 CONSOLE PART.  <span style="float: right;">1</span> </div>	If you selected device type 01 (alpha keypad), this prompt appears. Enter the addressable device's default partition number (01 to maximum number of partitions programmed for system in field 2*00). This is the primary partition for the device. Enter 9 to make this keypad a "Master" keypad for the system. Press <b>[*]</b> to accept entry.				
<div style="border: 1px solid black; padding: 5px;">                     01 SOUND OPTION  <span style="float: right;">0</span> </div>	If you entered device type 01 (alpha keypad), this prompt appears. Keypads can be individually programmed to suppress arm/disarm beeps, entry/exit beeps and chime mode beeps. This helps prevent unwanted sounds from disturbing users in other areas of the premises. Enter a number <b>0-3</b> for the keypad sounding suppression options desired for the keypad as follows: <table style="width: 100%; border: none;"> <tr> <td><b>0</b> = no suppression</td> </tr> <tr> <td><b>1</b> = suppress arm/disarm &amp; entry/exit beeps</td> </tr> <tr> <td><b>2</b> = suppress chime mode beeps only</td> </tr> <tr> <td><b>3</b> = suppress arm/disarm, entry/exit <b>and</b> chime mode beeps</td> </tr> </table> Press <b>[*]</b> to accept entry.	<b>0</b> = no suppression	<b>1</b> = suppress arm/disarm & entry/exit beeps	<b>2</b> = suppress chime mode beeps only	<b>3</b> = suppress arm/disarm, entry/exit <b>and</b> chime mode beeps
<b>0</b> = no suppression					
<b>1</b> = suppress arm/disarm & entry/exit beeps					
<b>2</b> = suppress chime mode beeps only					
<b>3</b> = suppress arm/disarm, entry/exit <b>and</b> chime mode beeps					
<div style="border: 1px solid black; padding: 5px;">                     01 KEYPAD GLBL?  <span style="float: right;">0</span> </div>	If you entered device type 01 (alpha keypad), this prompt appears. Each keypad can give users with access to multiple partitions the ability to arm and disarm those partitions from it. To enable this keypad for global arming/disarming, enter <b>1</b> . To prevent the ability to use this keypad for global arming/disarming, enter <b>0</b> . Press <b>[*]</b> to accept entry.				

### RF Expander

PROMPT	EXPLANATION
<div style="border: 1px solid black; padding: 5px;">                     01 RF EXPANDER                      HOUSE I      00                 </div>	If you selected device type 03 (RF receiver), this prompt appears. Enter the 2-digit House ID ( <b>00-31</b> ). This is required if you are using a wireless keypad (5827/5827BD). Press <b>[*]</b> to accept entry.


## Output Relay Module

PROMPT	EXPLANATION
--------	-------------

01 SUPERVISED CF? 0	<p>If you selected device type 04 (relay module), this prompt appears. Enter 1 if the unit is a 4204CF. If not, enter 0. If you enter 1, only Relay 1 (Output A) and Relay 3 (Output B) on each module may be programmed for functions. This module is usually used to add two additional supervised Notification Appliance Circuits to the system.</p> <p>Press [*] to accept entry.</p>
------------------------	---

### Long Range Radio

If you selected device type 6, the 6139/6160 Keypad functions similarly to the 7720PLRR Programming Tool. See *Figure 1* for the functions of the keys on the 6139.

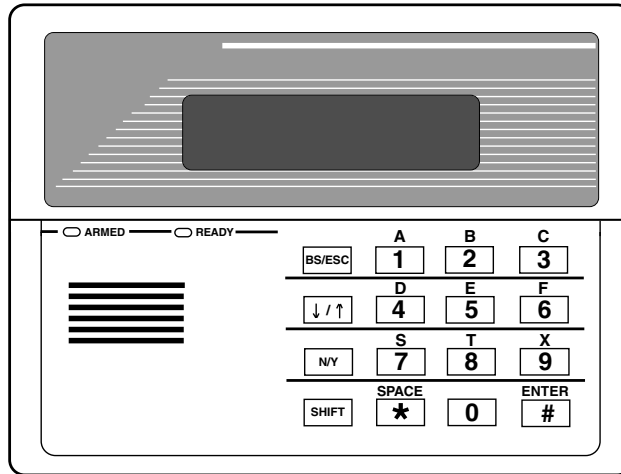

SHIFT function indicated by turning on READY LED.

**Figure 1: 6139 Key Functions for Programming 7820 Radio**


Each key has two possible functions: a normal function and a SHIFT function. To perform a normal key function, simply press the desired key. To perform a SHIFT key function, press SHIFT key, then press desired function key.

#### Normal and SHIFT key Functions:

Key	Normal Key Function	SHIFT Key Function
BS/ESC	[BS]: Press to delete entry Also, can reset EEPROM defaults *	[ESC]: Press to quit Program Mode
↓/↑	[↓]: Scroll down programming	[↑]: Scroll up programming
N/Y	[N]: Press for "NO" answer	[Y]: Press SHIFT-Y for "YES" answer
SHIFT	Press before pressing a SHIFT key function. Will light READY LED. LED goes out once a key is pressed. Press again for each SHIFT function desired.	
1/A	[1]: For entering the number 1	[A]: Used for entering C.S. ID number
2/B	[2]: For entering the number 2	[B]: Used for entering C.S. ID number
3/C	[3]: For entering the number 3	[C]: Used for entering C.S. ID number
4/D	[4]: For entering the number 4	[D]: Used for entering C.S. ID number
5/E	[5]: For entering the number 5	[E]: Used for entering C.S. ID number
6/F	[6]: For entering the number 6	[F]: Used for C.S. ID & FAST Mode
7/S	[7]: For entering the number 7	[S]: Press to display diagnostic status
8/T	[8]: For entering the number 8	[T]: Press to send TEST messages
9/X	[9]: For entering the number 9	[X]: Press to reset the 7820
*/SPACE	[*]: Not used with 7820	[SPACE]: Not used with 7820
0	[0]: For entering the number 0	No SHIFT function
#/ENTER	[#/ENTER]: Press to accept entries	No SHIFT function

\* Active only when the "REVIEW?" prompt is displayed.

The 6139/6160 Keypad displays the following prompts, which are sent by the Long Range Radio transmitter to the control.  
**Note: These prompts are for the 7820 Radio only. If you are using a different radio, refer to the radio's instructions for the correct prompts.**

PROMPT	EXPLANATION
DEVICE ADDRESS	Enter the device address of the radio. The default address is 3.
ID # (1234)	Enter the 4-digit customer account number, <b>0001-9999</b> . This ID number will appear in the messages generated by the radio. Messages generated by the panel and transmitted by the radio will contain the ID number programmed into the panel. The radio and the panel should have the same ID number, if possible.
	If a different 4-digit customer account number is used in the radio than is programmed into the alarm control, the radio will transmit radio-specific messages (power-on reset, AC fail, etc.) using the radio customer number, and alarm messages using the control panel's customer number. If these numbers are different, you will be billed for two AlarmNet radio accounts.

PROMPT	EXPLANATION
ODD [Y/N] (N)	Enter <b>Y</b> for odd system flag; <b>N</b> for even system flag.
Alarmnet (Y/N) (Y)	Enter <b>Y</b> if this is an AlarmNet installation. Enter <b>N</b> if this is a private system and skip to Question 7.
CS ID (11)	Enter the primary central station's system ID number, <b>1-7F</b> (will not be displayed for private system users).
BAT PRESENT [Y/N] (N)	Enter <b>Y</b> if optional battery will be used. <b>Must be Y for UL installations (a battery must be installed).</b>
USE RADIO # [Y/N] (N)	If you selected <b>Y</b> , the Radio ID number replaces the panel Subscriber ID in panel-generated messages. If you selected <b>N</b> , the radio sends panel-generated messages with the panel Subscriber ID number.
2 <sup>ND</sup> CS ID (12)	<b>This must be programmed with a value, even if it is the same as the primary central station.</b> The alarm panel has the option of sending a selected message to the second central station.
REVIEW (Y/N) (N)	Enter <b>Y</b> to review the programming options and to ensure that the correct responses have been made. Parameters can be changed during review. Enter <b>N</b> to end programming session.

#### Fire Display

PROMPT	EXPLANATION
RST FIRE PTN? 0	If you selected device type 8 (Fire Display), this prompt appears. Enter <b>0</b> to disable FSA's Silence/Reset button (default). Enter <b>1</b> to enable FSA's Silence/Reset button to silence fire alarm system when pressed once (Silence only). Enter <b>2</b> to enable FSA's Silence/Reset button to silence and then reset fire alarm system when pressed twice. Press <b>[*]</b> to accept entry.

#### VIP Module and VISTA Gateway Module

PROMPT	EXPLANATION
01 MODULE PART. 1	If you selected device type 05 (VIP Module) or type 09 (VGM), this prompt appears. Enter the partition number <b>1-8</b> in which the module is located. Press <b>[*]</b> to accept entry. Press <b>00 + [*]</b> to exit Menu mode. Press <b>*99</b> to exit Program mode.

## Output Programming

---

The system supports up to 96 outputs. Outputs can be used to perform many different functions and actions. Each output must be programmed to begin one of four types of ACTIONS at a designated START event, and end that ACTION at a designated STOP event. The options used to start and stop these devices are described below, followed by the actual screen prompts and available entries.

**NOTE: You may use up to 20 of the polling loop outputs (e.g., 4101SN) in the system. Also, if you are using ZONE # for the START of a polling loop output and want that output to stop when the same zone restores, the STOP programming MUST BE BLANK.**

**If you are using Zone Type 17 (Waterflow) or 18 (Fire Supervisory) to trigger an output, you must program an Event for the START (alarm, trouble, etc.). All other Zone Type/System Operations do not require an Event.**

The letter(s) in parentheses after each function described below, such as (A) after ACTION, are those that appear in the various summary displays of programmed data during programming.

**ACTION (A)** The "ACTION" of the device is how the device will respond when it is activated by the "START" programming. You may want the device to activate momentarily, to pulse on and off continuously, or to remain activated until some other event occurs to stop it. There are five different action choices:

- ACTIVATE for 2 SECONDS and then reset.
- ACTIVATE and REMAIN ACTIVATED until stopped by some other event.
- PULSE ON and OFF until stopped by some other event (do not use with an FSA device).
- NO RESPONSE when the device is not used.
- TOGGLE on and off alternately with each activation of event.

**START (STT)** The "START" programming determines when and under what conditions the device is activated. The following START options are available:

- 1) **EVENT (EV)** is the condition (alarm, fault, trouble) that must occur to a zone or group of zones (zone list) in order to activate the device. These conditions apply *only* when a zone list is used. The different choices for "EVENT" are listed below and in "Programming Relays" later in this section.
  - ALARM Action begins upon any alarm in an assigned zone in the zone list.
  - FAULT Action begins upon any opening of an assigned zone in the zone list.
  - TROUBLE Action begins upon any trouble condition in an assigned zone in the zone list.
  - NOT USED Action is not dependent upon one of the above events.

**ZONE LIST (ZL)** is a group of zones to which the "EVENT" applies in order to activate a particular device. Note that there are a total of 15 zone lists that can be programmed; when the selected EVENT (alarm, fault or trouble) occurs in **any** zone in the selected "Start" ZONE LIST (01-15), activation of the selected device will START.

- 2) **ZONE #** A specific zone going into alarm, fault, trouble, or restore (Event programming) can be used to start the relay action. Enter the 3-digit zone number (000-128).
- 3) **ZONE TYPE/SYSTEM OPERATION (ZT)**. If all zones to be used to start the device have the same response type, and there are no other zones of this type that are **not** to activate this device, then "ZONE TYPE" may be used instead of a "ZONE LIST" and "EVENT" to activate the device.

If a system operation, such as "DISARMING" or "ANY FIRE ALARM," is to activate the device, enter the appropriate choice under the "ZONE TYPE" option.

**The "ZONE TYPE/SYSTEM OPERATION" option functions independently of the "EVENT/ZONE LIST" combination.**

If a specific "ZONE TYPE" is chosen, any zone of that response type going into alarm, trouble, or fault will cause the device to activate as selected in "ACTION." If the same "ZONE TYPE" is also chosen for the STOP programming, any zone of that type that *restores* will de-activate the device.

If a "SYSTEM OPERATION" is chosen, that operation will cause the device to activate as selected in "ACTION." The different choices for "ZONE TYPE" and "SYSTEM OPERATION" are listed in "Programming Relays" later in this section, and on the Programming Form.

- 4) **PARTITION NO. (P)**. The device's "Start" ZONE TYPE/SYSTEM OPERATION may be limited to an occurrence on one partition (1-8), or any partition (0).

**STOP (STP):** The "STOP" programming determines when and under what conditions the device is de-activated. The following options are available:

- 1) **RESTORE ZONE LIST (ZL)**. If a "ZONE LIST" is used as the "Stop" event, the device de-activates when **all** the zones in that list restore from a previous fault, trouble, or alarm condition. This occurs regardless of what is programmed to "START" the device; therefore, a "RESTORE ZONE LIST" is normally only used when a "ZONE LIST" is used to start the device.



- 2) **ZONE TYPE/SYSTEM OPERATION (ZT).** Instead of using a "RESTORE ZONE LIST," you can select a specific zone (response) type or system operation action to de-activate the device.  
 If you choose a specific "ZONE TYPE," any zone of that response type that restores from a previous alarm, trouble, or fault condition will cause the device to de-activate.  
 If you choose a "SYSTEM OPERATION," that operation causes the device to de-activate. The different choices for "ZONE TYPE" and "SYSTEM OPERATION" are listed in "Programming Relays" later in this section, and in the Programming Form.
- 3) **PARTITION NO. (P).** The device's "Stop" Zone Type/System Operation may be limited to an occurrence on one partition (1-8), or on any partition (0).  
**The "ZONE TYPE/SYSTEM OPERATION" option functions independently of the "RESTORE/ZONE LIST" combination.**

### Output Devices Programming

From Data Field Programming Mode, press **#93** to display the "ZONE PROG?" prompt. Press **[0]** (NO) to each menu option until the "OUTPUT PGM?" prompt appears. Press **[1]** (YES).

While in this mode, press **[\*]** to advance to next screen. Press **[#]** to back up to the previous screen.

PROMPT	EXPLANATION
ENTER RELAY # (00=QUIT) 01	Enter the relay (output device) identification number <b>01-96</b> . This is a reference number only, used for identification purposes. The actual module address and relay number on the module are programmed in the last two prompts. Press <b>[*]</b> to continue.
02 A EV ZL ZT P STT 0 0 00 00 0	Press <b>[*]</b> to continue.
02 A ZL ZT P STOP 0 00 00 0	The keypad displays a summary STOP screen. Press <b>[*]</b> to continue.
02 RELAY ACTION NO RESPONSE 0	The Relay Action is the way in which the relay will respond when activated by the "start" event. Enter the desired action for this relay as follows: <b>0</b> =not used; <b>1</b> =close for 2 secs.; <b>2</b> =stay closed; <b>3</b> =pulse on/off; <b>4</b> = toggle on and off alternately
02 START EVENT NOT USED 0	An output may be activated by an Event/Zone List combination, <b>and/or</b> by a Zone Type/System Operation. For an Event/Zone List combination, enter the event code as follows: <b>0</b> =not used; <b>1</b> =alarm; <b>2</b> =fault; <b>3</b> =trouble <b>NOTE: An Event is required for Zone List, Zone Number and Zone Types 17 and 18.</b> If you are not using a Zone List, Zone Number, or Zone Types 17 or 18 to activate the relay, enter <b>0</b> . Press <b>[*]</b> to continue.
02 START: ZN LIST 00	A zone list is a set of zones that can be used to initiate the start or stop relay action. If a zone list is being used to start this relay action, enter the zone list number, <b>1-15</b> . If a zone list is not being used, enter <b>0</b> . Press <b>[*]</b> to continue.
02 START: ZONE # 000	A specific zone can be used <b>instead</b> of or <b>in addition</b> to an Event/Zone List or Zone Type/System Operation combination to start the relay action. Enter the 3-digit zone number. Press <b>[*]</b> to continue.
02 START: ZN TYPE NO RESPONSE 00	A Zone Type/System Operation can be used <b>instead</b> of or <b>in addition</b> to an Event/Zone List combination or a specific zone to start the relay action. If a Zone Type/System Operation is being used, enter the 2-digit code as listed in the table that follows. Press <b>[*]</b> to continue.

### Choices for Start/Stop Zone Types and System Operations:

00 = No Response (Not Used)	23 = No Alarm Response	42 = System Battery Low
01 = Entry/Exit #1	27 = Access Point (allows more than one relay to be controlled by activation if access point request)	43 = Communication failure
02 = Entry/exit #2	28 = MLB Supervision	44 = RF Low Battery
03 = Perimeter	29 = Momentary Exit (use w/VistaKey only)	45 = Polling Loop Failure
04 = Interior Follower	30 = On Second Code + Off	47 = Console Failure
05 = Trouble Day/Alarm Night	31 = End of Exit Time	51 = RF Receiver Failure
06 = 24-Hr. Silent	32 = Start of Entry Time	52 = Kissoff
07 = 24-Hr. Audible	33 = Any Burglary Alarm	54 = Fire Zone Reset
08 = 24-Hr. Auxiliary	34 = Code + [#] + 71 Key Entry	55 = Disarm + 1 Minute
09 = Fire Alarm or Trouble	35 = Code + [#] + 72 Key Entry	56 = XX Minutes (enter XX in field 1*74) *
10 = Interior W/Delay	36 = At Bell Timeout **	57 = YY Seconds (enter YY in field 1*75) *
16 = Fire With Verification	37 = 2 Times Bell Timeout **	58 = Duress
17 = Waterflow*****	38 = Chime	60 = Audio Alarm Verification (must be selected for both START and STOP operation)
18 = Fire Supervisory	39 = Fire Alarm	61 = Code + [#] + 67
19 = 24-Hour Trouble	40 = Bypassing	62 = Bell 2 Timeout
20 = Arming-STAY***	41 = AC Power Fail	63 = Auxiliary Relay Timeout
21 = Arming-AWAY****		
22 = Disarming (Code + Off)		

\* Stop condition only

\*\* Or at disarming, whichever occurs earlier

\*\*\* The output also activates when the partition is armed in the INSTANT mode

\*\*\*\* The output also activates when the partition is armed in the MAXIMUM mode

\*\*\*\*\* Use an event of fault or alarm as the START option



If you are using options 56 and/or 57 (usually as the STOP Zone Type), you must program data fields 1\*74 and 1\*75 for the respective relay timeouts for minutes and seconds.

PROMPT	EXPLANATION
02 START: ACS PT (00-31) 00	If the start zone type you selected was 27 (access point), this prompt is displayed. Enter the access point (00-31) that will start the relay action. Press [*] to continue.
02 START: PARTN ANY PARTITION 0	If the starting event will be limited to occurring on a specific partition, enter the partition number (1-8) in which the start event will occur. Enter 0 for any partition. Press [*] to continue.



Do not use a zone programmed with an RF Button (Input Type BR) to STOP a relay. The system will not deactivate the relay.

PROMPT	EXPLANATION
02 STOP: ZN LIST 00	If a zone list is being used to stop this relay action, enter the zone list number, 1-15. The <b>restore</b> of a zone on the zone list stops the relay. If a zone list is not being used, enter 0. Press [*] to continue.
02 STOP: ZN TYPE NO RESPONSE 00	If a Zone Type/System Operation is being used to stop the relay action, enter the 2-digit code listed in the Choices for Start/Stop System Operation chart. Press [*] to continue.
02 STOP: ACS PT (00-31) 00	If the stop zone type you selected was 27 (access point), this prompt is displayed. Enter the access point (00-31) which will stop the relay action. Press [*] to continue.
02 STOP: PARTN ANY PARTITION 0	This is the partition to which the stop condition will be limited. Enter 0 for any partition. Enter 1-8 for specific partition number. Press [*] to continue.

PROMPT	EXPLANATION
02 RELAY GROUP 00	Relays may be grouped for common activation by time-driven events (commands <b>06-10</b> ). Enter <b>00</b> (no group) or <b>01-15</b> for a specific group number. Press <b>[*]</b> to continue.
02 RESTRICTION 1=YES 0=NO 0	The system may have some devices that are not intended to be under end user control, such as relays activating fire doors or machinery. Enter <b>1</b> if the end user will be restricted from accessing this relay group. Press <b>[*]</b> to continue.
02 RELAY TYPE V-PLEX 0	Enter <b>0</b> for V-Plex (polling loop) devices. Enter <b>1</b> for (ECP) relay modules (4204/4204CF). Enter <b>3</b> for (FSA) Fire System Annunciator. Press <b>[*]</b> to continue.
02 V-PLEX ZONE # 000	For polling loop trigger outputs (4101SN), enter the protection zone number (001-128) linked to each output, if used. Be sure to enroll the module's serial number (see Zone Programming). Press <b>[*]</b> to continue.
02 ECP ADDRESS 00	If you selected <b>1</b> or <b>3</b> for (4204/4204CF or FSA), enter the actual module's address ( <b>01-15 – 4204/4204CF</b> ) ( <b>08-23 – FSA</b> ) as set by its DIP switches. Up to 8 4204/4204CF modules and up to 4 FSA modules can be installed in a system. Press <b>[*]</b> to continue.
02 MODULE RELAY# 0	For 4204 Relay Outputs, enter the specific relay number on that module ( <b>1-4</b> ). <b>For 4204CF outputs, enter only module relay number 1 (Output A) or relay number 3 (Output B)</b> . These are the only two programmable relays on the 4204CF Module. Press <b>[*]</b> to continue. The keypad will display the Start and Stop summary screens again. Press <b>[*]</b> to continue.
01 LED # 00	Enter the LED number on the FSA module ( <b>01-08 for FSA-8; 01-24 for FSA-24</b> ). Press <b>[*]</b> to continue. The keypad displays the Start and Stop summary screens again. Press <b>[*]</b> to continue.

When all relays have been programmed, enter **00** at the "ENTER RELAY NO." prompt.

If you are defining a zone list, continue to the next section. If not, enter **00 + [\*]** at the next two prompts. You will then be asked "Quit Menu Mode?" Enter **1** for "Yes," **0** for "No." Then enter **\*99** to exit programming completely.

If supervision of the 4204CF Relay Output is desired, enter a response type for that output's corresponding supervisory zone. This is equal to 600 + [Relay ID No.]. For example, if you are programming Relay ID No. 1, the relay's supervisory zone 601. Program this zone with response type 05 (Day/Night) in *Zone Programming*.

### Zone List Programming

After all relays have been programmed, upon entering **00** at the "ENTER RELAY NO." prompt, you are asked to enter a zone list. If a zone list number was used to start or stop a relay, you must define the zones belonging to that list as follows:

PROMPT	EXPLANATION
ENTER Zn LIST ? 00=QUIT 00	Enter the zone list number <b>01-15</b> . Enter <b>00</b> to quit.
01 ADD ZONE # 000=QUIT 000	Using 3-digit entries, enter each zone to be included in this zone list. Press <b>[*]</b> after you enter each zone number. When you have entered all zones, enter <b>000</b> . Press <b>[*]</b> to continue.
01 Del Zn LIST ? 1=YES 0=NO 0	Enter <b>0</b> to save this zone list. Enter <b>1</b> to delete it.
01 DEL ZONES ? 1=YES 0=NO 0	Enter <b>1</b> to delete one or more zones in that zone list. Enter <b>0</b> if no changes are necessary. If you enter <b>1</b> , the following screen appears; otherwise, the "Enter Zone LIST" prompt reappears.

PROMPT	EXPLANATION
01 Zn to DELETE ? 000=QUIT      000	Enter each zone number to be deleted from the zone list, pressing [*] after each number.
VIEW Zn LIST ? 00=QUIT      00	This display appears if you pressed 00 at the "Enter Zone LIST" prompt. Enter the zone list number that you wish to view. Press [*] to continue.
01 ASSIGNED ZONE 000=QUIT      000	Press [*] to scroll through all zones in that list. Enter 000 +[*] to quit. Press [1] to exit Menu Mode. Press *99 to exit Program Mode.

## Relay Voice Descriptors

If you are using the 4285/4286 VIP Module, voice descriptors can be programmed for outputs 1-32 (even though the system has 96 outputs, only 1-32 can have a Relay Voice Descriptor programmed). These descriptors are announced by the voice module when you access the relays via the # 70 Relay Access Mode over the telephone.

Each voice descriptor can consist of up to 3 words selected from the Relay Voice Descriptors and Custom Word Substitutes Vocabulary list (later in this section).



The index numbers from this vocabulary list are to be used for relay voice descriptors only. For normal system voice annunciation (e.g., alarms, troubles, status), use the highlighted words in the alpha vocabulary list in the *Alpha Programming* part of this guide.

To enter relay voice descriptors, do the following:

1. From Data Field Programming mode, press #93 to display the "ZONE PROG?" prompt.
2. Press [0] (NO) to each menu option until the "RLY VOICE DESCR?" prompt is displayed. Follow the instructions below. While in this mode, press [\*] to advance to next screen. Press [#] to back up to previous screen.

PROMPT	EXPLANATION
RLY VOICE DESCR? 1=YES 0=NO      0	Press [1] to program voice descriptors for relays.
ENTER RELAY NO. 00=QUIT      01	Enter the 2-digit relay number (01-32) for the relay desired, or enter 00 to quit Relay Voice Descriptor Programming Mode. Press [*]
01 ENTER DESC d1	From the Relay Voice Descriptors and Custom Word Substitutes Vocabulary list, enter the 3-digit index number for the first word of the relay descriptor phrase. Press [*] to accept entry.
01 ENTER DESC d2	From the Relay Voice Descriptors and Custom Word Substitutes Vocabulary list, enter the 3-digit index number for the second word of the relay descriptor phrase. If second word is not desired, press [000]. Press [*] to accept entry.
01 ENTER DESC d3	From the Relay Voice Descriptors and Custom Word Substitutes Vocabulary list, enter the 3-digit index number for the third word of the relay descriptor phrase. If third word is not desired, press [000]. Press [*] to accept entry. The "ENTER RELAY NO." prompt appears. Enter the next relay number to be programmed. When you have programmed all output devices, enter 00 to quit. Enter *99 to exit Program Mode.

# Relay Voice Descriptors and Custom Word Substitutes Vocabulary

Word	Index	Word	Index	Word	Index	Word	Index	Word	Index
Air	116	Device	060	Gas	138	Off	011	Smoke	024
Alarm	255	Dim	163	Glass	139	Office	147	South	155
And	067	Dining	031	Hall	050	On	058	Stairs	006
Apartment	117	Door	016	Heat	010	One	070	Station	156
Appliances	161	Down	008	Inside	209	Open	148	Storage	157
Area	118	Downstairs	184	Kitchen	022	Outside	210	Sun	154
Attic	119	Driveway	130	Laundry	140	Panic	013	System	062
Back	121	Duct	131	Left	027	Partition	090	Temperature	158
Bar	122	East	132	Library	141	Patio	149	Third	159
Basement	021	Eight	077	Light	019	Phone	061	Three	072
Bathroom	051	Eighth	221	Living	030	Power	063	Tool	213
Battery	053	Equipment	133	Loading	142	Pump	166	Two	071
Bedroom	015	Exit	004	Lower	094	Rear	088	Up	025
Blower	123	Factory	134	Machine	143	Right	028	Upper	187
Boiler	124	Fence	135	Master	144	Room	018	Upstairs	183
Bright	162	Fifth	218	Medical	014	's	007	Utility	185
Building	125	Fire	040	Motion	145	Second	056	West	215
Burglary	039	First	136	Nine	078	Service	150	Window	017
Central	089	Five	074	Ninth	222	Seven	076	Wing	216
Chime	054	Floor	029	No	165	Seventh	220	Zero	069
Closed	126	Four	073	North	146	Shed	151	Zone	002
Computer	127	Fourth	217	Not	012	Shop	152		
Console	066	Foyer	137			Side	153		
Den	052	Front	087			Six	075		
Detector	128	Garage	023			Sixth	219		

## Custom Word Substitutes for VIP Module Annunciation

A substitute word can be programmed for each of the 60 custom words used in your alpha zone descriptions. The VIP Module announces this substitute word in place of the custom word that is displayed on the alpha keypad. For example, an alarm display of "John's Bedroom" could be announced as "Son's Bedroom," as there is no annunciation for the custom word "John." Note that if a substitute word is not assigned, the VIP Module will not annunciate the zone descriptor at all, but will only annunciate the zone number.

To enter custom word substitutes, do the following:

1. From Data Field Programming Mode, press **#93** to display the "ZONE PROG?" prompt.
2. Press **[0]** (NO) to each menu option until the "CUSTOM INDEX ?" prompt is displayed.

PROMPT	EXPLANATION
CUSTOM INDEX ? 1=YES 0=NO 0	Enter <b>[1]</b> at this prompt.
CUSTOM WORD NO. 00=QUIT	Enter the custom word number ( <b>01-60</b> ) for which a voice substitute is desired. Enter <b>00</b> to quit this Programming Mode. Press <b>[*]</b> to accept entry.
01 ENTER INDEX #	Enter the 3-digit substitute word index number from the Relay Voice Descriptors and Custom Word Substitutes Vocabulary list in the <i>Relay Voice Descriptors</i> part of this section. Press <b>[*]</b> to accept entry. The "CUSTOM WORD NO." prompt is displayed. Enter the next custom word number to be substituted, or enter <b>00</b> to quit.

## System Layout Worksheets

Before programming any security system, you should first define the installation. To help you lay out a partitioned system, use the following worksheets. This will further simplify the programming process.

**NOTE:** All references in this manual for number of zones, user codes, partitions, VistaKey modules, the master partition and the event log capacity, use the VISTA-128FB's features. See page 2 for the table listing the differences between the VISTA-32FB and the VISTA-128FB control panels. All other features are identical for both panels.

### PARTITIONS

Partition #	Descriptor (4-char max)	Prim. Sub. #	Sec. Sub. #	Alpha Default Message (32-character maximum)
Partition 1				
Partition 2				
Partition 3				
Partition 4				
Partition 5				
Partition 6				
Partition 7				
Partition 8				
Keyswitch Arming Partition Assignment (1-8 or 9):				
Wireless Keypad Partition Assignment (1-8):				
Voice Module Partition Assignment (1-8):				
Use Partition Descriptor (yes/no)?				
Common Lobby Partition Assignment (1-8):				

### COMMUNICATION OPTIONS BY PARTITION

Option	Part. 1	Part. 2	Part. 3	Part. 4	Part. 5	Part. 6	Part. 7	Part. 8
Swinger Suppression Count 00-15; 00=no suppression								
Cancel Report After Disarm								
Dialer Reports for Panic (* + 1)								
Dialer Reports for Panic (# + 3)								
Dialer Reports for Panic (* + #)								
Dialer Reports for Duress								
Burglary Alarm Communications Delay (16 sec.)								

### SYSTEM DEFINITIONS BY PARTITION (enter values or yes/no)

Option	Part. 1	Part. 2	Part. 3	Part. 4	Part. 5	Part. 6	Part. 7	Part. 8
Entry Delay #1 (00, 30-225 seconds):								
Exit Delay #1 (00, 45-225 seconds):								
Entry Delay #2 (00, 30-225 seconds):								
Exit Delay #2 (00, 45-225 seconds):								
Quick Arming								
Multiple Alarms per Arming								
Console Panic for Zone 995 (* + 1)								
Console Panic for Zone 996 (# + 3)								
Console Panic for Zone 999 (* + #)								
Allow Sign-on (GOTO function)								
Non-Bypassable Zone (001-128)								
Bell 1 Sounder Duration (2 min. increments)								
Bell 2 & Aux Relay Sounder Duration for (2 min. incr.)								
Console Annunciation During Entry (3 beeps or continuous)								
Console Annunciation During Exit								
Bell 1 Confirmation of Arming Ding								
Bell 2 & Aux Relay 1 Confirmation of Arming Ding								
Chime on Bell 1								
Chime on Bell 2 & Aux Relay								
Access Control Relay (field 1*76)								
Affects Lobby (check partitions that apply)								
Arms Lobby (check partitions that apply)								
Display Fire Alarms of Other Partitions								
Display Burg & Panic Alarms of Other Partitions								
Display Troubles of Other Partitions								



**ACCESS CODES & USER DEFINITIONS FOR PARTITIONS 3 & 4**

4-digit Security Code	Access Group 0; 1-8	Partition 3					Partition 4				
		3-Digit User #	Auth. Level	Open/Close	RF Key	Global Arm	3-Digit User #	Auth. Level	Open/Close	RF Key	Global Arm

**ACCESS CODES & USER DEFINITIONS FOR PARTITIONS 5 & 6**

4-digit Security Code	Access Group 0; 1-8	Partition 5					Partition 6				
		3-Digit User #	Auth. Level	Open/Close	RF Key	Global Arm	3-Digit User #	Auth. Level	Open/Close	RF Key	Global Arm

**ACCESS CODES & USER DEFINITIONS FOR PARTITIONS 7 & 8**

4-digit Security Code	Access Group 0; 1-8	Partition 7					Partition 8				
		3-Digit User #	Auth. Level	Open/Close	RF Key	Global Arm	3-Digit User #	Auth. Level	Open/Close	RF Key	Global Arm

Authority Levels: 1=Master (arm, disarm, bypass, and/or modify lower level users)  
 2=Manager (arm, disarm, bypass, and/or modify lower level users)  
 3=Operator A (arm, disarm, bypass)  
 4=Operator B (arm, disarm)  
 5=Operator C (arm, disarm only if system was armed with this code)  
 6=Duress code (arm, disarm, triggers silent panic alarm)



**ZONE DEFINITION FOR ZONES 001-025**

Zone No.	Zone Type	Partition 1-8	Input Type	Access Point	Serial # / Loop	Bell/Relay Activation	Report Code	Zone Information & Alpha Descriptor (3 words max.)
1								
2								
3								
4								
5								
6								
7								
8								
9								
10								
11								
12								
13								
14								
15								
16								
17								
18								
19								
20								
21								
22								
23								
24								
25								

**ZONE DEFINITION FOR ZONES 026-050**

Zone No.	Zone Type	Partition 1-8	Input Type	Access Point	Serial # / Loop	Bell/Relay Activation	Report Code	Zone Information & Alpha Descriptor (3 words max.)
26								
27								
28								
29								
30								
31								
32								
33								
34								
35								
36								
37								
38								
39								
40								
41								
42								
43								
44								
45								
46								
47								
48								
49								
50								

**ZONE DEFINITION FOR ZONES 051-075**

Zone No.	Zone Type	Partition 1-8	Input Type	Access Point	Serial # / Loop	Bell/Relay Activation	Report Code	Zone Information & Alpha Descriptor (3 words max.)
51								
52								
53								
54								
55								
56								
57								
58								
59								
60								
61								
62								
63								
64								
65								
66								
67								
68								
69								
70								
71								
72								
73								
74								
75								

**ZONE DEFINITION FOR ZONES 076-100**

Zone No.	Zone Type	Partition 1-8	Input Type	Access Point	Serial # / Loop	Bell/Relay Activation	Report Code	Zone Information & Alpha Descriptor (3 words max.)
76								
77								
78								
79								
80								
81								
82								
83								
84								
85								
86								
87								
88								
89								
90								
91								
92								
93								
94								
95								
96								
97								
98								
99								
100								

**ZONE DEFINITION FOR ZONES 101-125**

Zone No.	Zone Type	Partition 1-8	Input Type	Access Point	Serial # / Loop	Bell/Relay Activation	Report Code	Zone Information & Alpha Descriptor (3 words max.)
101								
102								
103								
104								
105								
106								
107								
108								
109								
110								
111								
112								
113								
114								
115								
116								
117								
118								
119								
120								
121								
122								
123								
124								
125								

**ZONE DEFINITION FOR ZONES 126-128**

Zone No.	Zone Type	Partition 1-8	Input Type	Access Point	Serial # / Loop	Bell/Relay Activation	Report Code	Zone Information & Alpha Descriptor (3 words max.)
126								
127								
128								

**ZONE DEFINITIONS FOR KEYPAD PANIC ZONES 995, 996, & 999**

Zone No.	Zone Type	Enter yes/no for each partition-field *22								Bell/Relay Activation	Report Code	Zone Information & Alpha Descriptor (3 words max.)
		1	2	3	4	5	6	7	8			
995												
996												
999												

**ZONE DEFINITIONS FOR SYSTEM ZONES; 970 – 975, 988; 990 & 997**

Zone No.	Zone Type	Bell/Relay Activation	Report Code	Zone Information & Alpha Descriptor (3 words max.)
970				
971				
972				
973				
974				
975				
988				
990				
997				

**ZONE DEFINITIONS FOR RELAY SUPERVISORY ZONES 601-632**

<b>Zone No.</b>	<b>Zone Type</b>	<b>Report Code</b>	<b>Zone Information &amp; Alpha Descriptor (3 words max.)</b>	<b>Zone No.</b>	<b>Zone Type</b>	<b>Report Code</b>	<b>Zone Information &amp; Alpha Descriptor (3 words max.)</b>
601				617			
602				618			
603				619			
604				620			
605				621			
606				622			
607				623			
608				624			
609				625			
610				626			
611				627			
612				628			
613				629			
614				630			
615				631			
616				632			



**ZONE DEFINITIONS FOR SUPERVISORY OF ECP DEVICE ZONES 800-830**

Zone No.	Zone Type	Report Code	Zone Information & Alpha Descriptor (3 words max.)	Zone No.	Zone Type	Report Code	Zone Information & Alpha Descriptor (3 words max.)
800				816			
801				817			
802				818			
803				819			
804				820			
805				821			
806				822			
807				823			
808				824			
809				825			
810				826			
811				827			
812				828			
813				829			
814				830			
815							

Zone Types			
00=zone not used	06=24-hour silent	17=waterflow	23=no alarm response
01=entry/exit 1	07=24-hour audible	18=supervisory	27=access control
02=entry/exit 2	08=24-hour auxiliary	19=24-hour trouble	28=MLB supervision
03=perimeter	09=supervised fire	20=arm stay	29=momentary on exit
04=interior (follower)	10=interior (delay)	21=arm away	
05=day/night burglary	16=fire w/verification	22=disarm	

Input Types		Bells/Auxiliary Relay Activation	
00=not used	08=right loop dip switch poll loop	0=none	4=auxiliary relay
01=hardwired	09=keypad input	1=bell 1	5=bell 1 & auxiliary relay
03=supervised RF transmitter	10=PassPoint ACS input	2=bell2	6=bell 2 & auxiliary relay
04=unsupervised RF transmitter	11=VistaKey door status monitor	3=bells 1 & 2	7=bells 1 & 2 & auxiliary relay
05=RF button transmitter	12=VistaKey request to exit		
06=serial number polling loop	13=VistaKey general purpose		
07=Dip switch-type polling loop			

## Output Devices Worksheets

**Applicable only if relays (4204/4204CF), FSA Modules, or V-Plex are used.**

**Output Devices** – Programmed in the #93 Menu Mode in the Output Programming Section. Fill in the required data on the worksheet below and follow the procedure in the installation instructions as you enter the data during the displays and prompts that appear in sequence.

- Notes:**
1. For 4204/4204CF and FSA, the Device Programming section must be programmed for the device address. Set the DIP switches on the device for that address.
  2. For V-Plex, devices must be programmed in the Zone Programming section
  3. You may use up to 20 V-Plex (polling loop) outputs (e.g., 4101SN) in the system. Also, if you are using ZONE # for the START of a V-Plex output and want that output to stop when the same zone restores, the STOP programming **MUST BE BLANK**.
  4. An Event is required if you are using a Zone List, Zone Number, or Zone Types 17 or 18 to trigger an output.

OUTPUT DEV #	A	S T A R T			S T O P			Relay Group	Restrict	0=V-Plex 1=4204 3=FSA	V-Plex Zone # or Dev Add 4204 or FSA	Relay # for 4204 or LED # for FSA
		EV/ZL	Zone	ZT / P	ZL	ZT / P						
1												
2												
3												
4												
5												
6												
7												
8												
9												
10												
11												
12												
13												
14												
15												
16												
17												
18												
19												
20												

**OUTPUT DEVICES WORKSHEET (cont'd)**

OUTPUT DEV #	A	S T A R T			S T O P			Relay Group	Restrict	0=V-Plex 1=4204 3=FSA	V-Plex Zone # or Dev Add 4204 or FSA	Relay # for 4204 or LED # for FSA
		EV/ZL	Zone	ZT / P	ZL	ZT / P						
21												
22												
23												
24												
25												
26												
27												
28												
29												
30												
31												
32												
33												
34												
35												
36												
37												
38												
39												
40												
41												
42												
43												
44												
45												

**OUTPUT DEVICES WORKSHEET (cont'd)**

OUTPUT DEV #	A	S T A R T			S T O P			Relay Group	Restrict	0=V-Plex 1=4204 3=FSA	V-Plex Zone # or Dev Add 4204 or FSA	Relay # for 4204 or LED # for FSA
		EV/ZL	Zone	ZT / P	ZL	ZT / P						
46												
47												
48												
49												
50												
51												
52												
53												
54												
55												
56												
57												
58												
59												
60												
61												
62												
63												
64												
65												
66												
67												
68												
69												
70												

**OUTPUT DEVICES WORKSHEET (cont'd)**

OUTPUT DEV #	A	S T A R T			S T O P			Relay Group	Restrict	0=V-Plex 1=4204 3=FSA	V-Plex Zone # or Dev Add 4204 or FSA	Relay # for 4204 or LED # for FSA
		EV/ZL	Zone	ZT / P	ZL	ZT / P						
71												
72												
73												
74												
75												
76												
77												
78												
79												
80												
81												
82												
83												
84												
85												
86												
87												
88												
89												
90												
91												
92												
93												
94												
95												
96												

**A = DEVICE ACTION** 0 = No Response; 1 = Close for 2 sec; 2 = Close and stay closed; 3 = Pulse on and off; 4 = Toggle alternately between START and STOP events

**EV = EVENT** 0 = Not used; 1 = Alarm; 2 = Fault; 3 = Trouble; 4 = Restore

**ZL = ZONE LIST** 01-15, 00 = Not Used

"START" ZONE LIST: Upon alarm, fault, trouble or restore of ANY zone in this list, device action will START.

"STOP" ZONE LIST: Upon restore of ALL zones on this list, device action will STOP. It need not be same list as used for START.

**ZT = ZONE TYPE/SYSTEM OPERATION**

**Choices for Zone Type/System Operation are:**

00 = No Response (Not Used)	23 = No Alarm Response	42 = System Battery Low
01 = Entry/Exit #1	27 = Access Point (allows more than one relay to be controlled by activation if access point request)	43 = Communication failure
02 = Entry/exit #2	28 = MLB Supervision	44 = RF Low Battery
03 = Perimeter	29 = Momentary Exit	45 = Polling Loop Failure
04 = Interior Follower	30 = On Second Code + Off	47 = Console Failure
05 = Trouble Day/Alarm Night	31 = End of Exit Time	51 = RF Receiver Failure
06 = 24-Hr. Silent	32 = Start of Entry Time	52 = Kissoff
07 = 24-Hr. Audible	33 = Any Burglary Alarm	54 = Fire Zone Reset
08 = 24-Hr. Auxiliary	34 = Code + [#] + 71	55 = Disarm + 1 Minute
09 = Fire Alarm or Trouble	35 = Code + [#] + 72	56 = XX Minutes (enter XX in field 1*74) *
10 = Interior W/Delay	36 = At Bell Timeout **	57 = YY Seconds (enter YY in field 1*75) *
16 = Fire With Verification	37 = 2 Times Bell Timeout **	58 = Duress
17 = Waterflow*****	38 = Chime	60 = Audio Alarm Verification (must be selected for both START and STOP operation)
18 = Fire Supervisory	39 = Fire Alarm	61 = Code + [#] + 67
19 = 24-Hour Trouble	40 = Bypassing	62 = Bell 2 Timeout
20 = Arming-STAY***	41 = AC Power Fail	63 = Auxiliary Relay Timeout
21 = Arming-AWAY****		
22 = Disarming (Code + Off)		

\* Stop condition only  
 \*\* Or at disarming, whichever occurs earlier  
 \*\*\* The output also activates when the partition is armed in the INSTANT mode  
 \*\*\*\* The output also activates when the partition is armed in the MAXIMUM mode  
 \*\*\*\*\* Use an event of fault or alarm as the START option

**P = PARTITION No.** 1-8, 0 = Any

**ZONE LISTS FOR OUTPUT DEVICES** – Programmed in the #93 Menu Mode in the Output Programming Section. Fill in the required data on the worksheet below and follow the procedure shown earlier in this *Programming Guide* as you enter the data during the displays and prompts that appear in sequence. Up to 15 zone lists may be created

**Note:** Record desired zone numbers below. More or fewer boxes than shown may be needed, as any list may include *any* or *all* of system's zone numbers.

**Zone List 1:** Started or stopped by zone numbers (enter 000 to end entries).

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

**Zone List 2:** Started or stopped by zone numbers (enter 000 to end entries).

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

**Zone List 3:** Started or stopped by zone numbers (enter 000 to end entries).

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

**Zone List 4:** Started or stopped by zone numbers (enter 000 to end entries).

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

**Zone List 5:** Started or stopped by zone numbers (enter 000 to end entries).


**Zone List 6:** Started or stopped by zone numbers (enter 000 to end entries).


**Zone List 7:** Started or stopped by zone numbers (enter 000 to end entries).


**Zone List 8:** Started or stopped by zone numbers (enter 000 to end entries).


**Zone List 9:** Started or stopped by zone numbers (enter 000 to end entries).


**Zone List 10:** Started or stopped by zone numbers (enter 000 to end entries).


**Zone List 11:** Started or stopped by zone numbers (enter 000 to end entries).


**Zone List 12:** Started or stopped by zone numbers (enter 000 to end entries).


**Zone List 13:** Started or stopped by zone numbers (enter 000 to end entries).


**Zone List 14:** Started or stopped by zone numbers (enter 000 to end entries).


**Zone List 15:** Started or stopped by zone numbers (enter 000 to end entries).


## Scheduling Menu Prompts

To program schedules, enter Scheduling program mode by pressing **[User Code] + # + 80** to display the first choice of the menu driven programming functions. **NOTE:** Only users with an Installer or Master level user code may enter the #80 mode. Press **0** (NO) or **1** (YES) in response to the displayed menu selection. Pressing **0** will display the next choice in sequence. Menu selections are as follows:

PROMPT	EXPLANATION
<div style="border: 1px solid black; padding: 2px;">                     Time Window ?                      1 = YES 0 = NO 0                 </div>	For defining up to 20 time windows each with a start and a stop time programmed by entering the hours and minutes.
<div style="border: 1px solid black; padding: 2px;">                     O/C Schedules ?                      1 = YES 0 = NO 0                 </div>	For defining the daily open and close schedules for the 8 partitions. Each partition can be programmed with an opening and closing window for each day of the week and holidays.
<div style="border: 1px solid black; padding: 2px;">                     Holidays ?                      1 = YES 0 = NO 0                 </div>	For defining up to 16 holidays for which partitions they apply.
<div style="border: 1px solid black; padding: 2px;">                     Timed Events ?                      1 = YES 0 = NO 0                 </div>	For defining up to 20 time driven events with the following parameters: <ul style="list-style-type: none"> <li>• Time window</li> <li>• Action desired</li> <li>• Action specifier</li> <li>• Activation time</li> <li>• Days of the week</li> </ul>
<div style="border: 1px solid black; padding: 2px;">                     Access Sched. ?                      1 = YES 0 = NO 0                 </div>	For defining the limitation of access schedules for the user codes. Each schedule can be programmed with two window for each day of the week and holidays

### #80 & #81 MENU MODE KEY COMMANDS

The following is a list of commands used while in the Menu mode.

#80 or #81	Enters Menu mode
[*]	Serves as ENTER key. Press to have keypad accept entry.
[#]	Backs up to previous screen.
0	Press to answer NO.
1	Press to answer YES.
01-09	All data entries are either 2-digit entries.
00	Exits Menu mode, returns to normal operation mode when entered at the first question for each category.



## Scheduling Worksheets

**Time Windows Definitions Worksheet.** The system provides 20 time windows that are defined with start and stop times. They are programmed in the #80 Menu Mode. Fill in the required data on the worksheet below and follow the procedure in the installation instructions as you enter the data during the displays and prompts that appear in sequence.

Time Window Number	Start Time (HH:MM)	Stop Time (HH:MM)
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		

(Keep this worksheet handy, as you will be asked for a given time window number later in this section).



Because the time windows are shared among all partitions, it is important to make sure that changing a time window does not adversely affect desired actions in other partitions.

**Daily Open/Close Schedule Worksheet:** Using the time windows previously defined, fill in the required data on the worksheet below and follow the procedure in the installation instructions as you enter the data during the displays and prompts that appear in sequence.

Part	Mon		Tues		Wed		Thur		Fri		Sat		Sun		Hol	
	Op	Cl	Op	Cl	Op	Cl	Op	Cl	Op	Cl	Op	Cl	Op	Cl	Op	Cl
1																
2																
3																
4																
5																
6																
7																
8																

**Holiday Schedule Worksheet:** The system provides up to 16 holidays that can be assigned for the system. Each holiday can be assigned to any combination of partitions. Fill in the required data on the worksheet below and follow the procedure in the installation instructions as you enter the data during the displays and prompts that appear in sequence.

HOL	Partition								
	Month/Day	1	2	3	4	5	6	7	8
1	/								
2	/								
3	/								
4	/								
5	/								
6	/								
7	/								
8	/								
9	/								
10	/								
11	/								
12	/								
13	/								
14	/								
15	/								
16	/								

**Time-Driven Event Worksheet:** The system provides up to 20 time-driven events that can be programmed for the system. Fill in the required data on the worksheet below and follow the procedure in the installation instructions as you enter the data during the displays and prompts that appear in sequence.

Sched Num.	Time Window	Day(s)									Action Desired	Action Specifier	Activation Time
		M	T	W	T	F	S	S	H				
1													
2													
3													
4													
5													
6													
7													
8													
9													
10													
11													
12													
13													
14													
15													
16													
17													
18													
19													
20													

Below is a list of the "Action" codes (desired actions) used when programming time-driven events. Note that these codes are independent of the "relay codes" programmed during the #93 Menu Mode—Output Programming mode. **If using Time Driven Events, the following menu items must first be programmed using #93 Menu Mode - Output Programming:**

Enter Relay No. (reference identification number)	Zone No. (V-Plex)
Relay Group (if applicable)	ECP Address (4204/4204CF or FSA)
Restriction	Relay No. (4204/4204CF)
Relay Type (V-Plex, 4204/4204CF, or FSA)	LED No. (FSA)

**Relay commands:**

Action Specifier for commands 01-05 is Relay No.; Action Specifier for commands 06-10 is Relay Group No.

- 01 = Relay On
- 02 = Relay Off
- 03 = Relay Close for 2 seconds
- 04 = Relay Close XX minutes (field 1\*74)
- 05 = Relay Close YY seconds (field 1\*75)
- 06 = Relay Group On
- 07 = Relay Group Off
- 08 = Relay Group Close for 2 seconds
- 09 = Relay Group Close XX minutes (field 1\*74)
- 10 = Relay Group Close YY seconds (field 1\*75)

**Arm/Disarm commands:**

Action Specifier for commands 20-24 is Partition(s). Activation times 1 (Beginning), 2 (End), 3 (During) are the only valid choices for auto-arming and disarming functions.

- 20 = Arm-Stay
- 21 = Arm Away
- 22 = Disarm
- 23 = Force Arm Stay (Auto-bypass faulted zns)
- 24 = Force Arm Away (Auto-bypass faulted zns)

**Bypass commands:**

Action Specifier for commands 30-31 is Zone List #, Activation times 1 (Beginning), 2 (End), 3 (During) are the only valid choices for bypass commands.

- 30 = Auto bypass - Zone list
- 31 = Auto unbypass - Zone list

**Open/Close Windows:**

Action Specifier for commands 40-41 is Partition(s), for 42 is Access Group and for 50 no specifier is programmed. Activation time 3 (During) is the only valid choice for these commands.

- 40 = Enable Opening Window
- 41 = Enable Closing Window
- 42 = Enable Access Window
- 50 = Off-Normal Reminder (Starts local keypad beeping if off-normal condition exists)

**Access Control Commands**

Action Specifier for commands 55-60 is Access Point, for 61-66 is Group, for 67-72 is Partition, and for 73-74 is Trigger.

- 55 = Access Point Grant
- 56 = Access Point Grant with Override
- 57 = Access Point Protect
- 58 = Access Point Bypass
- 59 = Access Point Lock
- 60 = Access Point Exit
- 61 = Access Point Group Grant
- 62 = Access Point Group Grant with Override
- 63 = Access Point Group Protect
- 64 = Access Point Group Bypass
- 65 = Access Point Group Lock
- 66 = Access Point Group Exit
- 67 = Access Point Partition Grant
- 68 = Access Point Partition Grant with Override
- 69 = Access Point Protect by Partition
- 70 = Access Point Bypass by Partition
- 71 = Access Point Lock by Partition
- 72 = Access Point Exit by Partition
- 73 = Access Point Trigger On
- 74 = Access Point Trigger Off

**Additional Commands**

Action Specifier for command 78 is Group.

- 78 = Access Point Group Disable

**Activation time:**

Refers to when the action is to take place relative to the time window.

- 1 = Beginning of time window
- 2 = End of time window
- 3 = During time window active period only (On at beginning of window, off at end).

**Limitation of Access Worksheet** The system provides up to 8 Access Schedules that can be programmed for the system. Fill in the required data on the worksheet below and follow the procedure in the installation instructions as you enter the data during the displays and prompts that appear in sequence.

Acc Sch	Mon		Tues		Wed		Thurs		Fri		Sat		Sun		Hol	
	W1	W2	W1	W2	W1	W2	W1	W2	W1	W2	W1	W2	W1	W2	W1	W2
1																
2																
3																
4																
5																
6																
7																
8																

**Temporary Schedule #81 Menu Mode.** The system provides a Temporary Schedule for each partition. Enter the temporary scheduling mode by pressing **[Installer Code] + [#] + [81]**. Fill in the required data on the worksheet below and follow the procedure in the installation instructions as you enter the data during the displays and prompts that appear in sequence.

Partition/Windows		Mon	Tue	Wed	Thu	Fri	Sat	Sun
1	<b>Disarm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							
	<b>Arm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							
2	<b>Disarm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							
	<b>Arm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							
3	<b>Disarm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							
	<b>Arm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							
4	<b>Disarm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							
	<b>Arm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							

Partition/Windows		Mon	Tue	Wed	Thu	Fri	Sat	Sun
5	<b>Disarm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							
	<b>Arm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							
6	<b>Disarm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							
	<b>Arm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							
7	<b>Disarm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							
	<b>Arm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							
8	<b>Disarm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							
	<b>Arm Window</b>							
	Start Time HH:MM							
	Stop Time HH:MM							

# VISTA-32FB Summary of Connections Diagram

## TEST BURGLARY SYSTEM WEEKLY

## WARNING: OWNER'S INSTRUCTION NOTICE NOT TO BE REMOVED

THIS EQUIPMENT SHOULD BE INSTALLED IN ACCORDANCE WITH THE NATIONAL FIRE PROTECTION ASSOCIATION'S STANDARD 72 (NATIONAL FIRE PROTECTION ASSOC. BATTERY MARCH PARK, QUINCY, MA, 02269). PRINTED INFORMATION DESCRIBING PROPER INSTALLATION, OPERATION, TESTING, MAINTENANCE AND REPAIR SERVICE IS TO BE PROVIDED WITH THIS EQUIPMENT.

**NOTE:** As shipped, Vista-32FB is suitable for UL Commercial Fire Installations. Cabinet supports up to 14AH Batteries. Use Vista-ULKT Cabinet Kit to house up to 34.4AH Batteries. Also use this kit along with 1451 Transformer for UL Listed Commercial Burglary Installations.

**Assembled in Mexico**





**WARNING:** THIS UNIT MAY BE PROGRAMMED TO INCLUDE AN ALARM VERIFICATION FEATURE THAT WILL RESULT IN A DELAY OF THE SYSTEM ALARM SIGNAL FROM THE INDICATED FIRE CIRCUITS. THE TOTAL DELAY (CONTROL UNIT PLUS SMOKE DETECTORS) SHALL NOT EXCEED 60 SECONDS. NO OTHER INITIATING DEVICES SHALL BE CONNECTED TO THESE CIRCUITS UNLESS APPROVED BY THE LOCAL AUTHORITY HAVING JURISDICTION.

CIRCUIT CONTROL UNIT	SMOKE DETECTOR (ZONE)	DELAY-SEC	MODEL	DELAY-SEC

THE DELAY TIME MARKED ON THE INSTALLED DETECTOR(S) IS TO BE USED

**BATTERY TABS** [BLK] [RED]

Connected to 12V, 7AH min/34.4AH max. See instructions for required capacity. Float charging voltage: 13.7VDC. Battery normally need not be replaced for at least 3 yrs.

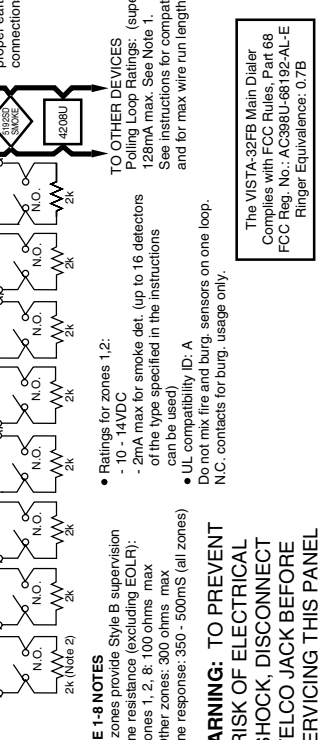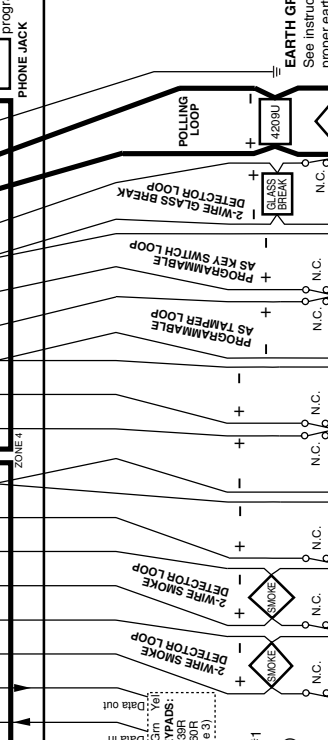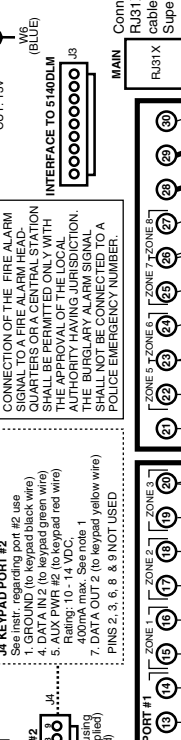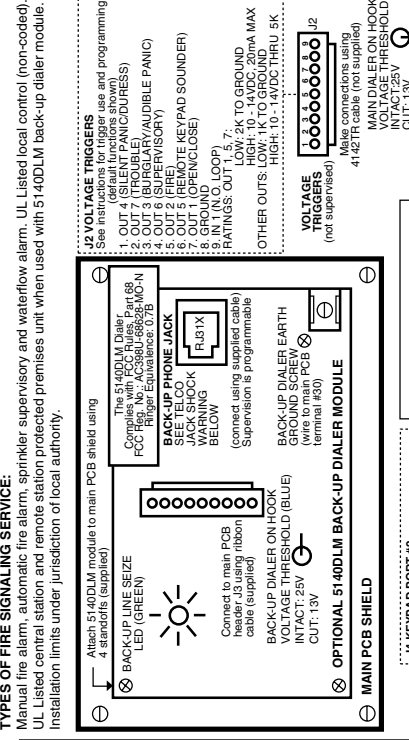

# VISTA-32FB SUMMARY OF CONNECTIONS

The VISTA-32FB Main Dialer Complies with FCC Rules, Part 68 FCC Reg. No.: AC398U-68192-AL-E Ringer Equivalence: 0.7B

# VISTA-128FB Summary of Connections Diagram

## TEST BURGLARY SYSTEM WEEKLY

### WARNING: OWNER'S INSTRUCTION NOTICE NOT TO BE REMOVED

This equipment should be installed in accordance with the National Fire Protection Association's Standard 72 (National Fire Protection Assoc., Batterymarch Park, Quincy, MA. 02269). Printed information describing proper installation, operation, testing, maintenance and repair service is to be provided with this equipment.

 
**WARNING:**  
THIS UNIT MAY BE PROGRAMMED TO INCLUDE AN ALARM VERIFICATION FEATURE THAT WILL RESULT IN A DELAY OF THE SYSTEM ALARM SIGNAL FROM THE INDICATED FIRE CIRCUITS. THE TOTAL DELAY (CONTROL UNIT PLUS SMOKE DETECTORS) SHALL NOT EXCEED 60 SECONDS. NO OTHER INITIATING DEVICES SHALL BE CONNECTED TO THESE CIRCUITS UNLESS APPROVED BY THE LOCAL AUTHORITY HAVING JURISDICTION.

CIRCUIT (ZONE)	CONTROL UNIT DELAY-SEC	SMOKE DETECTOR MODEL	DELAY-SEC

THE DELAY TIME MARKED ON THE INSTALLED DETECTOR(S) IS TO BE USED





Connect to 12V, 12AH min/34.4AH max lead acid batteries using cables supplied. See instructions for required capacity. Float charging voltage: 13.7VDC. Battery normally need not be replaced for at least 3 yrs.




### TYPES OF FIRE SIGNALING SERVICE:

Manual fire alarm, automatic fire alarm, sprinkler supervisory and waterflow alarm. UL Listed local control (non-coded). UL Listed central station and remote station protected premises unit when used with 5140DLM back-up dialer module. Installation limits under jurisdiction of local authority.

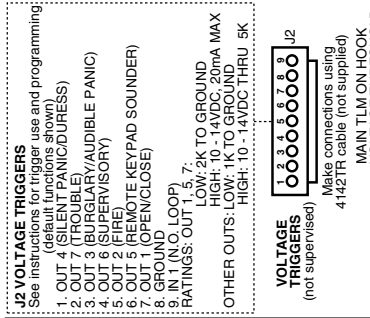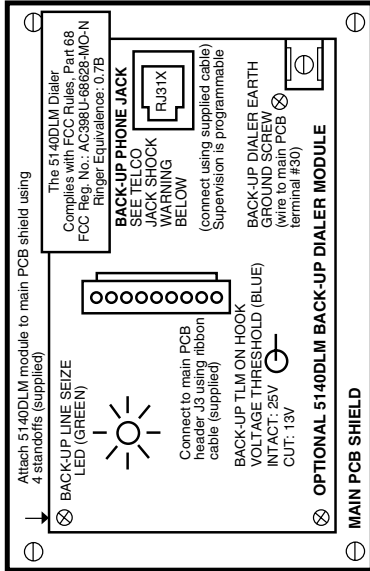

**CONNECTION OF THE FIRE ALARM SIGNAL TO A FIRE ALARM HEAD-QUARTERS OR A CENTRAL STATION SHALL BE PERMITTED ONLY WITH THE APPROVAL OF THE LOCAL AUTHORITY HAVING JURISDICTION. THE BURGLARY ALARM SIGNAL SHALL NOT BE CONNECTED TO A POLICE EMERGENCY NUMBER.**

 

**WARNING:**  
TO PREVENT RISK OF ELECTRICAL SHOCK, DISCONNECT TELCO JACK BEFORE SERVICING THIS PANEL

**EARTH GROUND**  
See instructions for proper earth ground connections

**NOTES:**  
NOTE 1: Combined standby current drawn from aux pwr #1, aux pwr #2 and polling loop cannot exceed 1.0A. The combined alarm current drawn from aux pwr #1, aux pwr #2, polling loop, bell 1 and bell 2 cannot exceed 2.3A.  
NOTE 2: 2k EOLR is Ademco model 610-7  
NOTE 3: See instructions on setting keypads and wire run length restrictions. Keypad color subject to approval of local authority.

**ZONE 1-8 NOTES**  
• All zones provide Style B supervision  
• Zone resistors (excluding EOLR):  
- 16 Ohms max.  
- Other zones: 300 ohms max.  
• Zone response: 350 - 500ms (all zones)

**TO OTHER DEVICES**  
Polling Loop (Supervised)  
Ratings:  
- 120mA max. See note 1.  
- 100mA max. See note 1.  
- 100mA max. See note 1.  
Do not mix fire and burg. sensors on one loop.  
N.C. contacts for burg. usage only.

The VISTA-128 Main Dialer  
Complies with FCC Rules, Part 68  
FCC Reg. No.: AC398U-68192-AL-E  
Ringer Equivalence: 0.7B

# Honeywell

**165 Eileen Way, Syosset, New York 11791**

Copyright © 2004 Honeywell International, Inc.

[www.honeywell.com/security](http://www.honeywell.com/security)



**K3840V3 6/04 Rev A**