
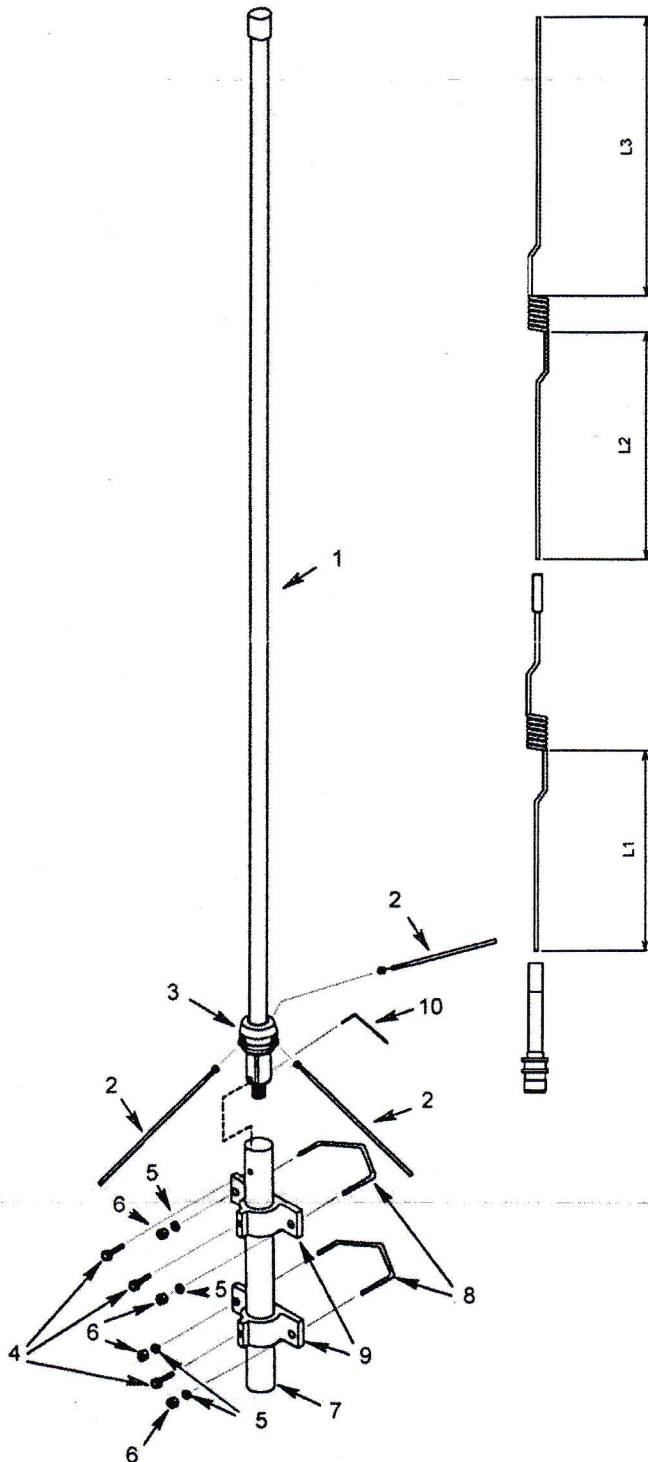


TXAB40070 UHF BASE STATION ANTENNA

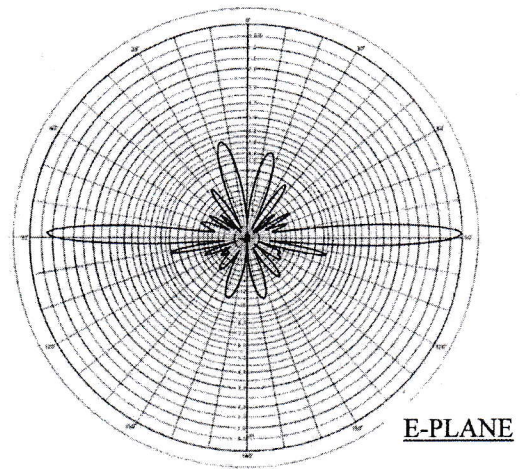

CUTTING CHART

| Freq. (MHz) | L1 | L2 | L3 |
|------------------|-----|-----|-----|
| | mm | mm | mm |
| 400 | 445 | 340 | 485 |
| 405 | 445 | 340 | 485 |
| 410 | 445 | 340 | 455 |
| 415 | 445 | 340 | 455 |
| 420 | 445 | 340 | 415 |
| 425 | 445 | 340 | 415 |
| 430 | 445 | 340 | 395 |
| 435 | 440 | 335 | 390 |
| 440 | 440 | 335 | 390 |
| 442 | 430 | 335 | 390 |
| 444 | 390 | 335 | 390 |
| 448 | 380 | 325 | 385 |
| 452 | 370 | 325 | 385 |
| 457 | 360 | 320 | 385 |
| 461 | 355 | 315 | 380 |
| 466 | 345 | 310 | 380 |
| 470 | 335 | 310 | 380 |

PARTS LIST

| NO | DESCRIPTION | Q'TY |
|----|------------------------------|------|
| 1 | OUTER TUBE | 1 |
| 2 | RADIALS & NUT, SPRING WASHER | 3 |
| 3 | MAST | 1 |
| 4 | LOCKING SCREW | 3 |
| 5 | LOCKING WASHER | 4 |
| 6 | NUT | 4 |
| 7 | SUPPORTING PIPE | 1 |
| 8 | U-BOLT | 2 |
| 9 | BRACKET | 2 |
| 10 | WRENCH | 1 |