


AT-CAB AT-CAS Surveillance Cabinet

Installation Guide

Rev.: 1.2


Document part no.: 625034802G

7cbÚ[i fU]cb > Event > Event
 settings. Please refer to the
 camera.

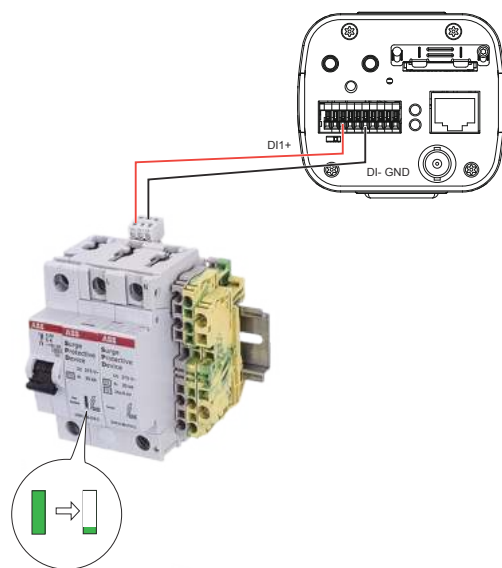


Camera Grounding Connection



The diagram shows the internal components of the camera, including the surge protector and the grounding connection.

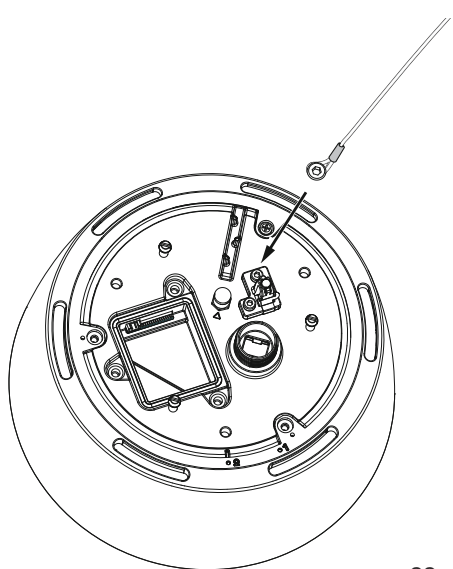

Ö[] } ^&çk@^! *! [~ } ä! , ä! ^! k [k@^! & []] ^! ! • & ! ^ , ! @ [! ^ [] } k@^! & ä! } ^! ä! [! ! ä! ! !

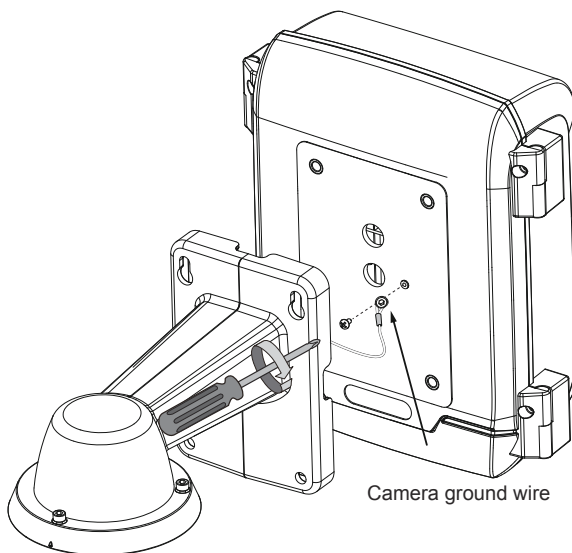


Ö[] } ^&çkæ||! *! [~ } ä! , ä! ^! k ä! } & ! ~ ä! } *! k@ [• ^! - ! [{ k@^! • ~ ! *! ^!] ! [c^&c [! • D! k [! ^!] [• ä! [} ! [] } k@^! & ä! } ^! ä! door, to the terminal block, and then to the external ground.

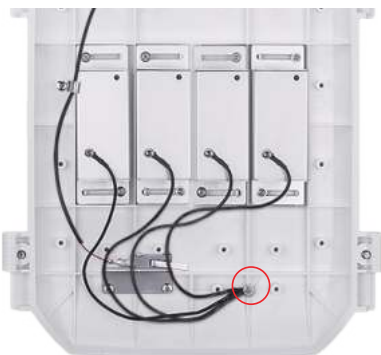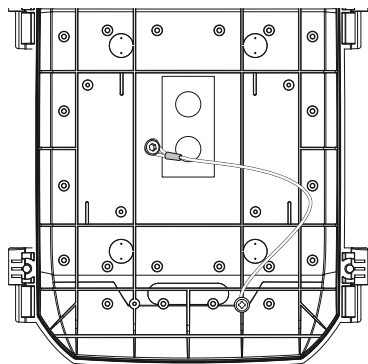


Installing Camera


either on the right or the left side of the cabinet. Align and install the cabinet door.

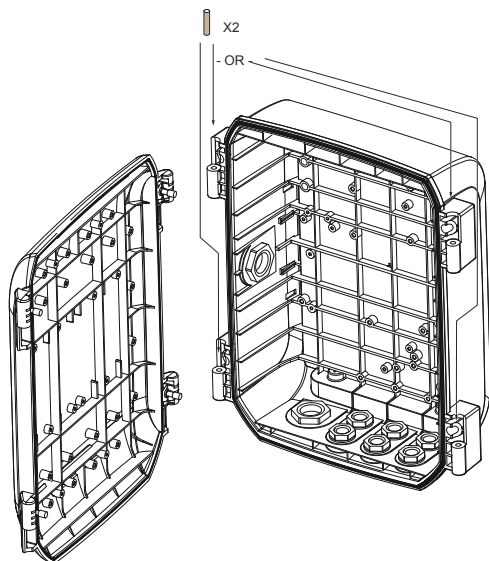


Pass the Ethernet and I/O combo cables through the M20 cable glands, and into the cabinet. You may then install the camera. Refer the camera's documentation for information.

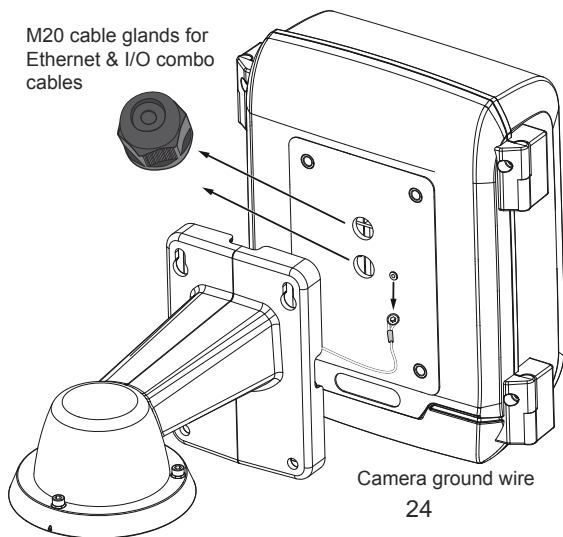


Ú^&~!^!c@^!VHÉ!æ}cÉcæ {]^!^!&!^ , •! []!c@^!&æ!}^c!á [[!É!

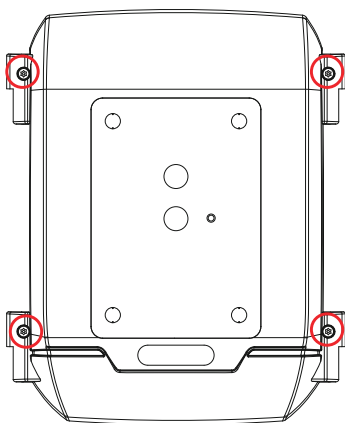

Q-!æ!•~}!•@!è^!á!^!•!æ []!è^!á!è!}•cæ||!c@^!^!•~}!•@!è^!á!^!~!^!c!c^}á!} *!|[] *!^!á *^!^![-!á!c!c [!, c!á}c [!c@^! [] ^}!} *•! []!Á
the sides of the mounting plate.

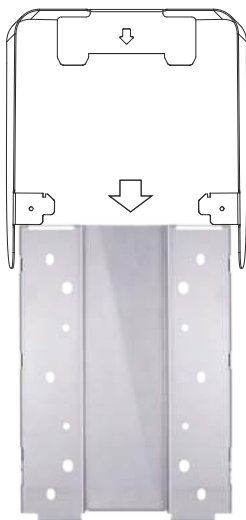

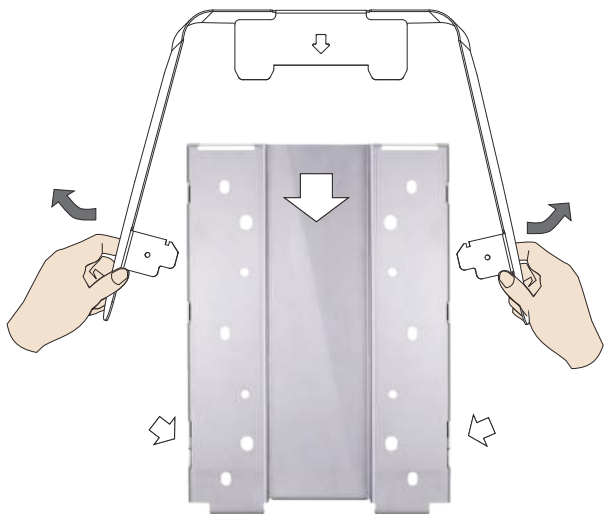

This page is intentionally left blank.

This page is intentionally left blank.