

<b>Codigo de Evento</b>	<b>Evento</b>	<b>Default SMS Header (At Most 16 Bytes)</b>
1	<b>Entrada 1 Activa</b>	In1 Active
2	<b>Entrada 2 Activa</b>	In2 Active
3	<b>Entrada 3 Activa</b>	In3 Active
9	<b>Entrada 1 Inactiva</b>	In1 Inactive
10	<b>Entrada 2 Inactiva</b>	In2 Inactive
11	<b>Entrada 3 Inactiva</b>	In3 Inactive
17	<b>Bateria Baja</b>	Low Battery
18	<b>Alimentación Baja</b>	Low Ext-Battery
19	<b>Exceso de Velocidad</b>	Speeding
20	<b>Entrada a Geo-Cerca</b>	Enter Fence N (N means the number of the fence)
21	<b>Salida de Geo-Cerca</b>	Exit Fence N (N means the number of the fence)
22	<b>Alimentación Correcta</b>	Ext-Battery On
23	<b>Corte de Alimentación</b>	Ext-Battery Cut
24	<b>Perdida de Señal GPS</b>	GPS Signal Lost
25	<b>Recuperación de señal GPS</b>	GPS Recovery
26	<b>Modo Reposo</b>	Enter Sleep
27	<b>Salida de Modo Reposo</b>	Exit Sleep
28	<b>Corte de Antena GPS</b>	GPS Antenna Cut
29	<b>Reinicio de Dispositivo</b>	Power On
31	<b>Heartbeat</b>	/
32	<b>Giro</b>	Cornering
33	<b>Rastreo por Distancia</b>	Distance
34	<b>Reply Current (Passive)</b>	Now
35	<b>Rastreo por Intervalo</b>	Interval
36	<b>Remolcado</b>	Tow
37	<b>iButton/RFID</b>	(Only for GPRS)
39	<b>Foto</b>	/
40	<b>Apagado</b>	Power Off

41	<b>Detenido</b>	Stop moving
42	<b>Moviendose</b>	Start Moving
44	<b>GSM Jamming</b>	GSM Jamming
50	<b>Temperatura Alta</b>	Temp High
51	<b>Temperatura Baja</b>	Temp Low
52	<b>Llenado de Combustible</b>	Full Fuel
53	<b>Combustible Bajo</b>	Low Fuel
54	<b>Robo de Combustible</b>	Fuel Theft
63	<b>No GSM Jamming</b>	No GSM Jamming
70	<b>Rechazo de llamada</b>	/
71	<b>Posicion por llamada</b>	/
72	<b>Autocontestado de llamada</b>	/
73	<b>Llamada espía</b>	/
78	<b>Impacto</b>	Impact
82	<b>Llenado de Combustible</b>	Fuel Filling
83	<b>Caida de Sensor Ultrasonico</b>	Ult-Sensor Drop
90	<b>Giro Brusco a la Izquierda</b>	Harsh Cornering
91	<b>Giro Brusco a la Derecha</b>	Harsh Cornering
94	<b>Salida Digital 1 Activa</b>	Out1 Active
95	<b>Salida Digital 2 Activa</b>	Out2 Active
96	<b>Salida Digital 1 Inactiva</b>	Out1 Inactive
97	<b>Salida Digital 2 inactiva</b>	Out2 Inactive
129	<b>Frenado Brusco</b>	Harsh Braking
130	<b>Aceleración Brusca</b>	Fast Accelerate
133	<b>Ralentí</b>	Idle Overtime
134	<b>Salida de Ralentí</b>	Idle Recovery
135	<b>Fatiga</b>	Fatigue Driving
136	<b>Suficiente Descanso</b>	Enough Rest