



DaHua DH-AWA6220-W Access Point Installation Quick Start-AP100

 
BOM: 3104A0UE

Tool list


The installation tools are not provided with the AP. Prepare them yourself.




Torx screwdriver




Phillips screwdriver

 

Needle-nose pliers

 


Wire stripper

 

Wire crimper

 Introduction to Installation Accessories



M3x4 security screw (provided)





M3.5 screw (provided) X 2



Mounting bracket (provided)

1


Device/mounting bracket dimensions

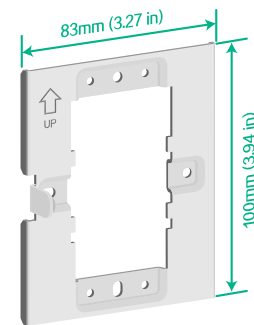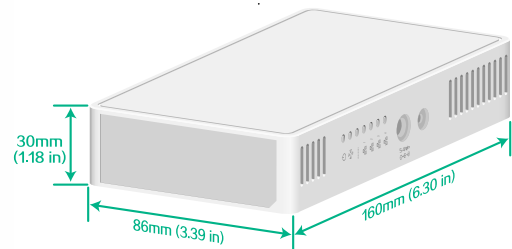


2

Installing the AP


The Pass Through ports on the rear and bottom of the AP are standard RJ-45 ports. You can connect phone cables or Ethernet cables to the Pass Through as needed.

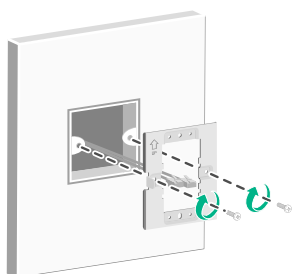

1 Use M3.5 screws to attach the mounting bracket to an electrical outlet box.

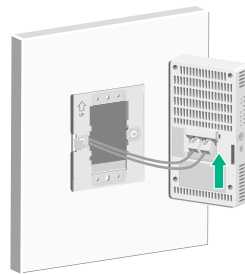


2 Connect the network cable from the box to the Uplink/PoE In port on the rear of the AP. Connect a cable to the Pass Through port on the rear of the AP as needed.

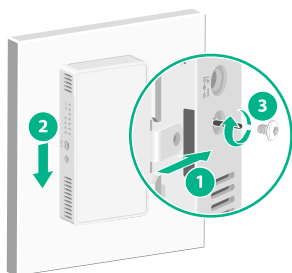

3 1. Align the mounting peg on the mounting bracket with the installation slot in the rear of the AP and insert the peg into the slot.
2. Slide down the AP so that it sits securely on the peg.
3. Fasten the M3 x 4 screw on the side panel of the AP.

3

Accessing the network

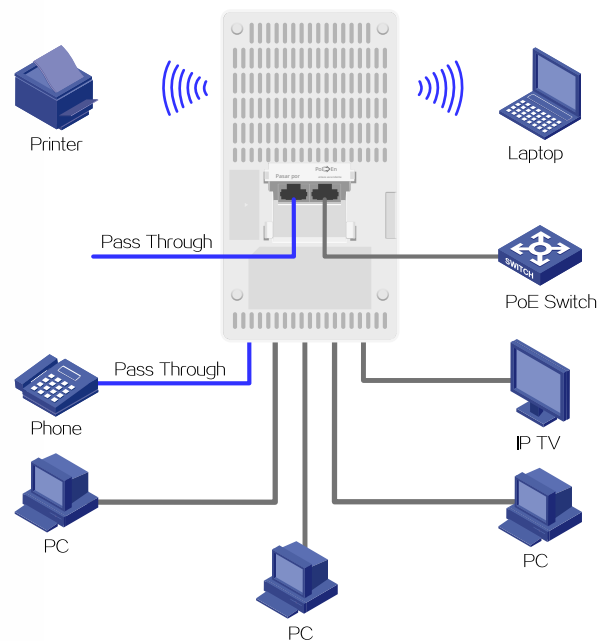


4

Connecting a power adapter



- You can supply power to the AP by using a power adapter or through 802.3af/802.3at PoE.
- The AP is not provided with a power adapter. Purchase one yourself if required.

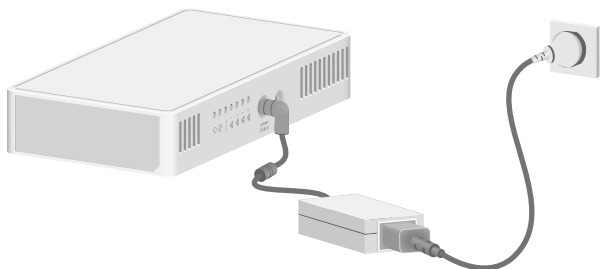

Power adapter specifications:

| Item | Specification |
|--------------|-----------------------------------|
| Input | 100 – 240V AC |
| Output | +48 ~ 54V DC \ominus — \oplus |
| Output power | \geq 16W |