

E ESQUEMA DE CONEXIONADO


GB WIRING DIAGRAM

4

LUCES SINCRONIZADAS CON SIRENA SCS1000D Y MANDO MC300

SINCHRONIZED LIGHTS WITH SCS1000D SIREN & MC300 CONTROL

- E** Cableado, interruptores y fusible NO incluidos. Se recomienda usar el interruptor SW-521 o similares.
- GB** Wiring, switches and fuse NOT included. It is recommended to use SW-521 switch or similar.

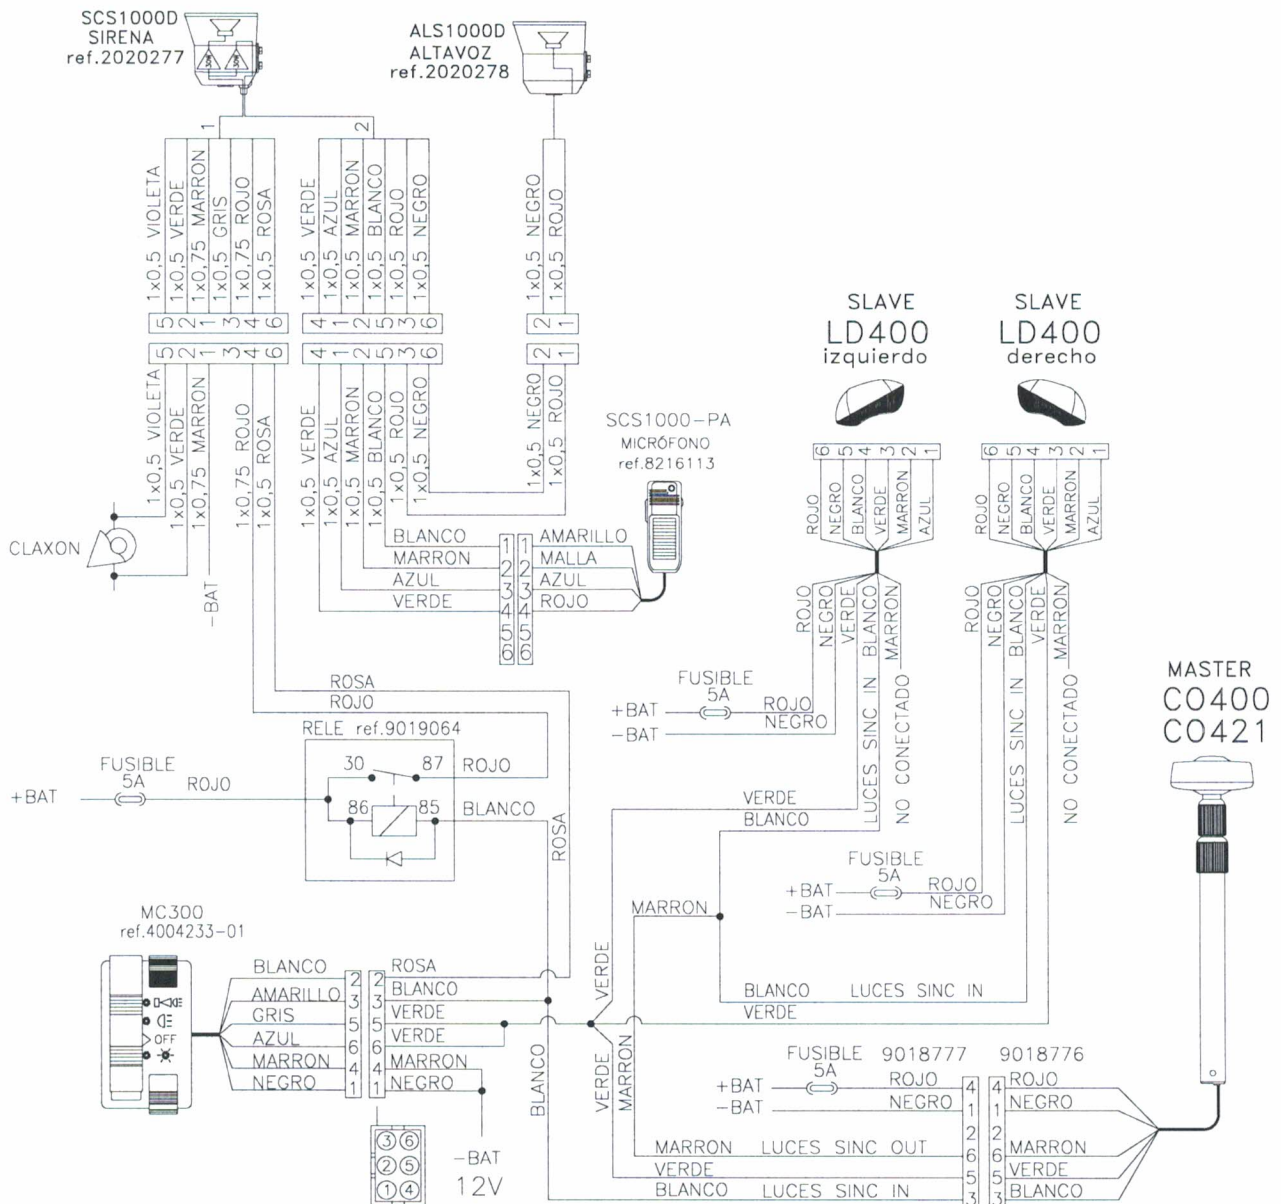

E	GB
☐ SIRENA CONTINUA - PULSANDO CLAXON CAMBIA TONO SIRENA	CONTINUOUS SIREN - PRESSING HORN CHANGE SIREN TONE
☐ INTERMITENCIA - FOCOS FRONTALES SIMULTANEOS ALTERNADOS CON MÁSTIL	FLASH - SIMULTANEOUS FRONT LIGHTS ALTERNATING WITH POLE
OFF OFF	OFF
* CRUCERO	CRUISE
☐ PULSADOR AMARILLO - ACTIVA FOCOS FRONTALES, MÁSTIL O AMBOS	YELLOW PUSH-BUTTON - ACTIVATE FRONT LIGHTS, POLE OR BOTH

E	GB	E	GB
ALTAVOZ	SPEAKER	LUCES SINCRONIZADAS (SALIDA)	SYNCHRONIZED LIGHTS (OUT)
AMARILLO	YELLOW	MALLA	MESH
AZUL	BLUE	MARRON	BROWN
BATERIA	BATTERY	MICROFONO	MICROPHONE
BLANCO	WHITE	NEGRO	BLACK
CLAXON	HORN	NO CONECTADO	NOT CONNECTED
DERECHO	RIGHT	PULSADOR	PUSH-BUTTON
GRIS	GREY	ROJO	RED
FUSIBLE	FUSE	ROSA	ROSE
IZQUIERDO	LEFT	VERDE	GREEN
LUCES SINCRONIZADAS (ENTRADA)	SYNCHRONIZED LIGHTS (IN)	VIOLETA	VIOLET