



FireNET FN-DAC Quick-Start Guide

This guide is designed to explain the basic steps necessary to install and use the FN-DAC communicator. Please consult the FN-DAC Installation and Operation Manual (part number 1700-10370) for complete instructions on the installation and operation of the FN-DAC.

****IMPORTANT****

- 1) You must use panel firmware 3.800 or greater!
- 2) You must use Loop Explorer software version 6.0 or greater!

If you have questions about the firmware and software required to use the FN-DAC, please contact Hochiki America before proceeding.

Installation – Remove power from the panel before installing the FN-DAC.


Step 1 – Using the four mounting screws, install the FN-DAC in the enclosure.

Step 2 – Connect 24 VDC power to the J7 connector. Be sure to observe correct polarity!

Step 3 – Connect the ribbon cable between the J2 connector and the FireNET panel J5 (PC) connector.

Step 4 – Connect the telephone lines to the FN-DAC. L1 and L2 are the incoming phone lines; P1 and P2 are used to connect the premise phones. RJ31X jacks must be used.

See pages 11 – 22 of the FN-DAC Installation and Operation Manual for additional details.

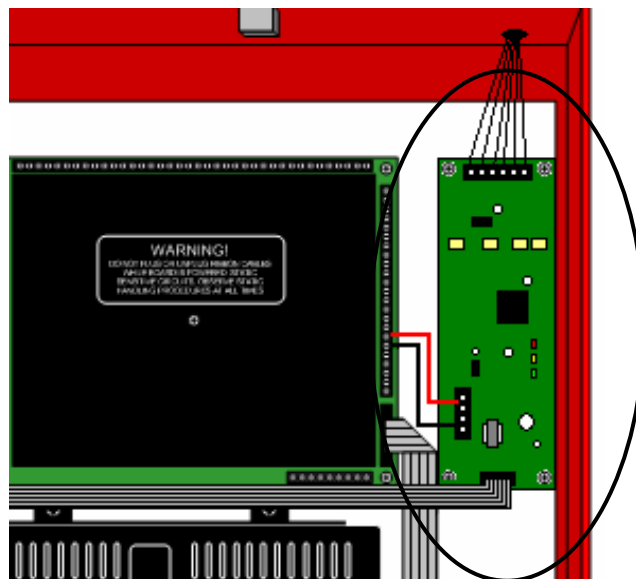

Programming –

Step 1 – You must add the FN-DAC from the level 3 menu (*Edit Configuration > Edit I/O > Add Dialer*)

Step 2 – Program the correct account number, reporting format/protocol and phone number using the menu options (*Edit Configuration > Edit I/O > Edit Dialer > Edit Accounts Attributes*). Account 1 is the primary account and account 2 is the backup account. Both accounts must be programmed. Accounts 3 and 4 are for optional duplicate reporting.

Use the up and down arrow keys to make your programming selection. Use the right arrow key to move to the next location; press the Enter button when programming is complete.

You may also use Loop Explorer to configure the FN-DAC. Please see pages 28 – 37 of the FN-DAC manual for additional details on programming.

Testing –

See Section 5 of the FN-DAC manual. Testing should be done by generating reportable events on the FireNET panel. Confirm receipt of the events with your monitoring station.

Troubleshooting –

See Section 5 of the FN-DAC manual.