

**X187, S187 Programming Cable  
FN-V187 VoiceNET Serial Interface Cable  
FN-P187 Printer Interface Cable**




X187 Programming Cable



S187 Programming Cable



FN-V187 VoiceNET Serial Interface Cable

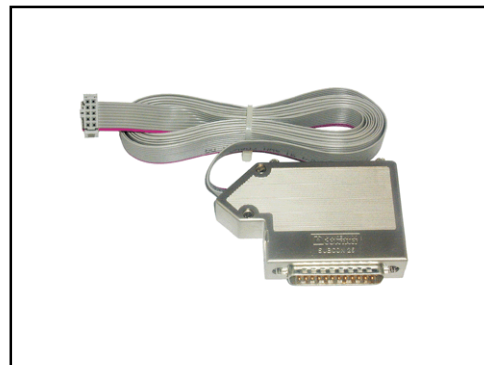

FN-P187 Printer Interface Cable

**APPLICATION**

X187 and S187 are used to program the FireNET family of panels.

FN-P187 Printer Interface cable is used to connect a serial printer to the FireNET family of panels.

FN-V187 VoiceNET Serial Interface Cable is used to interconnect a FireNET Panel with a VoiceNET Master Panel.

**SPECIFICATIONS**

**X187/S187:**

Cable Type:	FireNET Family Programming
Cable Length:	8.3 feet (2.5 meters)
Left Connector:	10 Pin Serial (Female)
Right Connector:	9 Pin - DB9 (Female)
X187:	Non-Jacketed Version
S187:	Jacketed Version

Continued on back

## SPECIFICATIONS

### FN-V187:


Cable Type:	VoiceNET Integration Cable
Cable Length:	8.3 feet (2.5 meters)
Left Connector:	10 Pin Serial (Female)
Right Connector:	2 Wire Pin (male)

## SPECIFICATIONS

### FN-P187:

Cable Type:	FireNET/FireNET Plus Printer Cable
Cable Length:	8.3 feet (2.5 meters)
Left Connector:	10 Pin Serial (Female)
Right Connector:	25 Pin Serial (male)

## WIRING DIAGRAMS:

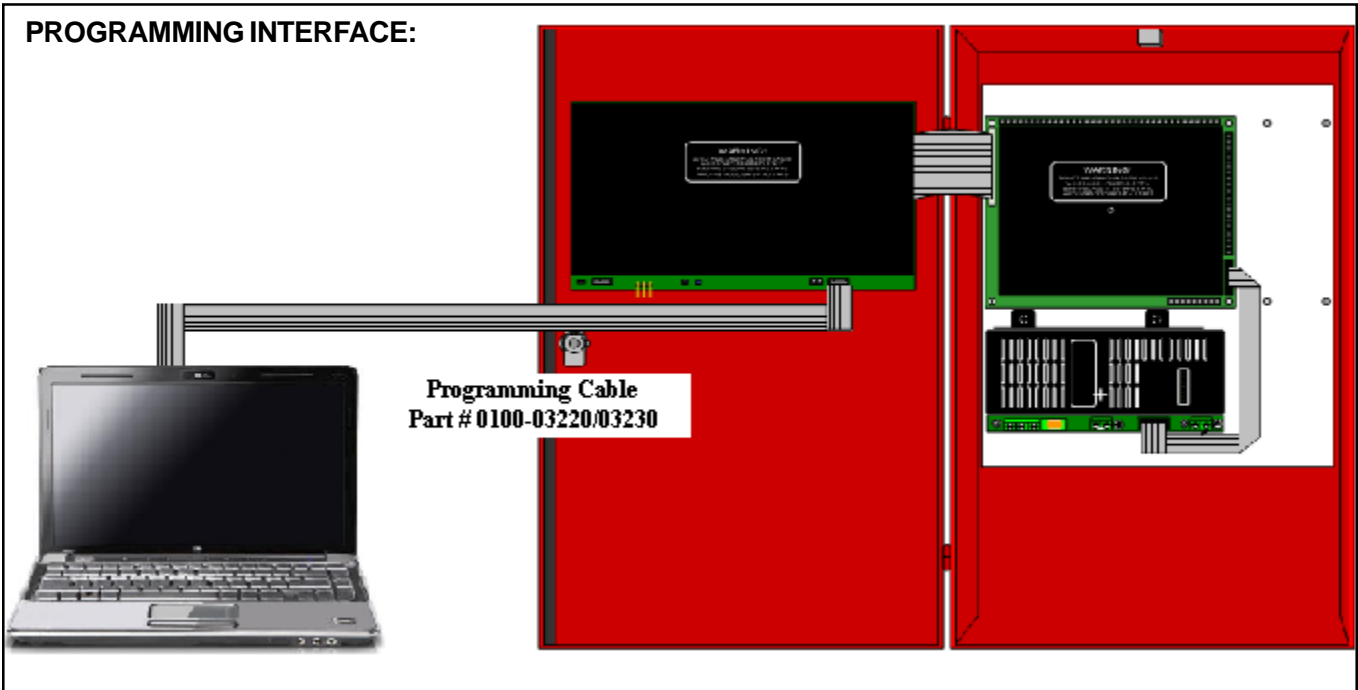

## FNV-MP INTERFACE: (REFER TO FIRENET MANUAL V 1.86 OR HIGHER)

