



**HIKVISION**

# **Network Video Recorder**

## **Quick Start Guide**

**UD.6L0202B2091A01**

# TABLE OF CONTENTS

<b>Chapter 1 Description of Panels .....</b>	<b>6</b>
1.1 Front Panel .....	6
1.2 Rear Panel .....	8
<b>Chapter 2 Installation and Connections.....</b>	<b>10</b>
2.1 NVR Installation.....	10
2.2 Hard Disk Installation.....	10
2.3 Connections .....	12
Wiring of Alarm Input.....	12
Wiring of Alarm Output .....	12
Using Alarm Connectors .....	13
Controller Connection.....	13
2.4 HDD Storage Calculation Chart .....	14
<b>Chapter 3 Menu Operation .....</b>	<b>15</b>
3.1 Menu Structure .....	15
3.2 Startup and Shutdown.....	15
3.3 Activating Your Device .....	16
3.4 Login and Logout .....	17
User Login .....	17
User Logout .....	18
3.5 Using the Setup Wizard .....	18
3.6 Network Settings .....	19
3.7 Adding IP Cameras.....	19
3.8 Live View .....	20
3.9 One-Touch RAID Configuration .....	20
3.10 Recording Settings.....	21
3.11 Playback .....	22
<b>Chapter 4 Accessing by Web Browser.....</b>	<b>24</b>

## **Quick Start Guide**

COPYRIGHT ©2015 Hangzhou Hikvision Digital Technology Co., Ltd.

### **ALL RIGHTS RESERVED.**

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou Hikvision Digital Technology Co., Ltd. or its subsidiaries (hereinafter referred to be “Hikvision”). This user manual (hereinafter referred to be “the Manual”) cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise stipulated, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

### **About this Manual**

This Manual is applicable to Network Video Recorder (NVR).

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website (<http://overseas.hikvision.com/en/>).

Please use this user manual under the guidance of professionals.

### **Trademarks Acknowledgement**

**HIKVISION** and other Hikvision’s trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

### **Legal Disclaimer**

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED “AS IS”, WITH ALL FAULTS AND ERRORS, AND HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITIES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES.

IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS.

## Regulatory Information

### FCC Information

**FCC compliance:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

### EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2004/108/EC, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection

points. For more information see: [www.recyclethis.info](http://www.recyclethis.info)



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate

cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: [www.recyclethis.info](http://www.recyclethis.info)

### Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (A)/NMB-3(A) standards requirements.



## Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into “Warnings” and “Cautions”

**Warnings:** Serious injury or death may occur if any of the warnings are neglected.

**Cautions:** Injury or equipment damage may occur if any of the cautions are neglected.

	
<b>Warnings</b> Follow these safeguards to prevent serious injury or death.	<b>Cautions</b> Follow these precautions to prevent potential injury or material damage.



### Warnings

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user.
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with 100~240 VAC or 12 VDC according to the IEC60950-1 standard. Please refer to technical specifications for detailed information.
- Do not connect several devices to one power adapter as adapter overload may cause over-heating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.

## Preventive and Cautionary Tips

Before connecting and operating your device, please be advised of the following tips:

- Ensure unit is installed in a well-ventilated, dust-free environment.
- Unit is designed for indoor use only.
- Keep all liquids away from the device.
- Ensure environmental conditions meet factory specifications.
- Ensure unit is properly secured to a rack or shelf. Major shocks or jolts to the unit as a result of dropping it may cause damage to the sensitive electronics within the unit.
- Use the device in conjunction with an UPS if possible.
- Power down the unit before connecting and disconnecting accessories and peripherals.
- A factory recommended HDD should be used for this device.
- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.



## Applicable Models

This manual is applicable to the models listed in the following table.

Series	Model
DS-9600NI-I8	DS-9608NI-I8
	DS-9616NI-I8
	DS-9632NI-I8
	DS-9664NI-I8

## Symbol Conventions

The symbols that may be found in this document are defined as follows.

Symbol	Description
	Indicates a potentially hazardous situation, which if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results.
	Provides additional information to emphasize or supplement important points of the main text.

# Chapter1 Description of Panels

## 1.1 Front Panel

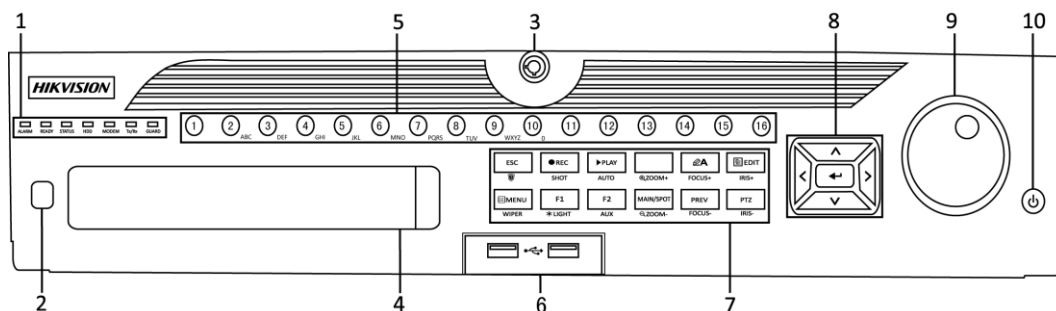


Figure 1. 1 Front Panel

Table 1. 1 Description of Interfaces

No.	Name	Function Description
1	<b>ALARM</b>	Turns red when a sensor alarm is detected.
	<b>READY</b>	Turns blue when the device is functioning properly.
	<b>STATUS</b>	Turns blue when device is controlled by an IR remote.
		Turns red when controlled by a keyboard and purple when IR remote and keyboard is used at the same time.
	<b>HDD</b>	Flickers red when data is being read from or written to HDD.
	<b>MODEM (not for DS-9600NI-XT)</b>	Reserved for future usage.
	<b>Tx/Rx</b>	Flickers blue when network connection is functioning properly.
<b>GUARD</b>	Turns blue when the device is in armed status; at this time, an alarm is enabled when an event is detected.	
	Turns off when the device is unarmed. The arm/disarm status can be changed by pressing and holding on the ESC button for more than 3 seconds in live view mode.	
2	<b>IR Receiver</b>	Receiver for IR remote control.
3	<b>Front Panel Lock (for DS-9600NI-ST/RT/XT series)</b>	Locks or unlocks the panel by the key.
4	<b>DVD-R/W</b>	Slot for DVD-R/W disk.
5	<b>Alphanumeric Buttons</b>	Switches to the corresponding channel in live view or PTZ control mode.
		Inputs numbers and characters in edit mode.
		Switches between different channels in playback mode.
		Turns blue when the corresponding channel is recording; turns red when the channel is in network transmission status; turns pink when the channel is recording and transmitting.

No.	Name	Function Description																								
6	<b>USB Interfaces</b>	Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).																								
7	<b>Composite Keys</b>	<table border="1"> <tr> <td data-bbox="488 309 699 387"><b>ESC</b></td> <td data-bbox="699 309 1353 387">Returns to the previous menu. Presses for arming/disarming the device in live view mode.</td> </tr> <tr> <td data-bbox="488 387 699 551"><b>REC/SHOT</b></td> <td data-bbox="699 387 1353 551">Enters the Manual Record settings menu. Presses this button followed by a numeric button to call a PTZ preset in PTZ control settings. Turns audio on/off in the playback mode.</td> </tr> <tr> <td data-bbox="488 551 699 622"><b>PLAY/AUTO</b></td> <td data-bbox="699 551 1353 622">Enters the playback mode. Automatically scans in the PTZ control menu.</td> </tr> <tr> <td data-bbox="488 622 699 663"><b>ZOOM+</b></td> <td data-bbox="699 622 1353 663">Zooms in the PTZ camera in the PTZ control setting.</td> </tr> <tr> <td data-bbox="488 663 699 779"><b>A/FOCUS+</b></td> <td data-bbox="699 663 1353 779">Adjusts focus in the PTZ Control menu. Switches between input methods (upper and lower case alphabet, symbols and numeric input).</td> </tr> <tr> <td data-bbox="488 779 699 1025"><b>EDIT/IRIS+</b></td> <td data-bbox="699 779 1353 1025">Edits text fields. When editing text fields, it also deletes the character in front of the cursor. Checks the checkbox in the checkbox fields. Adjusts the iris of the camera in PTZ control mode. Generates video clips for backup in playback mode. Enters/exits the folder of USB device and eSATA HDD.</td> </tr> <tr> <td data-bbox="488 1025 699 1104"><b>MAIN/SPOT/ZOOM-</b></td> <td data-bbox="699 1025 1353 1104">Switches between main and spot output. Zooms out the image in PTZ control mode.</td> </tr> <tr> <td data-bbox="488 1104 699 1220"><b>F1/ LIGHT</b></td> <td data-bbox="699 1104 1353 1220">Selects all items on the list when used in a list field. Turns on/off PTZ light (if applicable) in PTZ control mode. Switches between play and reverse play in playback mode.</td> </tr> <tr> <td data-bbox="488 1220 699 1294"><b>F2/ AUX</b></td> <td data-bbox="699 1220 1353 1294">Cycles through tab pages. Switches between channels in synchronous playback mode.</td> </tr> <tr> <td data-bbox="488 1294 699 1563"><b>MENU/WIPER</b></td> <td data-bbox="699 1294 1353 1563">Returns to the Main menu (after successful login). Presses and holds the button for five seconds to turn off audible key beep. Starts wiper (if applicable) in PTZ control mode. Shows/hides the control interface in playback mode.</td> </tr> <tr> <td data-bbox="488 1563 699 1675"><b>PREV/FOCUS-</b></td> <td data-bbox="699 1563 1353 1675">Switches between single screen and multi-screen mode. Adjusts the focus in conjunction with the A/FOCUS+ button in PTZ control mode.</td> </tr> <tr> <td data-bbox="488 1675 699 1758"><b>PTZ/IRIS-</b></td> <td data-bbox="699 1675 1353 1758">Enters the PTZ Control mode. Adjusts the iris of the PTZ camera in PTZ control mode.</td> </tr> </table>	<b>ESC</b>	Returns to the previous menu. Presses for arming/disarming the device in live view mode.	<b>REC/SHOT</b>	Enters the Manual Record settings menu. Presses this button followed by a numeric button to call a PTZ preset in PTZ control settings. Turns audio on/off in the playback mode.	<b>PLAY/AUTO</b>	Enters the playback mode. Automatically scans in the PTZ control menu.	<b>ZOOM+</b>	Zooms in the PTZ camera in the PTZ control setting.	<b>A/FOCUS+</b>	Adjusts focus in the PTZ Control menu. Switches between input methods (upper and lower case alphabet, symbols and numeric input).	<b>EDIT/IRIS+</b>	Edits text fields. When editing text fields, it also deletes the character in front of the cursor. Checks the checkbox in the checkbox fields. Adjusts the iris of the camera in PTZ control mode. Generates video clips for backup in playback mode. Enters/exits the folder of USB device and eSATA HDD.	<b>MAIN/SPOT/ZOOM-</b>	Switches between main and spot output. Zooms out the image in PTZ control mode.	<b>F1/ LIGHT</b>	Selects all items on the list when used in a list field. Turns on/off PTZ light (if applicable) in PTZ control mode. Switches between play and reverse play in playback mode.	<b>F2/ AUX</b>	Cycles through tab pages. Switches between channels in synchronous playback mode.	<b>MENU/WIPER</b>	Returns to the Main menu (after successful login). Presses and holds the button for five seconds to turn off audible key beep. Starts wiper (if applicable) in PTZ control mode. Shows/hides the control interface in playback mode.	<b>PREV/FOCUS-</b>	Switches between single screen and multi-screen mode. Adjusts the focus in conjunction with the A/FOCUS+ button in PTZ control mode.	<b>PTZ/IRIS-</b>	Enters the PTZ Control mode. Adjusts the iris of the PTZ camera in PTZ control mode.
<b>ESC</b>	Returns to the previous menu. Presses for arming/disarming the device in live view mode.																									
<b>REC/SHOT</b>	Enters the Manual Record settings menu. Presses this button followed by a numeric button to call a PTZ preset in PTZ control settings. Turns audio on/off in the playback mode.																									
<b>PLAY/AUTO</b>	Enters the playback mode. Automatically scans in the PTZ control menu.																									
<b>ZOOM+</b>	Zooms in the PTZ camera in the PTZ control setting.																									
<b>A/FOCUS+</b>	Adjusts focus in the PTZ Control menu. Switches between input methods (upper and lower case alphabet, symbols and numeric input).																									
<b>EDIT/IRIS+</b>	Edits text fields. When editing text fields, it also deletes the character in front of the cursor. Checks the checkbox in the checkbox fields. Adjusts the iris of the camera in PTZ control mode. Generates video clips for backup in playback mode. Enters/exits the folder of USB device and eSATA HDD.																									
<b>MAIN/SPOT/ZOOM-</b>	Switches between main and spot output. Zooms out the image in PTZ control mode.																									
<b>F1/ LIGHT</b>	Selects all items on the list when used in a list field. Turns on/off PTZ light (if applicable) in PTZ control mode. Switches between play and reverse play in playback mode.																									
<b>F2/ AUX</b>	Cycles through tab pages. Switches between channels in synchronous playback mode.																									
<b>MENU/WIPER</b>	Returns to the Main menu (after successful login). Presses and holds the button for five seconds to turn off audible key beep. Starts wiper (if applicable) in PTZ control mode. Shows/hides the control interface in playback mode.																									
<b>PREV/FOCUS-</b>	Switches between single screen and multi-screen mode. Adjusts the focus in conjunction with the A/FOCUS+ button in PTZ control mode.																									
<b>PTZ/IRIS-</b>	Enters the PTZ Control mode. Adjusts the iris of the PTZ camera in PTZ control mode.																									
8	<b>Control Buttons</b>	<table border="1"> <tr> <td data-bbox="488 1758 699 2018"><b>DIRECTION</b></td> <td data-bbox="699 1758 1353 2018">Navigates between different fields and items in menus. In the playback mode, use the Up and Down buttons to speed up and slow down recorded video. Use the Left and Right buttons to select the next and previous video files. Cycles through channels in live view mode. Controls the movement of the PTZ camera in PTZ control mode.</td> </tr> </table>	<b>DIRECTION</b>	Navigates between different fields and items in menus. In the playback mode, use the Up and Down buttons to speed up and slow down recorded video. Use the Left and Right buttons to select the next and previous video files. Cycles through channels in live view mode. Controls the movement of the PTZ camera in PTZ control mode.																						
<b>DIRECTION</b>	Navigates between different fields and items in menus. In the playback mode, use the Up and Down buttons to speed up and slow down recorded video. Use the Left and Right buttons to select the next and previous video files. Cycles through channels in live view mode. Controls the movement of the PTZ camera in PTZ control mode.																									



No.	Name	Function Description
	<b>ENTER</b>	Confirms selection in any of the menu modes.
		Checks the checkbox fields.
		Plays or pauses the video playing in playback mode.
		Advances the video by a single frame in single-frame playback mode.
		Stops/starts auto switch in auto-switch mode.
9	<b>JOG SHUTTLE Control</b>	Moves the active selection up and down in a menu.
		Cycles through different channels in live view mode.
		In the playback mode: for DS-9600NI-ST/RT/XT series, use the ring to jump 30s forward/backward in video files. For DS-8600NI-ST series, use outer ring to speed up or slow down the record files and inner ring to jump 30s forward/backward in video files.
		Controls the movement of the PTZ camera in PTZ control mode.
10	<b>POWER ON/OFF</b>	Long press the button for more than 3 seconds to turn on/off the NVR.

## 1.2 Rear Panel

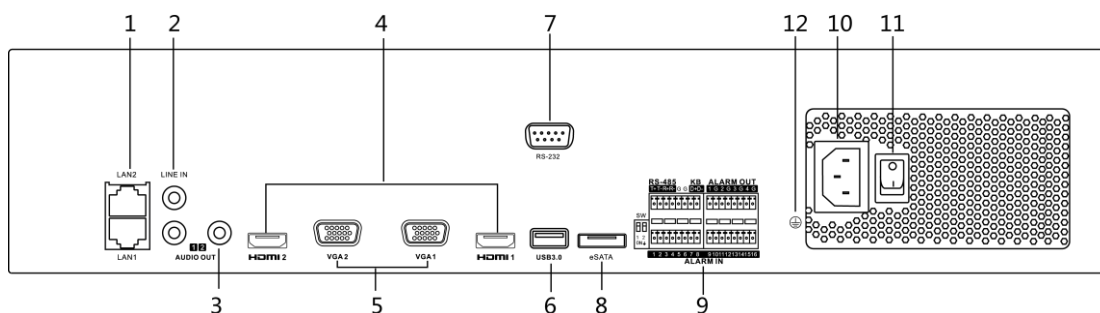


Figure 1. 2 Rear Panel

Table 1. 2 Description of Interfaces

No.	Item	Description
1	<b>LAN1/LAN2 Interface</b>	2 RJ-45 10/100/1000 Mbps self-adaptive Ethernet interfaces provided.
2	<b>LINE IN</b>	RCA connector for audio input.
3	<b>AUDIO OUT</b>	2 RCA connectors for audio output.
4	<b>HDMI1/HDMI2</b>	HDMI video output connector.
5	<b>VGA1/VGA2</b>	DB9 connector for VGA output. Display local video output and menu.
6	<b>USB 3.0 interface</b>	Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
7	<b>RS-232 Interface</b>	Connector for RS-232 devices.
8	<b>eSATA</b>	Connects external SATA HDD, CD/DVD-RM.
9	<b>Controller Port</b>	D+, D- pin connects to Ta, Tb pin of controller. For cascading devices, the first NVR's D+, D- pin should be connected with the D+, D- pin of the next NVR.

No.	Item	Description
	<b>ALARM IN</b>	Connector for alarm input.
	<b>ALARM OUT</b>	Connector for alarm output.
<b>10</b>	<b>AC 100V ~ 240V</b>	100 to 240 VAC power supply.
<b>11</b>	<b>Power Switch</b>	Switch for turning on/off the device.
<b>12</b>	<b>GROUND</b>	Ground (needs to be connected when NVR starts up).

## Chapter 2 Installation and Connections

### 2.1 NVR Installation

During installation of the NVR:

1. Use brackets for rack mounting.
2. Ensure ample room for audio and video cables.
3. When routing cables, ensure that the bend radius of the cables are no less than five times than its diameter.
4. Connect the alarm cable.
5. Allow at least 2cm (≈0.75-inch) of space between racks mounted devices.
6. Ensure the NVR is grounded.
7. Environmental temperature should be within the range of -10 °C ~ 55 °C, 14 °F ~ 131 °F.
8. Environmental humidity should be within the range of 10% ~ 90%.

### 2.2 Hard Disk Installation

*Before you start:*

Disconnect the power from the NVR before installing a hard disk drive (HDD). A factory recommended HDD should be used for this installation. Up to eight SATA hard disks can be installed.

**Tools Required:** Screwdriver.

*Steps:*

1. Remove the NVR cover by unfastening the screws on the back and side.



Figure 2. 1 Remove the Cover

- 
2. Install the HDD in the HDD rack using the provided screws. Fasten the screws on the button to fix the HDD.

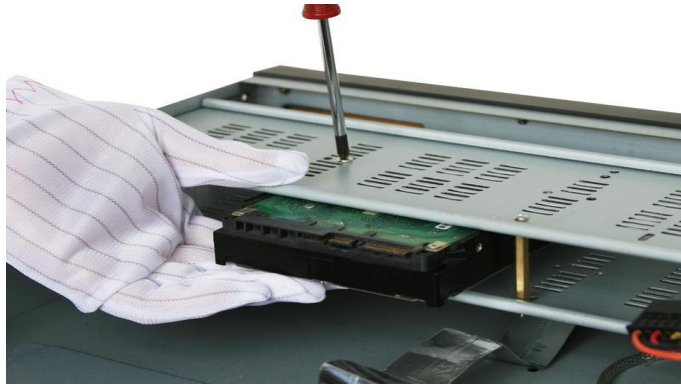


Figure 2. 2 Install the HDD

- 
3. Connect one end of the data cable to the NVR motherboard and the other end to the HDD.

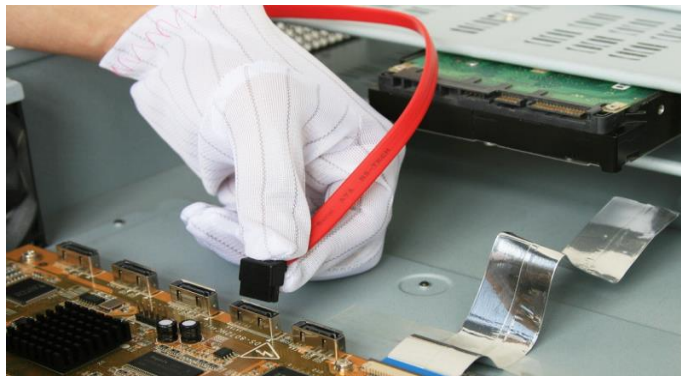


Figure 2. 3 Connect the data cable

- 
4. Connect the power cable to the HDD.

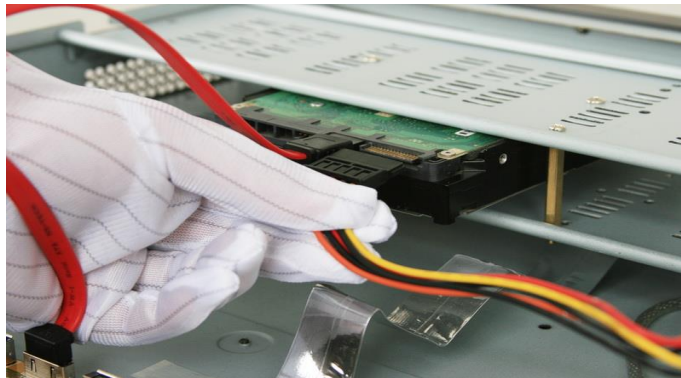


Figure 2. 4 Connect the power cable

- 
5. Re-install the NVR cover and fasten screws.

## 2.3 Connections

### Wiring of Alarm Input

The alarm input is an open/closed relay. To connect the alarm input to the device, use the following diagram.



If the alarm input is not an open/close relay, please connect an external relay between the alarm input and the device.

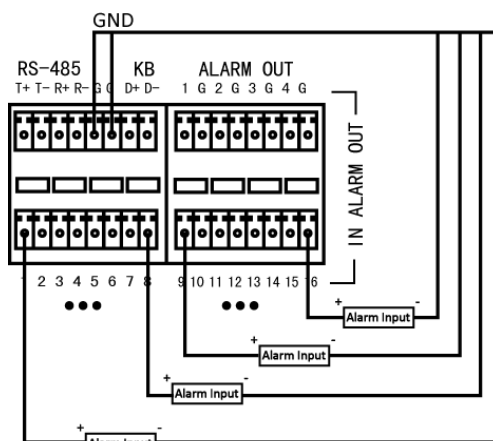


Figure 2.5 Alarm Input Wiring

### Wiring of Alarm Output

To connect to an alarm output (AC or DC load), use the following diagram:

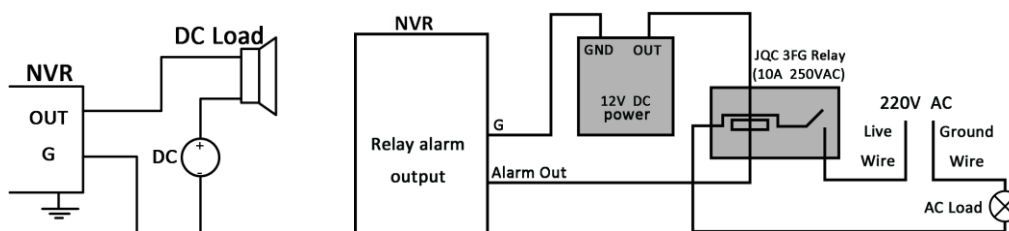


Figure 2.6 Alarm Output Wiring

For DC load, the jumpers can be used within the limit of 12V/1A safely.

To connect an AC load, jumpers should be left open (you must remove the jumper on the motherboard in the NVR). Use an external relay for safety (as shown in the figure above).

There are 4 jumpers (JP1, JP2, JP3, and JP4) on the motherboard, each corresponding with one alarm output. By default, jumpers are connected. To connect an AC load, jumpers should be removed.

**Example:**

If you connect an AC load to the alarm output 3 of the NVR, then you must remove the JP 3 jumper.

## Using Alarm Connectors

To connect alarm devices to the NVR:

1. Disconnect *pluggable block* from the ALARM IN /ALARM OUT terminal block.
2. Unfasten stop screws from the *pluggable block*, insert signal cables into slots and fasten stop screws. Ensure signal cables are tight.
3. Connect *pluggable block* back into terminal block.

## Controller Connection

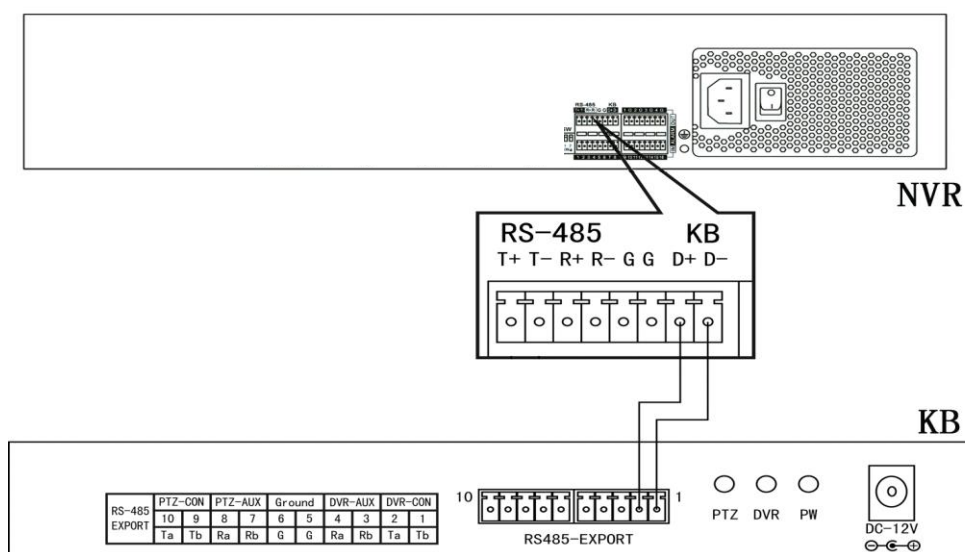


Figure 2. 7 Controller Connection

To connect a controller to the NVR:

1. Disconnect *pluggable block* from the KB terminal block.
2. Unfasten stop screws from the KB D+, D- *pluggable block*, insert signal cables into slots and fasten stop screws. Ensure signal cables are in tight.
3. Connect Ta on controller to D+ on terminal block and Tb on controller to D- on terminal block. Fasten stop screws.
4. Connect *pluggable block* back into terminal block.



Make sure both the controller and NVR are grounded.

## 2.4 HDD Storage Calculation Chart

The following chart shows an estimation of storage space used based on recording at one channel for an hour at a fixed bit rate.

Bit Rate	Storage Used
96K	42M
128K	56M
160K	70M
192K	84M
224K	98M
256K	112M
320K	140M
384K	168M
448K	196M
512K	225M
640K	281M
768K	337M
896K	393M
1024K	450M
1280K	562M
1536K	675M
1792K	787M
2048K	900M
4096K	1.8G
8192K	3.6G
16384K	7.2G



Please note that supplied values for storage space used is just for reference. The storage values in the chart are estimated by formulas and may have some deviation from actual value.

# Chapter 3 Menu Operation

## 3.1 Menu Structure

Refer to the following figure for the menu structure:

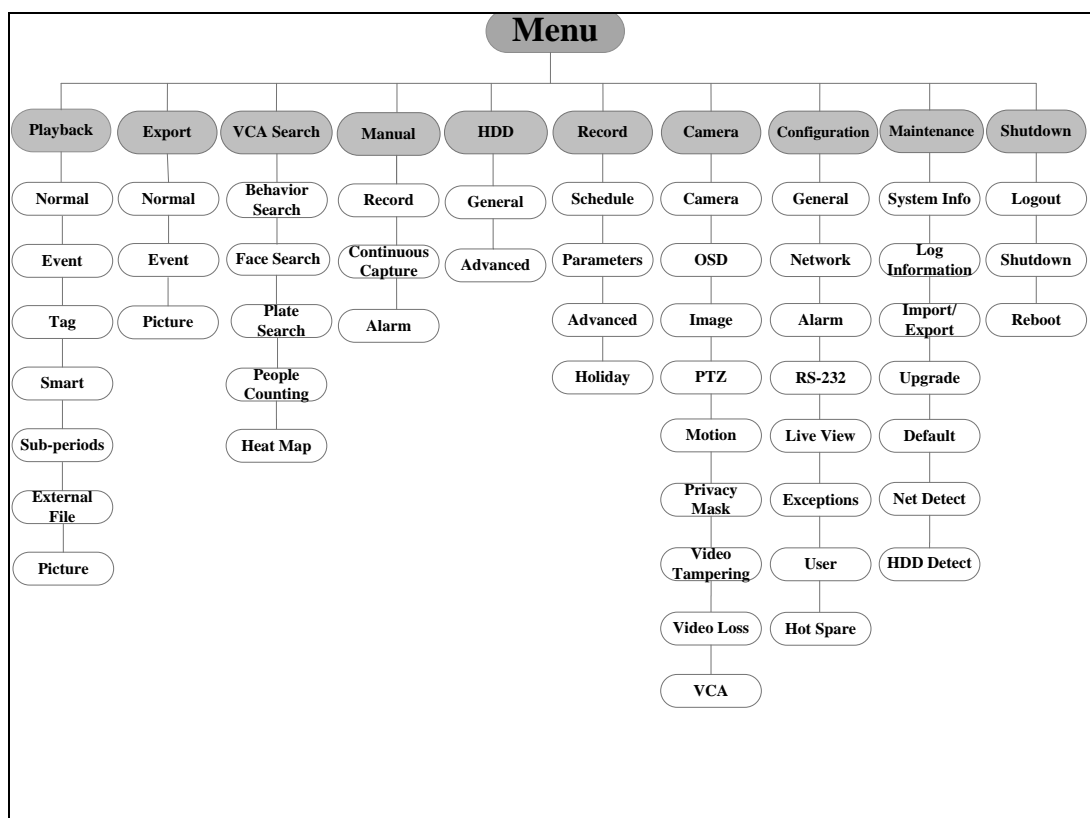


Figure 3. 1 Menu Structure



The menu structure may vary according to different models.

## 3.2 Startup and Shutdown

Proper startup and shutdown procedures are crucial to expanding the life of the NVR.

To start your NVR:

1. Check the power supply is plugged into an electrical outlet. It is **HIGHLY** recommended that an Uninterruptible Power Supply (UPS) be used in conjunction with the device. The Power button) on the front panel should be red, indicating the device is receiving the power.
2. Press the POWER button on the front panel. The Power LED should turn blue. The unit will begin to start. After the device starts up, the wizard will guide you through the initial settings, including modifying password, date and time settings, network settings, HDD initializing, and recording.



To shut down the NVR:

1. Enter the Shutdown menu.  
Menu > Shutdown

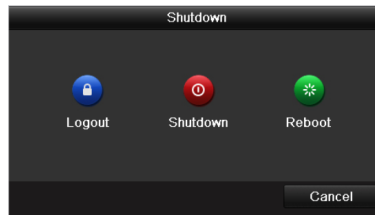


Figure 3. 2 Shutdown

2. Select the **Shutdown** button.
3. Click the **Yes** button.

### 3.3 Activating Your Device

**Purpose:**

For the first-time access, you need to activate the device by setting an admin password. No operation is allowed before activation. You can also activate the device via Web Browser, SADP or client software.

**Steps:**

1. Input the same password in the text field of **Create New Password** and **Confirm New Password**.

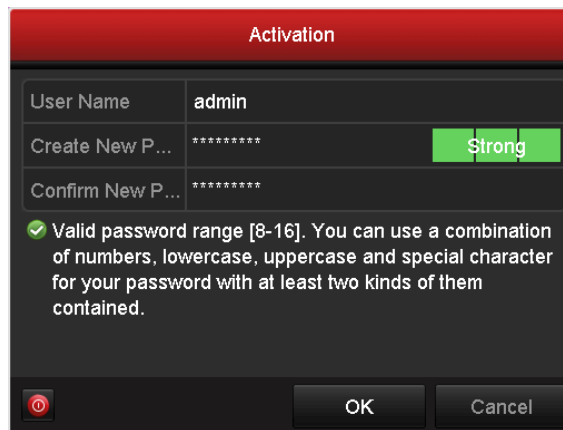


Figure 3. 3 Set Admin Password

**⚠️ STRONG PASSWORD RECOMMENDED**– We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

2. Click **OK** to save the password and activate the device.



For the old version device, if you upgrade it to the new version, the following dialog box will pop up once the

device starts up. You can click **YES** and follow the wizard to set a strong password.

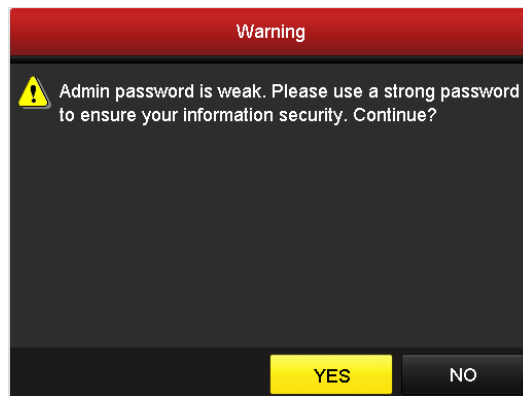


Figure 3. 4 Warning of Weak Password

## 3.4 Login and Logout

### User Login

**Purpose:**

If NVR has logged out, you must login the device before operating the menu and other functions.

**Steps:**

1. Select the **User Name** in the dropdown list.

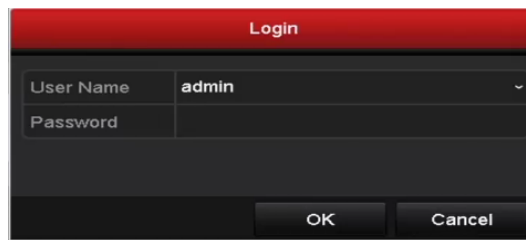


Figure 3. 5 Login

2. Input **Password**.
3. Click **OK** to log in.



In the Login dialog box, if you enter the wrong password 7 times, the current user account will be locked for 60 seconds.

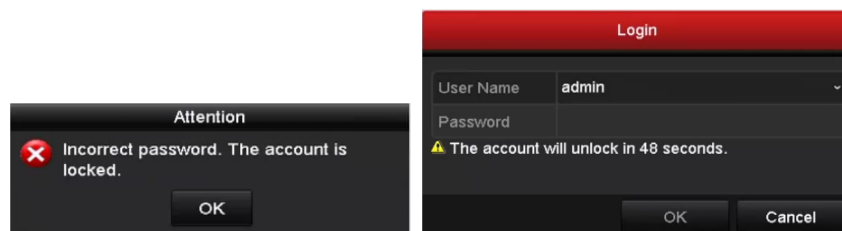


Figure 3. 6 Account Lock

## User Logout

### *Purpose:*

After logging out, the monitor turns to the live view mode and if you want to perform any operations, you need to enter user name and password log in again.

### *Steps:*

1. Enter the Shutdown menu.  
Menu > Shutdown

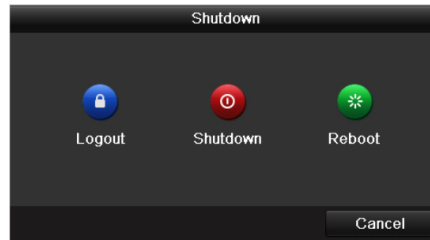


Figure 3.7 Logout

2. Click **Logout**.



After you have logged out the system, menu operation on the screen is invalid. It is required to input a user name and password to unlock the system.

## 3.5 Using the Setup Wizard

The Setup Wizard can walk you through some important settings of the device. By default, the Setup Wizard starts once the device has loaded.

Check the checkbox to enable Setup Wizard when device starts. Click **Next** to continue the setup wizard. Follow the guide of the Setup Wizard to configure the system resolution, system date/time, network settings, HDD management, record settings, etc.



Figure 3.8 Wizard

## 3.6 Network Settings

### *Purpose:*

Network settings must be properly configured before you operate NVR over network.

### *Steps:*

1. Enter the Network Settings interface.

Menu > Configuration > Network

Working Mode	Net Fault-tolerance		
Select NIC	bond0		
NIC Type	10M/100M/1000M Self-adaptive		
Enable DHCP	<input type="checkbox"/>		
IPv4 Address...	10 . 16 . 1 . 96	IPv6 Address...	fe80::c256:e3ff:fe2b:e1e1/64
IPv4 Subn...	255 . 255 . 255 . 0	IPv6 Address...	
IPv4 Defa...	10 . 16 . 1 . 254	IPv6 Defa...	
MAC Address	c0:56:e3:2b:e1:e1		
MTU(Bytes)	1500		
Preferred DNS Server			
Alternate DNS Server			
Main NIC	LAN1		

Figure 3.9 Network Settings

2. Select the **General** tab.
3. In the **General Settings** interface, you can configure the following settings: NIC Type, IPv4 Address, IPv4 Gateway, MTU and DNS Server.  
If the DHCP server is available, you can check the checkbox of **DHCP** to automatically obtain an IP address and other network settings from that server.
4. After having configured the general settings, click the **Apply** button to save the settings.

## 3.7 Adding IP Cameras

### *Purpose:*

Before you can get live video or record the video files, you should add the network cameras to the connection list of the device.


### *Before you start:*

Ensure the network connection is valid and correct, and the IP camera to add has already been activated. Please refer to the *User Manual* for activating the inactive IP camera.

You can select one of the following three options to add the IP camera.

- **OPTION 1:**

### *Steps:*

1. Click to select an idle window in the live view mode.
2. Click the  icon in the center of the window to pop up the Add IP Camera interface.

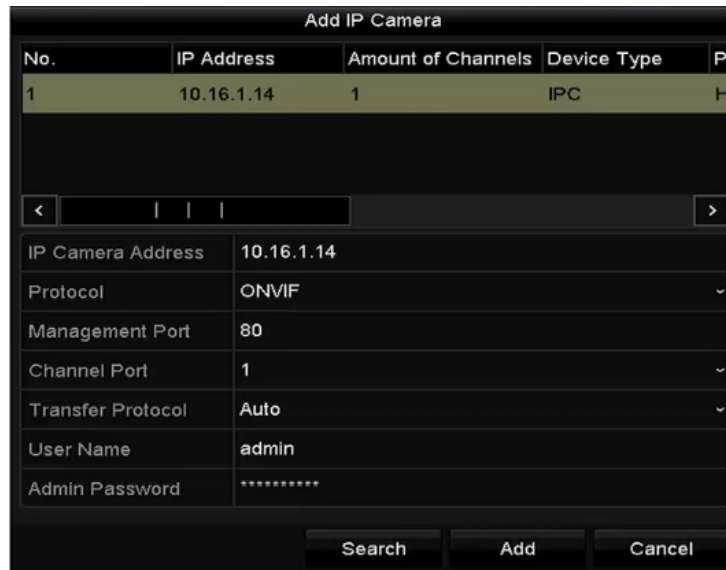


Figure 3. 10 Add IP Camera

3. Select the detected IP camera and click the **Add** button to add it directly, and you can click the **Search** button to refresh the online IP camera manually.  
Or you can choose to custom add the IP camera by editing the parameters in the corresponding text field and then click the **Add** button to add it.

## 3.8 Live View

Icons are provided on screen in Live View mode to indicate camera status. These icons include:

### Live View Icons

 
In the live view mode, there are icons at the upper-right corner of the screen for each channel, showing the status of the record and alarm in the channel for quick reference.



Alarm (video loss, tampering, motion detection, VCA or sensor alarm)



Record (manual record, continuous record, motion detection, VCA or alarm triggered record)



Alarm and Record



Event/Exception (event and exception information, appears at the lower-left corner of the screen.)

## 3.9 One-Touch RAID Configuration

### *Purpose:*

The device supports the RAID storage function. Through one-touch configuration, you can quickly create the disk array. By default, the array type to be created is RAID 5.

### *Before you start:*

As the default array type is RAID 5, at least 3 HDDs must be installed in you device. And if more than 10 HDDs are installed, 2 arrays can be configured.

**Steps:**

1. Enter the Physical Disk Settings interface.

Menu > HDD > RAID

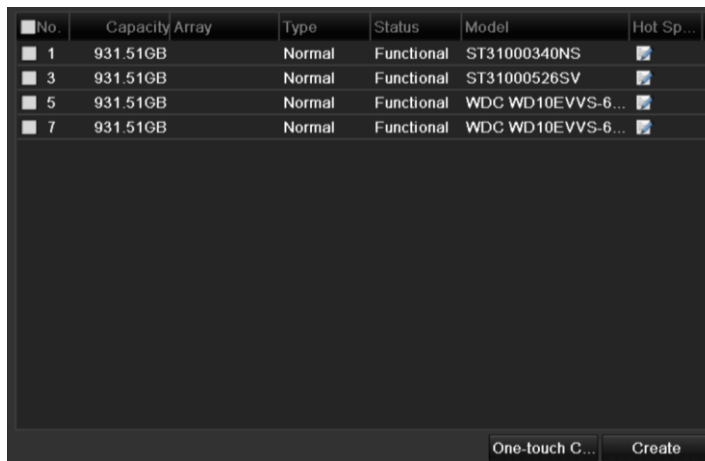


Figure 3. 11 RAID Settings Interface

2. Click **One-touch Configuration** to enter the One-touch Array Configuration interface.

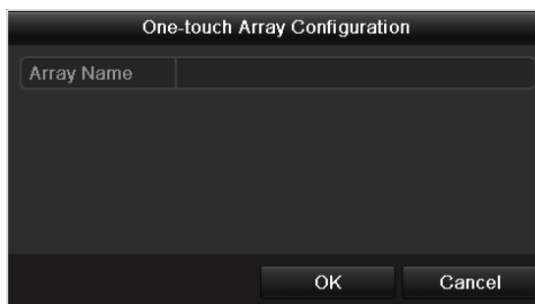


Figure 3. 12 One-touch Array Configuration

3. Edit the array name in the **Array Name** text field and click **OK** button to start configuring array.



If you install 4 HDDs or more for one-touch configuration, a hot spare disk will be set by default. It is recommended to set a hot spare disk for automatically rebuilding the array when the array is abnormal.

4. When the array configuration is completed, click **OK** button in the pop-up message box to finish the settings.

## 3.10 Recording Settings

**Before you start:**

Make sure that the disk has already been installed. If not, please install a disk and initialize it. You may refer to the user manual for detailed information.

**Purpose:**

Two kinds of record types are introduced in the following section, including Instant Record and All-day Record.

And for other record types, you may refer to the user manual for detailed information.



After rebooting all the manual records enabled are canceled.

**Steps:**

1. On the live view window, right click the window and move the cursor to the **Start Recording** option, and select **Continuous Record** or **Motion Detection Record** on your demand.

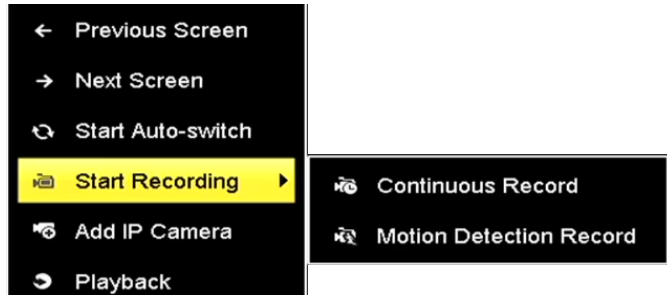


Figure 3. 13 Start Recording from Right-click Menu

---

2. Click the **Yes** button in the pop-up Attention message box to confirm the settings. All the channels will start to record in the selected mode.

## 3.11 Playback

The recorded video files on the hard disk can be played back in the following modes: instant playback, all-day playback for the specified channel, and playback by normal/event/smart/tag/sub-periods/external file search.

**Steps:**

1. Enter playback interface.  
Click menu>playback or from the right-click menu.
2. Check the checkbox of channel(s) in the channel list and then double-click to select a date on the calendar.
3. You can use the toolbar in the bottom part of Playback interface to control playing progress.



Figure 3. 14 Playback Interface

Select the channel (s) you want to play back by checking the checkbox (es), or execute simultaneous playback of multiple channels.



## Chapter 4 Accessing by Web Browser



You shall acknowledge that the use of the product with Internet access might be under network security risks. For avoidance of any network attacks and information leakage, please strengthen your own protection. If the product does not work properly, please contact with your dealer or the nearest service center.

### **Purpose:**

You can get access to the device via web browser. You may use one of the following listed web browsers: Internet Explorer 6.0, Internet Explorer 7.0, Internet Explorer 8.0, Internet Explorer 9.0, Internet Explorer 10.0, Apple Safari, Mozilla Firefox, and Google Chrome. The supported resolutions include 1024\*768 and above.

### **Steps:**

1. Open web browser, input the IP address of the device and then press Enter.
2. Login to the device.
  - If the device has not been activated, you need to activate the device first before login.

The screenshot shows a web browser window titled "Activation". It contains a form with the following fields and elements:

- User Name:** A text input field containing the text "admin".
- Password:** A password input field with a green checkmark icon to its right. Below the field is a green progress bar that is nearly full, with the word "Strong" to its right.
- Confirm:** A second password input field for confirmation.
- OK:** A button located at the bottom right of the form.
- Instructions:** Text below the password field reads: "Valid password range [8-16]. You can use a combination of numbers, lowercase, uppercase and special character for your password with at least two kinds of them contained."

Figure 4. 1 Set Admin Password

- 1) Set the password for the admin user account.
- 2) Click **OK** to login to the device.



**STRONG PASSWORD RECOMMENDED**– We highly recommend you create a strong password of your own choosing (using a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters) in order to increase the security of your product. And we recommend you reset your password regularly, especially in the high security system, resetting the password monthly or weekly can better protect your product.

- If the device is already activated, enter the user name and password in the login interface, and click the **Login** button.

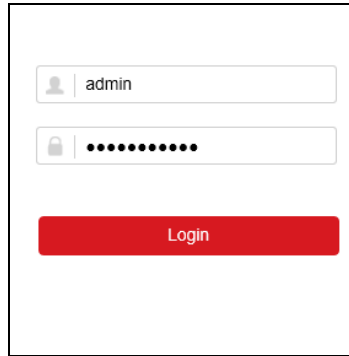


Figure 4. 2 Login

- 
3. Install the plug-in before viewing the live video and managing the camera. Please follow the installation prompts to install the plug-in.



You may have to close the web browser to finish the installation of the plug-in.

After login, you can perform the operation and configuration of the device, including the live view, playback, log search, configuration, etc.



First Choice for Security Professionals