

# HMSDISCONNECTTOOL


## Main accessories display and function introduction



**Function1 :**  
tighten/loosen nuts



**Function2 :**  
remove a microinverter  
from the AC Trunk

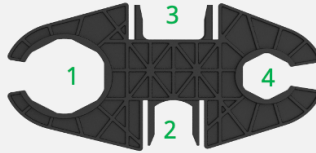

**HMS Disconnect Tool**



**Function3 :**  
disassemble  
connectors on the  
AC Trunk



**Function4 :**  
tighten/loosen nuts  
of field connector