KOCOM

KCV-S701EBC MANUAL

[7" Digital Color LCD Videophone]

COLOR HANDSFREE VIDEOPHONE



- ■7 inch color digital LCD screen
- Call & Communication with a visitor
- Expandable up to 2 door cameras and 4 indoor units
 - : Monitor with sub-interphone (KIP-32GU)
- Video and Audio monitoring of the door cameras
- Operating condition display with icons (OSD)
- Door open

Thank you for purchasing our product. Read safety instructions and manual carefully before using the product.

KOCOM CO.,LTD.

Cautions for safety


For safe use, please stick to the following cautions.

- · Please, save this manual after reading these instructions carefully.
- · Read and understand all instructions to set up rightly.
- · This Cautions for Safety may include items that are not contained in specifications of the product that consumer purchases.
- · If you need assistance with the set-up or operation, please contact with A/S center.

The important marks in the manual.

To help our customers to understand this manual, to prevent any personal injury or property damage, some marks are used in the manual, The marks and the drawing signs are below, Please, understand the marks before reading the manual,

The meaning of the drawing signs.

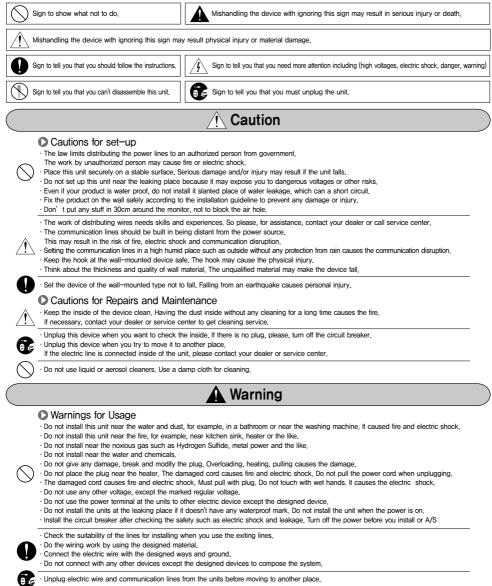

Cautions for Use

- · This unit is not designed for security purpose, . . Do not handle the unit with the wet hands,
- · Do not place a pot with water or a small metal material on the Units.
- \cdot Do not cover the ventilating opening or put any metal material in the units.
- · During thunderstorms, avoid using this unit. There may be a remote risk of an electric shock from lightning.
 - · Do not modify the unit. · Open the main gate after checking ID if the image and sound system do not work, Call A/S

· Do not disassemble the back and cabinet cover,

Cautions for Abnormality

- · Change the damaged electric cord,
- · Unplug this unit from plug socket and refer servicing to an authorized service center when the following conditions occur:
- · If liquid has been spilled into the unit, · If the unit does not work normally by following the operating instructions,
- · If the unit exhibits a distinct change in performance, · If the unit has been dropped or physically damaged,
- \cdot The mains plug, as a disconnection device, shall remain readily accessible by the user.

Caution

Safety Instructions, Warnings and Cautions of Each System

- Do not disassemble this unit at will as this device is composed by precision parts,
 Install the unit by following the set-up instructions of Kocom.
- \cdot Do not touch or insert any foreign substances, for example, sticker, magnetic, opener and the like.
- · Make U-type at the end of wires as the rain can effect on the system by following the wires during the rainy season,

Videophone


- · Separate the AC/DC lines with the hook of the wall-mounted type when installing.
- · Do not distribute signal line with AC line.
- · Do not clean the LCD with the damp cloth for cleaning. Use the only dry and soft cloth.

Things You Need to Know

- · This product is designed as a home videophone and cannot use continuously like monitor camera,
- If there is temperature difference between inner part of camera and surrounding, dew condensation occurs on camera lens and may disturb image.
 If dew condensation is removed from camera lens, image quality recovers,
- · White LED light examination range is narrower than camera shot range at night, so there is less amount of light at night than day,
- So it is difficult to see the face in low illumination condition due to noise increase on screen, but it is not from defect.
- · Monitor screen (liquid crystal panel) is not in defect when some pixels always light or black out,
- · Please install monitor and camera over 5M away.
- Also, avoid installing at a place with too much noise, because too much noise around camera causes phone call inferiority.
- · Do not place an object within 20cm in front of monitor, It causes phone call inferiority, especially because microphone is installed at the top of monitor.
- · If strong light such as sunlight flows into camera module, screen saturation (or strange mark) and image shaking might occur.
- · This is not a defect, so please do not install camera where a direct ray of light do not flow if possible.

Cautions

- In some cases there is occurrence of product destruction, malfunction, noise mixing and picture quality deterioration due to mixing of other tool's induced, voltage or thunder with communication wiring of monitor/camera, monitor/extended monitor.
- Do not wire with power line such as outdoor wiring or AC power, or phones and other tools.
- You cannot use it if you incorrectly wire the AC voltage between monitor/camera, monitor/extended monitor,
 Call the store or agency where you purchased this product and consult to solve the problem,
- Beware that unfixable damage might be caused due to authorizing AC voltage on communication wiring of monitor/camera, monitor/extended monitor, · Do not ever disjoint this product, It may cause electrocution accident when touching high-voltage circuit inside this product,
- Outside power authorizing this product must be confirmed of product description and use rated voltage.
- Beware that if higher voltage is authorized, unfixable damage might be caused due to product destruction
- · Power must be connected to domestic voltage (product rated voltage) consent or interior wiring.
- If connected to other motive power or inverter-type power, product destruction, noise mixing, and picture distortion may occur.
- · Do not drop this product, Glass is used for monitor and might break, or cause other circuit inferiority.
- In such case, immediately turn down the power switch, and call to consult agency or store in which this product was purchased.
- · Keep away from any conditions where water splatters or falls. Do not place anything containing water like a vase on the product,
- · If installed near transmission antenna such as broadcasting station, electric wave may mix and cause picture distortion or voice mixing.
- · Avoid installing near tools with strong electromagnetic waves such as microwaves and cell phones, or it may cause picture distortion.
- \cdot Do not install monitor in following places,
- ① Above or around water heater, rice-cooker, heater
- Place with temperature below 0'C such as cold store
 Place with high
- 5 Place with a lot of gas, dust, smoke
- ② Place exposed to direct rays of the sun
 ④ Place with high humidity such as bathroom, washroom, heated room
- © Dangerous place with sprays of water or chemicals
- Do not wipe with insecticide, drugs or chemicals such as thinner and alcohol, or it may damage
- the surface of this product.
- Beware of occurrence of image quality deterioration or malfunction from cause of humidity due to penetration of chemicals or water into camera' s urea resins,
- As in the picture, it prevents temperature difference of camera (outside) and monitor (inside), and removes dew condensation caused by humidity of camera window.
- · Camera must be installed when wall cement is completely dry.
- When product is installed in winter below -5°C, wait for approximately 2 hours to connect, Dew formation in monitor and camera due to temperature difference inside and outside may cause product defect,
- · Avoid installing monitor and camera in place directly exposed to heat or where gas noxiousness is highly occurring,

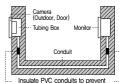

unwanted air circulation.

- · Connect the lines after peeling the wires properly.
- \cdot Use the designed driver to connect the lines to terminal.
- \cdot Do not install the main gate monitor at the leaking place.


oo much noise around camera causes pho s phone call inferiority, especially because

Installation location



Monitor installation location Standard monitor installation height is about 1,500mm where screen center is at eye level,

In this case, wall-hanging metal center (center of piping) is 1,450mm above ground level.

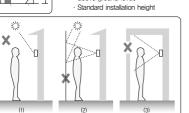

Camera installation location

 Camera installation in height Standard camera installation height is when lens is about 1,400mm above the floor. In this case, camera stack center (piping box) is above 1,390mm above ground level,


· Standard installation in height

Caution of camera installation


· Avoid installing camera exposed to direct ray of light (and sun).

- Beware backlight and darkness of visitor's face, which makes identification difficult,
 Avoid installing camera in places such as the following picture.
- (1) Place illuminating sky as background
- (2) Place with white wall reflecting direct ray of light
- (3) Enclosed place without light source

Monitor installation

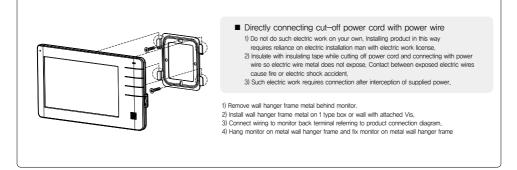

Door camera installation

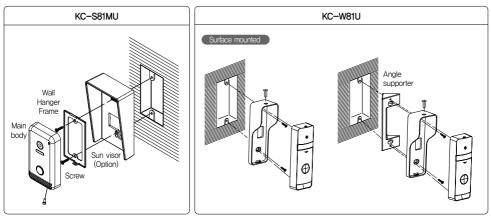

Components of product


Monitor	Wall hanger frame	■ Wire		
• - - - - - - - - - - - - -	■ Screws	4Pin cable for camera x 2ea 2Pin cable for DC (Out) x tea 4Pin cable for Intercom x 1ea 2Pin cable for DC (Out) x tea 4Pin cable for EX-monitor x 2ea 4Pin cable for Audio Phone x tea		ible for DC (Out) x tea
		E	D	C adapter x 1ea
	4X25mm 4ea	3Pin cable for doc	r opener x 1ea (Only	included for DC type)
Door camera				
■ KC-S81MU ■ Wall hanger frame	 Sun visor (Option) 	KC-W81U	Hood Cover	Angle supporter
		° Č		
■ Screws	■ Wire	■ Screws		
Screws for fixing main M3X8mm 1EA body on the wall L "L" Wrench 2.5M/M 1EA	4Pin cable for camera x 1ea	Mounting Screw KA M4X35mm 2EA	Fixing main body screw KM M4X10mm 2EA	Plastic mexpansion pipe M4X35mm 2EA
Screws for fixing hanger frame body on the wall 4X50mm 2ea	3Pin cable for door opener x fea	Fixing hood cover PM M3X6mm 1EA	H2 "L" Wrench 1EA	Rubber stopper of regulating hole

Specifications


Monitor	Model No.	KCV-S701EBC(DC)	KCV-S701EBC(AC)	
	Power Source	DC 15V 1.5A	AC 100-240V ~ 50Hz/60Hz	
	Power Consumption	1W(±20%)(On Stand by), 7.5W(±20%)(In load)		
	Operating Temperature	$0^{\circ}C \sim +40^{\circ}C$		
	LCD	7 Inch color LCD		
	Communication System	Handsfree type		
	Wiring	Door camera : Polarized 4 wire Ex. Monitor : Polarized 4 wire Door opener : Polarized 3 wire Interphone : 4 Wires direct to each monitor and additional 4 Wires between monitors Lobby phone : Polarized 6 wire		
	Mount Type	Surface mount		
	Dimension	220(W) x 123(H) x 19(D) mm	220(W) x 123(H) x 22(D) mm	
Door Camera	Model No.	KC-S81MU	KC-W81U	
	Power Source	DC 10V \sim 15V (Power from monitor)	DC 10V \sim 15V (Power from monitor)	
	Power Consumption	Max. 2.8W	Max. 2.8W	
	Operating Temperature	-10°C ∼ +50°C		
	Dimension	70(W) x 125(H) x 21(D) mm	40(W) x 122(H) x 21(D) mm	
	Angle of Lens	Diagonal 120 °	Diagonal 50 °	

Name and functions of each part


Monitor

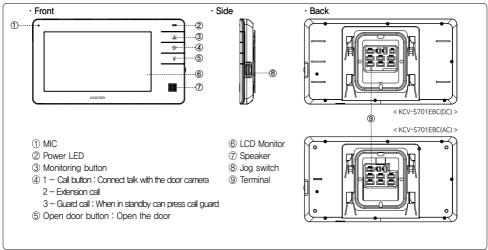


Door camera

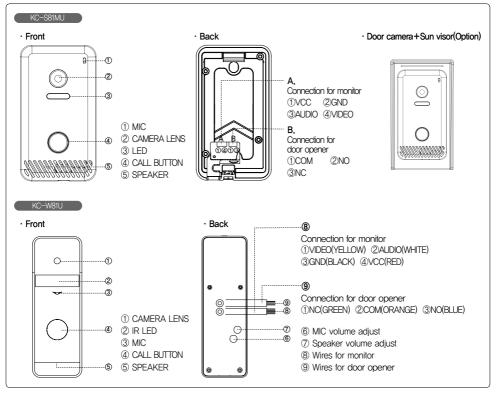

System configurations_Push button lobby phone

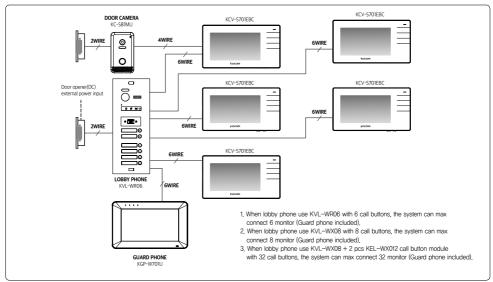


System configurations_Keypad lobby phone

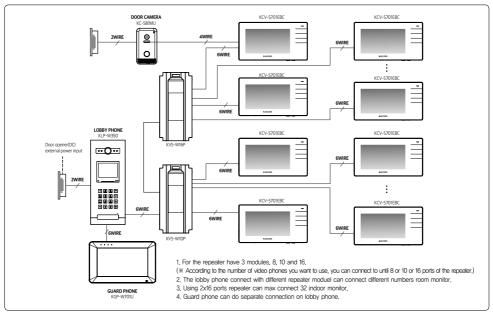


🕂 Caution

** The system wiring order is supposed to be like this : 485-, 485+ connects to Blue/White + Blue twisted wire / GND, Audio connects to Brown/White + Brown twisted wire / Power, Video connects to Green/White + Green twisted wire / And the rest Orange/White + Orange twisted wire will be connected to GND wire.

Terminal

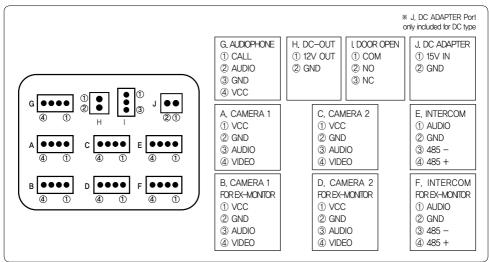


■ Cable requirement - Based on distance from lobby phone to monitor

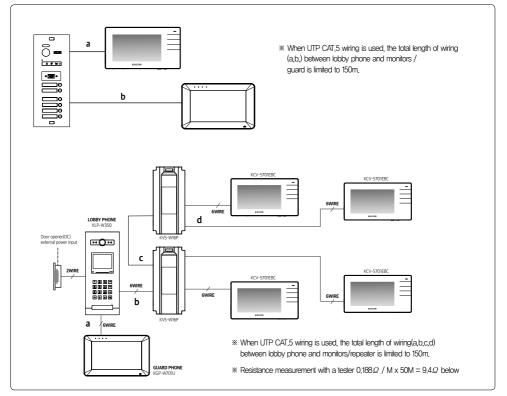

Instructions for operation

Communication from door camera & Door open

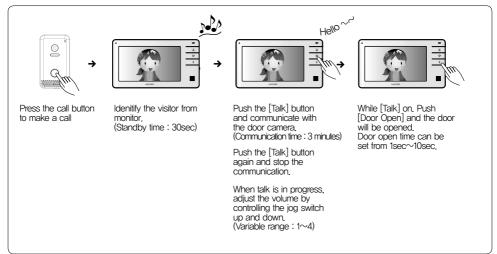

Camera monitoring



Press the monitoring button once to monitor door camera 1.

When monitoring is in progress, adjust the screen (brightness/ color/contrast) by controlling the jog switch up and down. (Variable range : 1~10)




Press the monitoring button one more time to monitor door camera 2.




Press the monitoring button one more time to end monitoring.

Extension calling & Receiving function

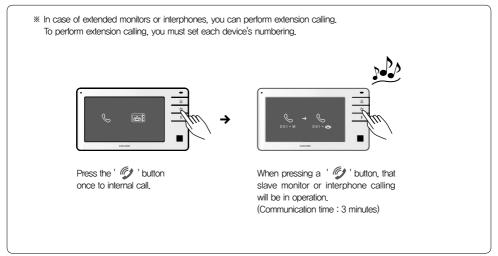

Call to the other guard phone

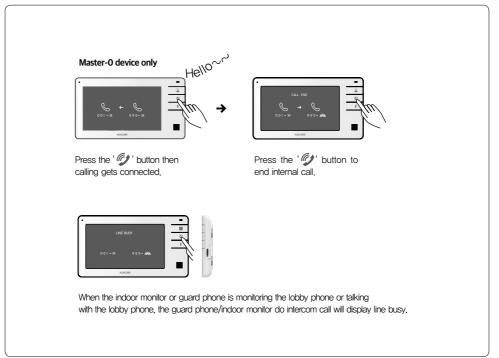

Adjusting talking sound from door camera and lobby phone

When talk is in progress, adjust the volume by controlling the jog switch up and down. (Variable range : 1~4)

Adjusting brightness

When monitoring is in progress, adjust the screen 'Brightness / Color / Contrast' by controlling the jog switch up and down. (Variable range : $1\sim10$)

Setting menu

- · Press the jog switch on idle screen to enter in setup menu.
- · Control the position of cursor by controlling the jog switch up and down.
- \cdot Menu is selected by pressing the jog switch
- · After making a selection, change the setting value of selected menu by controlling jog switch up and down.
- · Press jog switch to exit from selected menu.
- · Setting value is saved when exit menu is selected.




- Brightness : Adjust brightness (Variable range : 1~10)
- · Open time : Adjust door open time (Time : 1~10 seconds)
- · Language : Select language (English)
- · Speaking Volume : Adjust talking sound from door camera (Variable range : 1~4)
- · Call Volume : Adjust calling sound (Variable range : $0 \sim 4$, 0 : mute)
- · Calling times : Change number of calling sound (2 beats or 4 beats)
- · Slave Address : System specifications = Set monitor address (0–Master, $1\sim3$ –Slave)
 - General specifications = Set monitor address (1-Master and Slave)
- · Default : Set value to default
- · Exit : Exit from set-up menu

Setting monitor address on system

- · Press the open door button 5 times right after monitor power restart to access the monitor address setting page.
- When enter the monitor address setting page, press the side jog switch once to choose corresponding digits, then you can set the Monitor address from 001–998 by sliding jog switch up and down.
- After finishing address setting, press the side jog switch again, then press call button and monitoring button by order to save the address setting.
- * Address 999 is the guard phone address, the Indoor monitor can not use the 999 for monitor address.



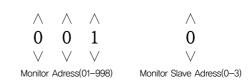

To receive after service, have the following ready before you contact our branches.

- 1. Name of the product.
- 2. Model number of the product.
- 3. The area of problem.
- 4. Phone number and address at which you can be contacted.

Warranty Card

PRODUCT	
MODEL	KCV-S701EBC(DC) / KCV-S701EBC(AC)
DATE PURCHASED	
WARRANTY PERIOD	
AGENCY ADDRESS	

KOCOM Warranties the original purchaser of this product as follows.

1) This product is produced under strict quality control and inspection procedures.

2) If this product breaks down during proper use as a result of product defect, KOCOM will repair it within one year from date of purchase free of charge.

- 3) The following cases will be subject to charge, even during warranty period:
 - a. Breakdown during transport, or through careless treatment, by consumer.
 - b. Breakdown cause by unauthorized repair, or system modification.
 - c. Breakdown caused by natural disaster or power disruption.

KOCOM CO., LTD. SINCE 1976

KCV-S701EBC	
X1024	