

Description

Thank you for purchasing TRU-S500DSP by TruAudio. The 500 watt DSP amplifier has some of the most advanced DSP functions available. We have included DSP settings for all of our passive subwoofers to get the highest performance out of each subwoofer.

Caution:


MAKE SURE TO READ THIS INSTRUCTION MANUAL BEFORE TURNING THE POWER ON OR HOOKING UP THIS POWER AMPLIFIER.

Installing Rack Mount Ears


If you are planning on installing this amplifier into a rack, continue reading how to install the supplied rack ears.

1. Use the supplied three screws to attach the supplied rack ears to the TRU-S500DSP amp. If required, the feet on the bottom of the amplifier can also be removed at this time by unscrewing the mounting screws located in the center of each foot.

2. Due to the weight of the amplifier, it is recommended that rear supports be secured to the rear rack rails. Hardware to do this is not supplied with the amplifier and is specific to the type and depth of rack being used.

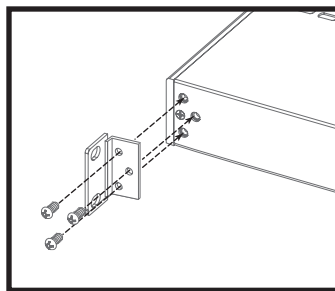


 TRU-S500DSP Amplifier Controls and Setup Front Panel



- 1. Power Switch:** Turns the amplifier on or off. Amplifier must be on for the trigger or auto sense modes to operate.
- 2. 16 Character x 2-row Liquid Crystal Display:** Shows the amplifier's status, menus and settings and works in conjunction with the turn and push navigation controls and the remote control.
- 3. Programming Navigation Control:** Used to scroll through the display menus, change setting and program the DSP controller.
- 4. Optional Rack Ears:** Two rack mount ears are provided for rack mounting.

Back Panel

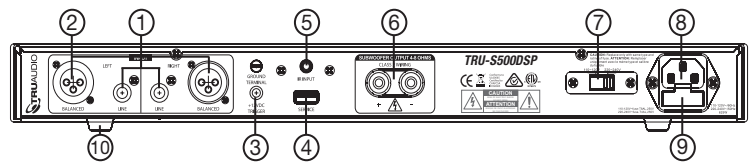

- 1. Line Input:** For receiving line-level signals. Accepts either a stereo or LFE signal.
- 2. XLR Balanced Input:** For receiving balanced signals. Accepts either a stereo or LFE signal
- 3. 12V Trigger Input:** For triggering the power on/off from other devices such as processors or receivers that have a 12V trigger output. 6V minimum required for triggering.
NOTE: Once in trigger mode, the amplifier cannot be turned on without a 12V trigger signal. To disable the 12V trigger, press and hold the navigation control knob. The power switch must be in the ON position. The trigger mode will be turned off and the amplifier will power on.
- 4. Service:** For uploading new firmware or updates.
- 5. IR Input:** Link to Infrared (IR) hub.


6. 5-way Binding Posts: Connect your subwoofer here. Minimum impedance of the load is 4 ohms. Multiple subwoofers can be connected if the combined load impedance is 4 ohms or greater.

7. Voltage Selector Switch: The amplifier can be used on 110~120V (60Hz) or 220~240V (50Hz) line voltage. To change the operating line voltage, turn the power off using the power button and unplug the power cord. Remove the plastic cover screws and the plastic cover over the voltage selector located on the rear of the amp. Set the switch to the correct position for the line voltage in your country. Replace the plastic cover and screws over the voltage selector switch.

NOTE: If required, remove the IEC line cord and replace with an IEC AC cable that matches the AC wall socket, this should be a 10A rated cable. When the voltage selector switch is changed, the fuse must also be changed to continue to provide protection to the amplifier.


8. Power Cord Receptacle: The supplied power cord needs to be connected to this receptacle in order for the amplifier to work properly.

9. Fuse Holder: This is the power fuse access. **WARNING!** In the event the fuse must be replaced, the replacement fuse must match exactly the original fuse value or damage to the amplifier may result. **Use a 8A 120V or 4A 240V fuse.** **CAUTION!** Before replacing the fuse, disconnect the power cord from the power receptacle.

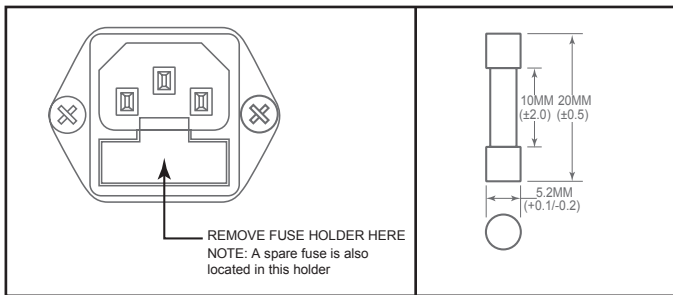


10. Removable Feet: The amplifier feet can be removed as required for rack mount installation.

Remote Control

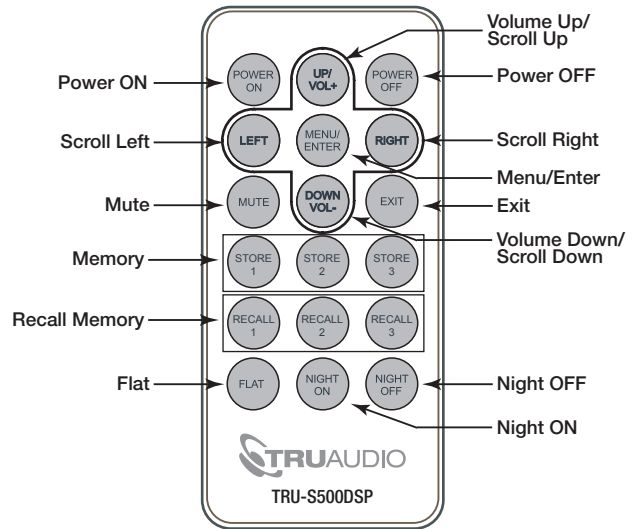

Control Flow Chart - SUB Mode

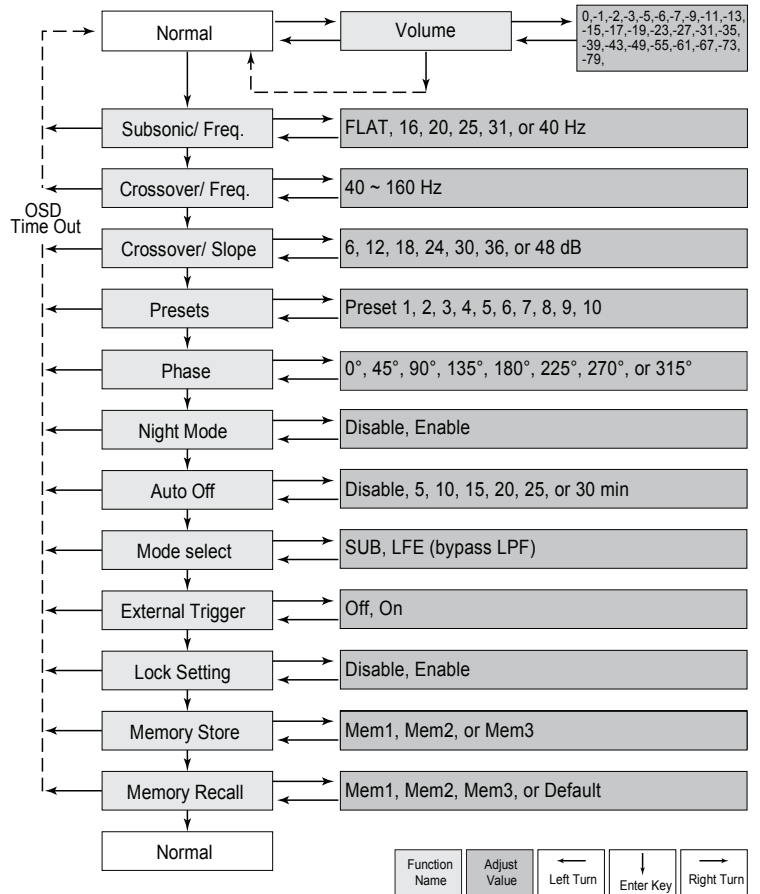

LCD Display Screens and Functions

 
Normally, the LCD display will show the status for a number of settings as well as the volume level and a flashing output level bar display.

Volume Control: Adjusts the output of the system. The volume control should be set to achieve similar volume levels from both the main speakers and subwoofer.




Volume Control

Subsonic Control: This allows the user to select the frequency at which they wish to cut off the high-pass audio signal.



Subsonic Control

 Crossover / Frequency: This allows the user to select the frequency at which they wish to cut off the low-pass audio signal. This feature only available in Sub Mode.



Crossover Frequency

Crossover / Slope: This allows the user to select the slope for the crossover. This feature only available in Sub Mode.



 
Crossover Slope

Preset Mode: There are presets for all TruAudio subwoofers.




EQ Mode

Phase Control: This feature is used to adjust the subwoofer's acoustic phase to match that of the main speakers.



Phase Control

 Night Mode: Limits the dynamic range of the amplifier so the louder context of the source signal is reduced. This feature allows the user to select night mode. Choose enable or disable.



Night Mode

Auto Off: This feature allows the amplifier to turn itself off when not in use. With the function set to active, the amplifier will monitor its input signal. If no signal is present the amplifier will shut down and go into standby mode. As soon as a signal is present, the amplifier will turn itself back on.



Auto Off

Mode Select: This allows the user to select a mode. Set values contain: SUB or LFE.



 
Mode Select

External Trigger: This allows the user to select the enable external trigger function. Press and hold the navigation control knob with the power switch in the ON position to change.




External Trigger

Lock Setting: When this function is active, all settings will be protected until disabled. Values are: Disable or Enable.




Lock Setting

 Memory Store: This allows the user to select the memory bank. There are three memory banks.



Memory Store

 Memory Recall: This allows the user to recall settings saved using the "Memory Store" function.



Memory Recall



TRU-S500DSP

Specifications

Power Output:	500 Watts (RMS @ 4Ω)
Total Harmonic Distortion (THD):	<1%
Equalizer:	Adjustable Built-in 10-Band (-6dB to +6dB)
Adjustable Low Pass Crossover:	40Hz to 160Hz / 1 Hz Increments
Adjustable Slope:	6dB-40dB
Line Level Input Sensitivity:	190 mV
Phase Control:	0 to 315° / 45° Increments
Auto Turn-on Sensitivity:	3 mV @ 50 Hz
Extrenal Trigger:	12V
Thermal Protection Circuit:	Yes
Night Mode:	Yes
Remote Control:	Yes
Single Ended and Balance Input:	Yes
Dimensions (with rack mounts):	19" W (483mm) 1.75" H (45mm) 10.38" D (264mm)
Weight:	16 lbs. (7.26kg)
Fuse:	8 Amp (120V) 4 Amp (240V)

Trouble Shooting

SYMPTOM	POSSIBLE CAUSE AND TEST PROCEDURE
No sound from the subwoofer(s).	<ol style="list-style-type: none"> 1. Check that the amplifier is plugged into an A/C power outlet and has power. 2. Make sure that the subwoofer(s) is/are connected properly. 3. Make sure there is an audio signal from pre-amp / receiver.
Sound from at least one subwoofer, but not the other(s).	<ol style="list-style-type: none"> 1. Verify that all wires are properly connected. 2. Verify that all connections are complete and secure, with no stray wires contacting other terminals. 3. Check each individual subwoofer

WARNING

TO PREVENT FIRE OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. THIS APPLIANCE SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING WATER AND THAT NO OBJECT FILLED WITH LIQUIDS SUCH AS VASES SHALL BE PLACED ON APPARATUS.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" with in the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operation and maintenance (servicing in the literature accompanying the appliance,

IMPORTANT SAFETY INSTRUCTIONS

Electricity is used to perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. However, improper use can result in electric shock and / or fire. In order to prevent potential danger, please observe the following instructions when installing, operating and cleaning the product. To ensure your safety and prolong the service life of your Sound Bar, please read the following precautions carefully before using the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.10. Do not defeat the safety purpose of the polarized or grounding-type plug. Apolarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade and the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Only use attachments/accessories specified by the manufacturer.
13. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
14. Unplug this apparatus during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
16. The mains plug or an appliance coupler is used as a disconnect device, the disconnecting device shall remain ready operable.

SoundVision Technologies dba TRUAUDIO

SUBWOOFER and ELECTRONIC PRODUCT WARRANTY

All subwoofers and amplifiers have a limited 5 year warranty. This warranty includes 5 year parts and repair labor on all components. The warranty extends only to the original purchaser of the product and not to any subsequent owner. TRUAUDIO's obligation under these warranties is limited to repairing or replacing any component found defective in material or workmanship under normal conditions of use with an equal and/or current product. These warranties shall not apply to products which have been abused, modified, or disassembled. Products to be repaired or returned under this warranty must be returned to the factory through an authorized TruAudio dealer with all transportation and insurance charges prepaid.

It is the policy of TRUAUDIO to continuously incorporate improvements into our products. All specifications are subject to change without notice. If you have any questions regarding this or any other TRUAUDIO products, please visit www.TruAudio.com or contact us:

Office: 1-888-858-1555, Monday-Friday 7 am - 6 pm MST.
Email: CustomerService@truaudio.com

