


WI-POE11S-48V | WI-POE56S-BT-I-O |  
WI-POE55S-BT-I-DC | WI-POE31S

### 1. Package Contents

Take WI-POE55S-BT-I-DC as an example

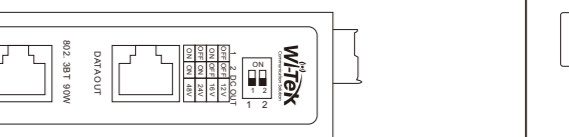

1 x Splitter



1 x Quick Installation Guide



1 x Wrench  
(only for WI-POE56S-BT-I-O)



1 x Ground Wire  
(only for WI-POE56S-BT-I-O)



2 x Screw Driver  
(only for WI-POE55S-BT-I-DC)



 
 
1 x Wall-mounting Accessory  
(only for WI-POE55S-BT-I-DC)



3 x M22 Waterproof Gland  
(only for WI-POE56S-BT-I-O)

### 2. Appearance Overview

WI-POE11S-48V



• LED indicator



LED Indicators	Description
PoE	On: PoE power received successfully Off: No PoE power supply access Blinking: Abnormal PoE power reception or abnormal DC output
Data	On: Data connection is successful Blinking: Data transmission Off: No Device connected

2 x Screw Driver  
(only for WI-POE55S-BT-I-DC)

1 x Wall-mounting Accessory  
(only for WI-POE55S-BT-I-DC)

3 x M22 Waterproof Gland  
(only for WI-POE56S-BT-I-O)


WI-POE56S-BT-I-O

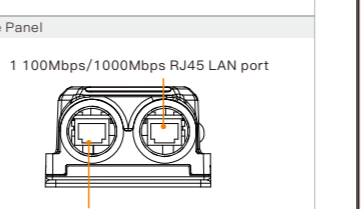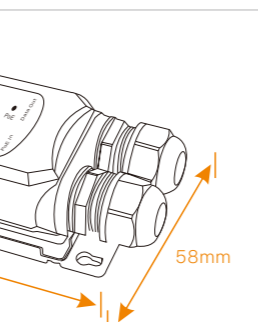

• LED indicator

LED Indicators	Description
PoE	Blinking: Abnormal power reception On: The voltage of PoE output is normal Off: The voltage of PoE output is abnormal
PWR	On: 12V DC output is normal Off: No PoE output or the splitter is abnormal

WI-POE55S-BT-I-DC

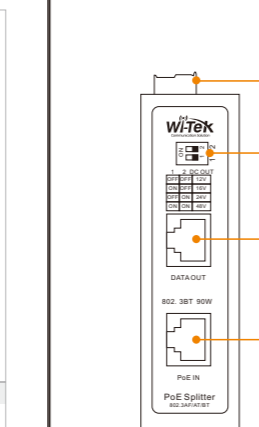


• LED indicator

LED Indicators	Description
PoE(Orange)	On: Power received successfully Blinking: Abnormal power reception or abnormal DC output Off: Not working
Data(Green)	On: Data connection is successful Blinking: Data transmission Off: No Device connected


DC Output Option		DC OUT
1	2	DC OUT
OFF	OFF	12V
ON	OFF	16V
OFF	ON	24V
ON	ON	48V

• Application Diagram

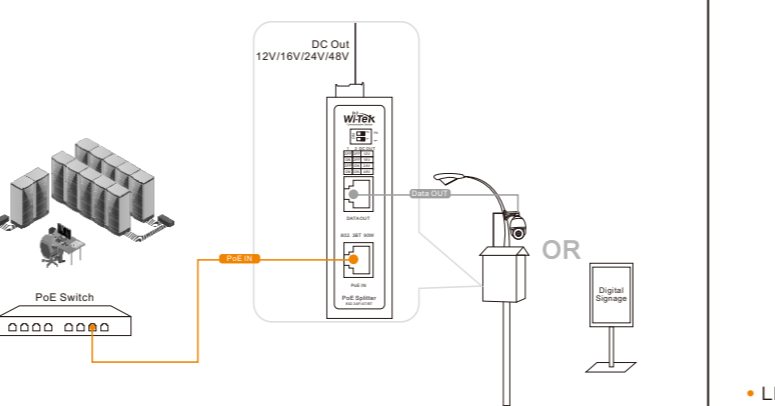

WI-POE31S

• Front panel

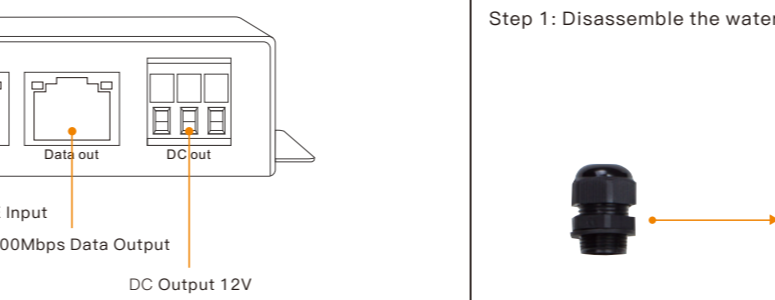

• LED Indicator light

LED	Color	Description
PoE	Orange	On: Power received successfully Blinking: Abnormal power reception or abnormal DC output Off: Not working
Data	Green	On: Data connection is successful Blinking: Data transmission Off: No Device connected


• Device Connection Diagram



### 4. Accessories Installation

For WI-POE56S-BT-I-O

Step 1: Disassemble the waterproof gland

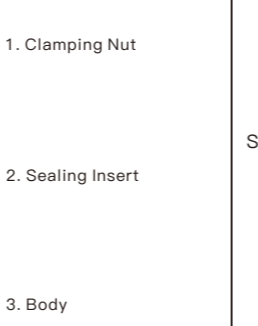

• LED indicator


LED Indicators	Description
PoE(Orange)	On: Power received successfully Blinking: Abnormal power reception or abnormal DC output Off: Not working
Data(Green)	On: Data connection is successful Blinking: Data transmission Off: No Device connected

Step 2: Turn the body of waterproof gland to the RJ45 ports and tighten it by the wrench. Pick a cable and run through the sealing insert and clamping nut.



### 5. Installation

• Wall-mount Installation (Only for WI-POE56S-BT-I-O)

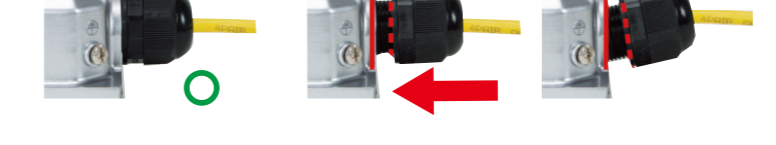

Step 3: Plug the cable into the port.



Step 4: Insert the sealing insert into the waterproof gland body.



Step 5: Attach the clamping nut to the waterproof gland to complete assembly.




Step 6: Check it and make sure it is tightly installed.



Step 7: Repeat Step 1 to Step 6 for other ports.



• Desktop Installation

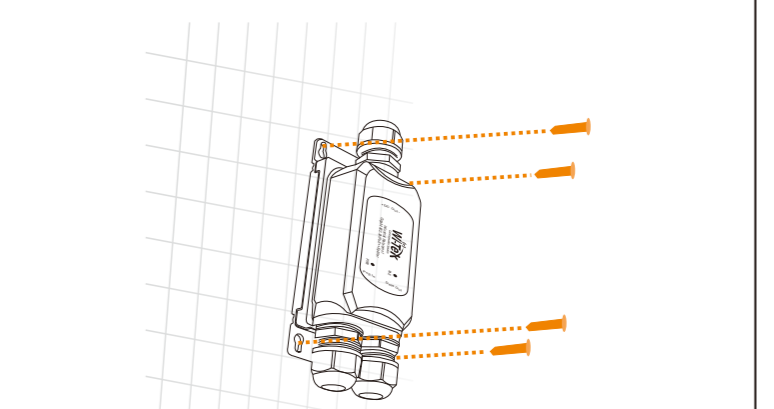

### Warranty Card

Username	
Address	
Telephone No.	
Purchase Shop	
Purchase Address	
Product Model No.	
Purchase Time	
Serial No.	
Dealer Signature	

-If the product defects within three months after purchase, we will provide you a new product of the same model.  
-If the product defects within the three-year warranty period, we will provide the professional maintenance service.  
-Proof of purchase and a complete product serial number are required to receive any services guaranteed as part of the limited warranty.  
-Any other defects that are not caused by workmanship or product quality, such as natural disasters, water damage, extreme thermal or environmental conditions, sticker damaged, warranty card losing will disqualify the product from limited warranty.

