

**13**

VIVOTEK Control Center

Disk Status Network Status System Status

VAST2 Service Import / Export Utility Shepherd

File Manager Keyboard Language Control

Disk Management RAID Config

Ctrl + Alt + F12 ->

Windows taskbar

Full dump

**14** No intente quitar o desinstalar el software en la memoria flash montada.

Disk Management

Volume	Layout	Type	File System	Status	Capacity	Free Spa...	% Free	Fault Tolerance	Overhead
(C:)	Simple	Basic	FAT32	Healthy (A...	9.99 GB	8.10 GB	81 %	No	0%
(D:)	Simple	Basic	NTFS	Healthy (S...	49.62 GB	45.84 GB	92 %	No	0%
(D:)	Simple	Basic	FAT	Healthy (P...	1.87 GB	813 MB	43 %	No	0%

Disk 0 Basic 59.63 GB Online 10.00 GB FAT32 Healthy (Active, Primary Partition) (C:) 49.62 GB NTFS Healthy (System, Boot, Primary Partition)

Disk 1 Removable 1.87 GB Online (D:) 1.87 GB FAT Healthy (Primary Partition)

Disk 2 Basic 5588.00 GB Online 2048.00 GB Unallocated

Initialize Disk

Offline

Detach VHD

Properties

Help

**15**

Initialize Disk

You must initialize a disk before Logical Disk Manager can access it.

Select disks:

☑ Disk 2

Use the following partition style for the selected disks:

Master Boot Record

GPT (GUID Partition Table)

**GPT**

Note: The GPT partition style is not recognized by all previous versions of Windows. It is recommended for disks larger than 2TB, or disks used on Itanium-based computers.

OK Cancel

**diec**

Volume	Layout	Type	File System	Status	Capacity	Free Spa...	% Free	Fault Tolerance	Overhead
(C:)	Simple	Basic	FAT32	Healthy (A...	9.99 GB	8.10 GB	81 %	No	0%
(D:)	Simple	Basic	NTFS	Healthy (S...	49.62 GB	45.84 GB	92 %	No	0%
(D:)	Simple	Basic	FAT	Healthy (P...	1.87 GB	813 MB	43 %	No	0%

Disk 0 Basic 59.63 GB Online 10.00 GB FAT32 Healthy (Active, Primary Partition) (C:) 49.62 GB NTFS Healthy (System, Boot, Primary Partition)

Disk 1 Removable 1.87 GB Online (D:) 1.87 GB FAT Healthy (Primary Partition)

Disk 2 Basic 5588.00 GB Online 2048.00 GB Unallocated

New Simple Volume...

New Spanned Volume...

New Striped Volume...

New Mirrored Volume...

New RAID-5 Volume...

Properties

Help

**17**

New Simple Volume Wizard

Welcome to the New Simple Volume Wizard

This wizard helps you create a simple volume on a disk.

A simple volume can only be on a single disk.

To continue, click Next.

< Back Next > Cancel

**18**

New Simple Volume Wizard

Specify Volume Size

Choose a volume size that is between the maximum and minimum sizes.


Maximum disk space in MB: 5721982

Minimum disk space in MB: 8


Simple volume size in MB: 5721982

< Back Next > Cancel


19

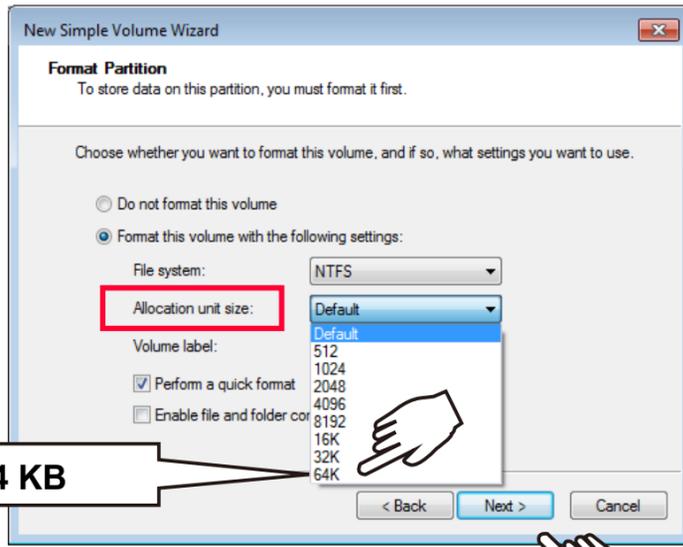


20

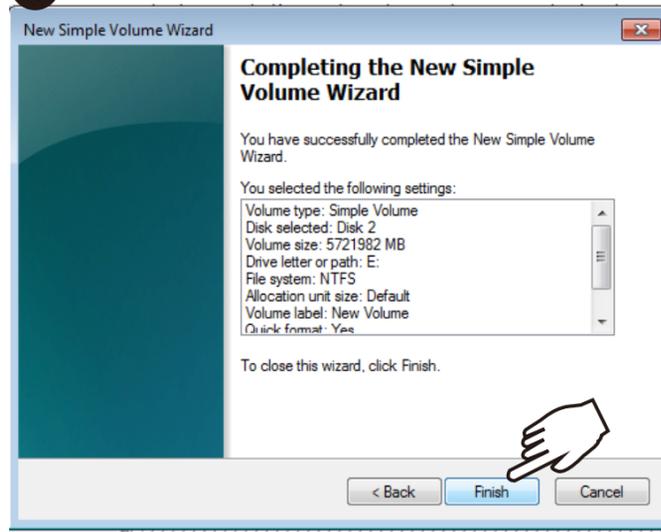


21

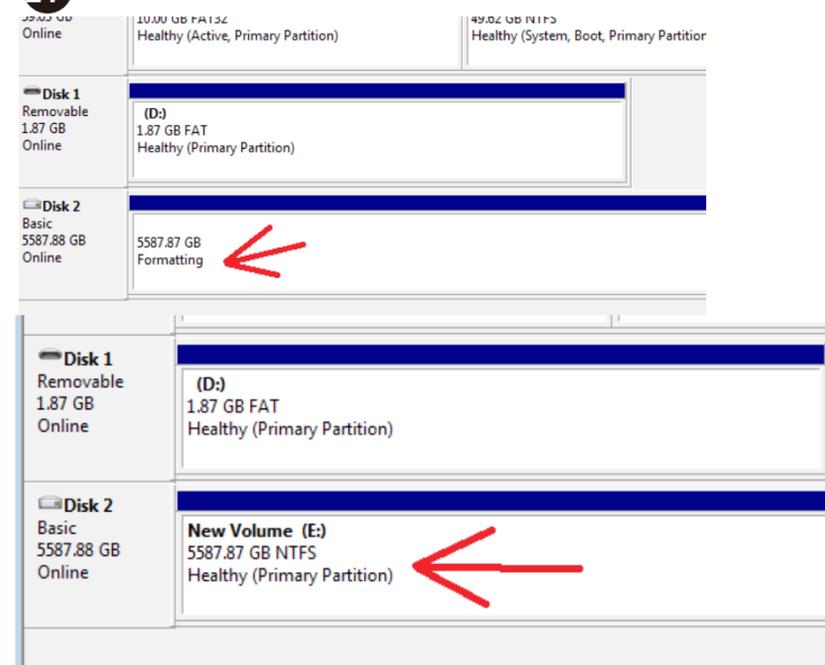


22

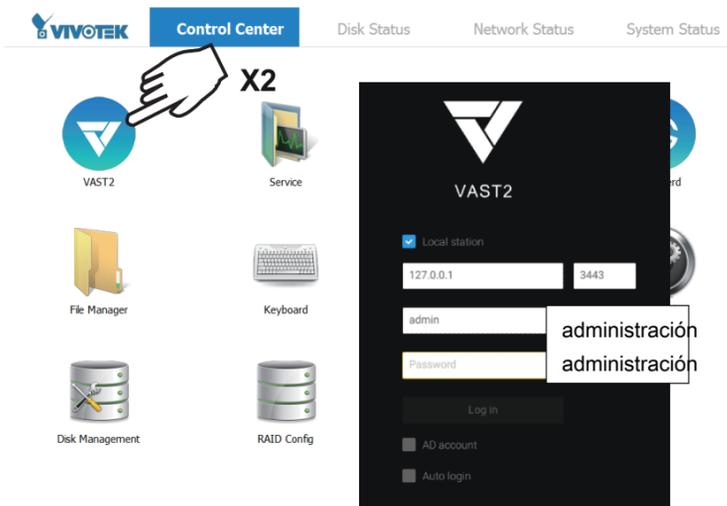


23

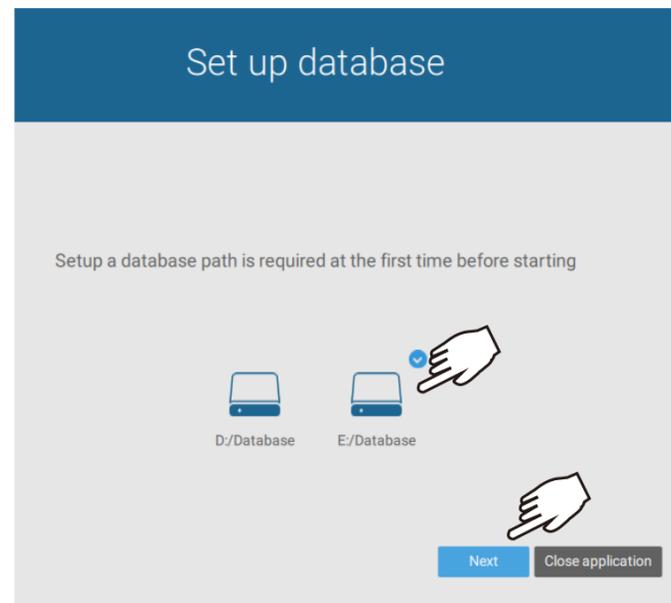


24

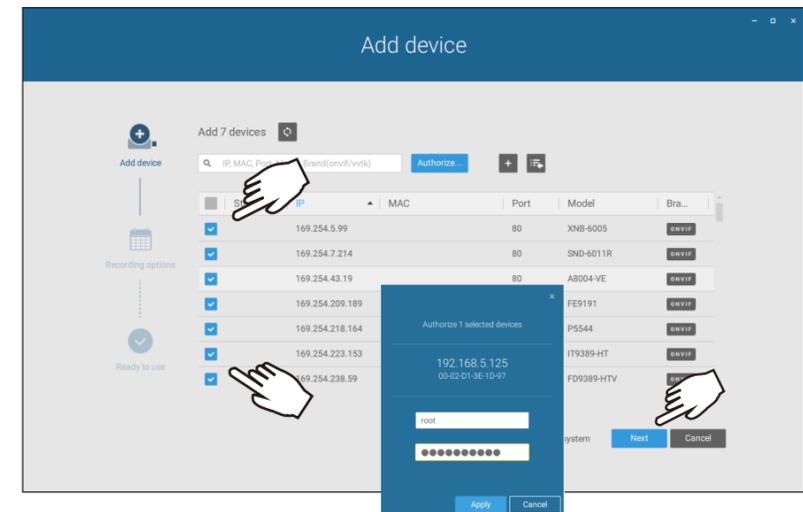

25

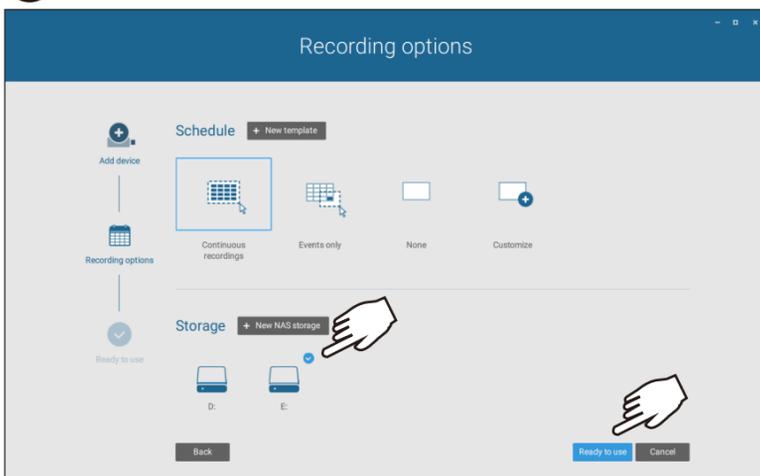

26

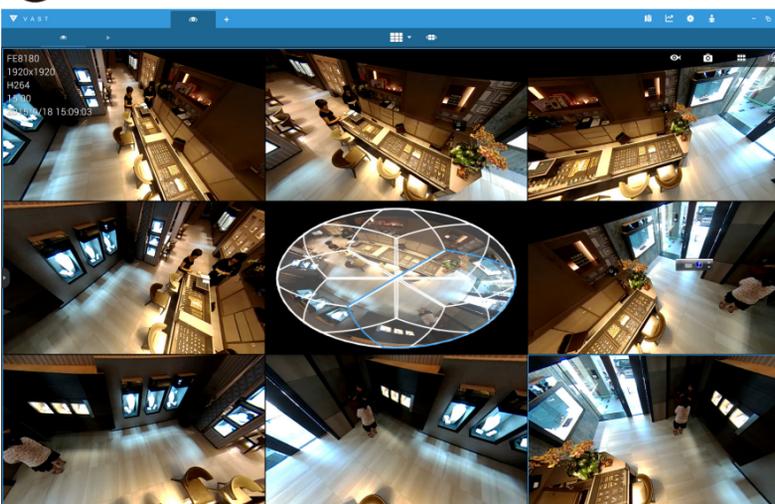

Póngase en contacto con los distribuidores autorizados para obtener información sobre la garantía y el servicio RMA. Visite <https://www.vivotek.com/support/warranty-rma>

Todas las especificaciones están sujetas a cambios sin ruido. Copyright © 2020 VIVOTEK INC. Todos los derechos reservados.

VIVOTEK INC.  
#F, No. 162, Lien-Cheng Rd., Chung-Ho, Nueva ciudad de Taipei, 235, Taiwan, República de China  
T: + 886-2-8245282 | F: + 886-2-8245532 | M: sales@vivotek.com

VIVOTEK USA, INC.  
2050 Ringwood Avenue, San José, CA 95131  
T: 408-773-8886 | F: 408-773-8298 | M: salesusa@vivotek.com

VIVOTEK Europa  
Zandvoort 15, 2132 MZ Hoofddorp Delta Electronics T: +31 (0) 20 800 3817 E:  
sales@vivotek.com