

WiFi Kit S-WE02



Quick Guide

WiFi Kits S-WE02

From this page

This manual is suitable for firmware version of H4.01.40Y2.0.02W1.0.03+.

WiFi Kit S-WE02 is an external data logger in the SolarMAN PV monitoring series.

By connecting with single or multiple inverters through RS485/422/232 interface, the Kit can collect information of PV systems from inverters. With the integrated WiFi function, the Kit can connect to router and transmit data to the web server, realizing remote monitoring for users. In addition, Ethernet is also available for connection to router, enabling transmission of data.

Users can check the runtime status of the device by checking the 4 LEDs on the panel, indicating Power, 485/422, Link and Status respectively.

A : Unpack

B : Install data logger

C : Connect data logger and inverters

D : Connection setting

E : Register on SolarMAN Portal

F : Log in SolarMAN Portal to manage power station

G : Trouble shootings

This Quick Guide is intended to assist users in quick installation and start of WiFi Kit S-WE02. If any problems, please refer to corresponding chapters of S-WE02 User Manual for details.

A : Unpack

I. Checklist

After unpacking the box, please make sure all the items are contained as follows:



1 PV data logger (WiFi Kit S-WE02)



1 power adapter with European or British plug



2 screws




2 expandable rubber hoses



1 Quick Guide

II. Interface and connection

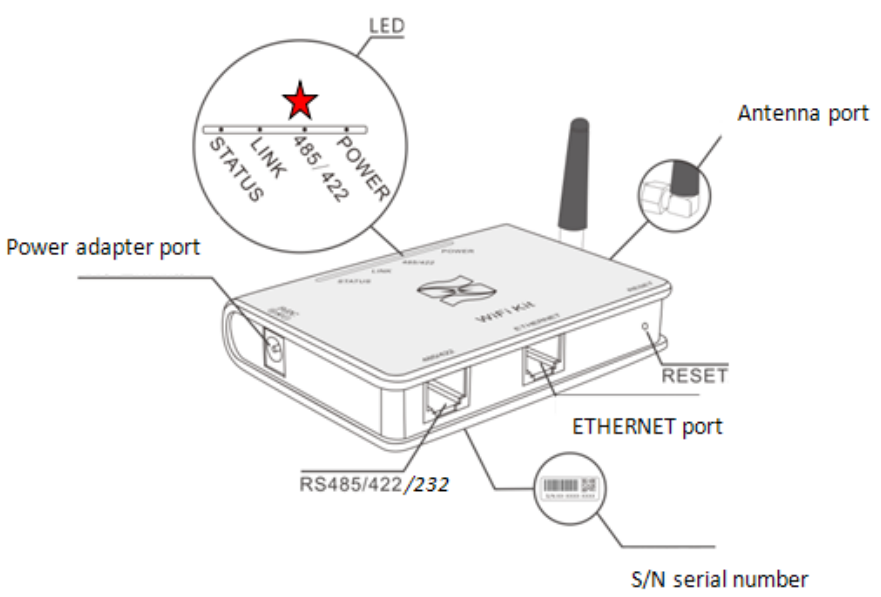

★ Notice: Some products may use RS232.

B : Install data logger

WiFi Kit can be either wall-mounted or flatwise. Please refer to User Manual for details.


C : Connect data logger and inverters

Notice: 1. Power supply of inverters must be cut off before connection. Make sure that all connections are completed, then power the data logger and inverters, otherwise personal injury or equipment damage may be caused.

2. Basic version of WiFi Kit with RS485/422 port can be connected to up to 4 inverters at a time. Advanced version may support up to 32 devices; WiFi Kit with RS232 port can be connected to 1 inverter at a time.


I. Connection with single inverter

Connect inverter and data logger with network cable, and connect data logger and power supply with power adapter.

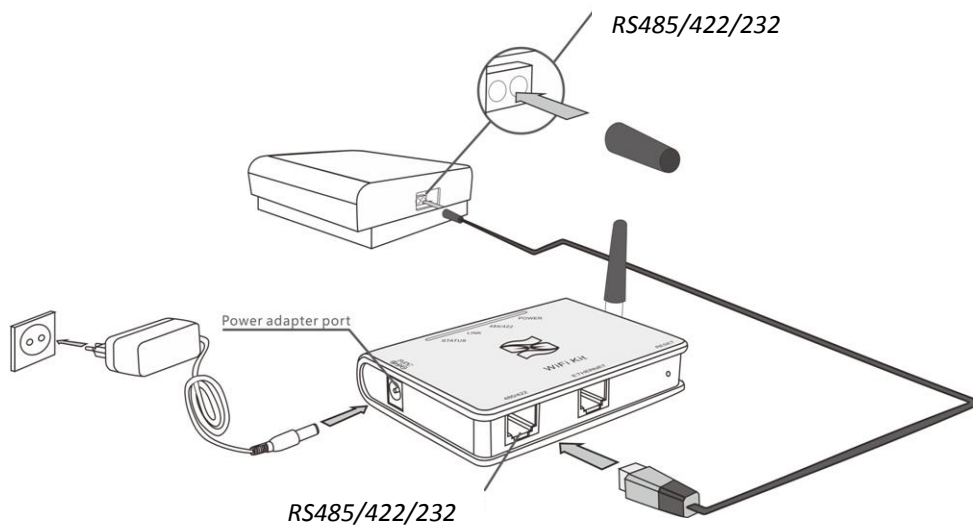


II. Connection with multiple inverters

1. String connect multiple inverters with network cables.
2. Connect the first or last inverter in the string to data logger with network cable.
3. Connect data logger to power supply with power adapter.

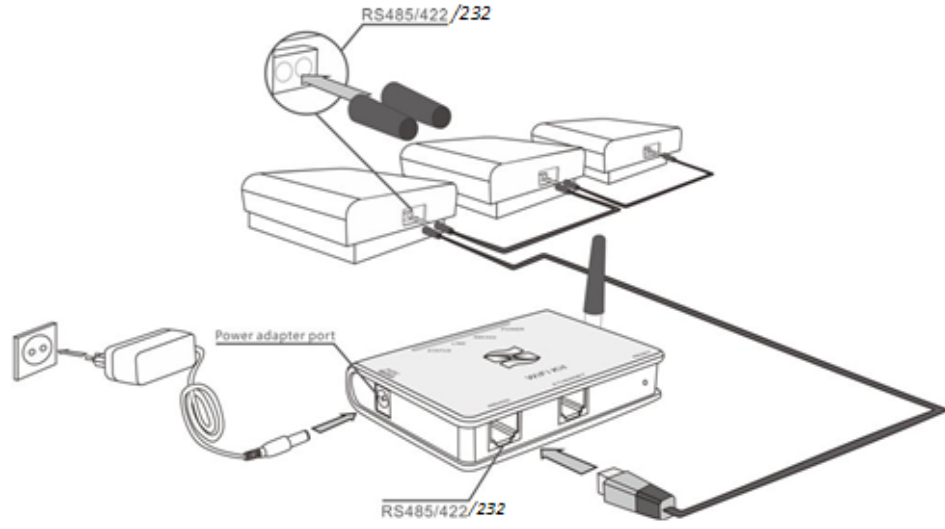

Notice: The connectors of the connection cable may differ according to the brands and models of connected inverters.

III. Line order of connector to WiFi Kit

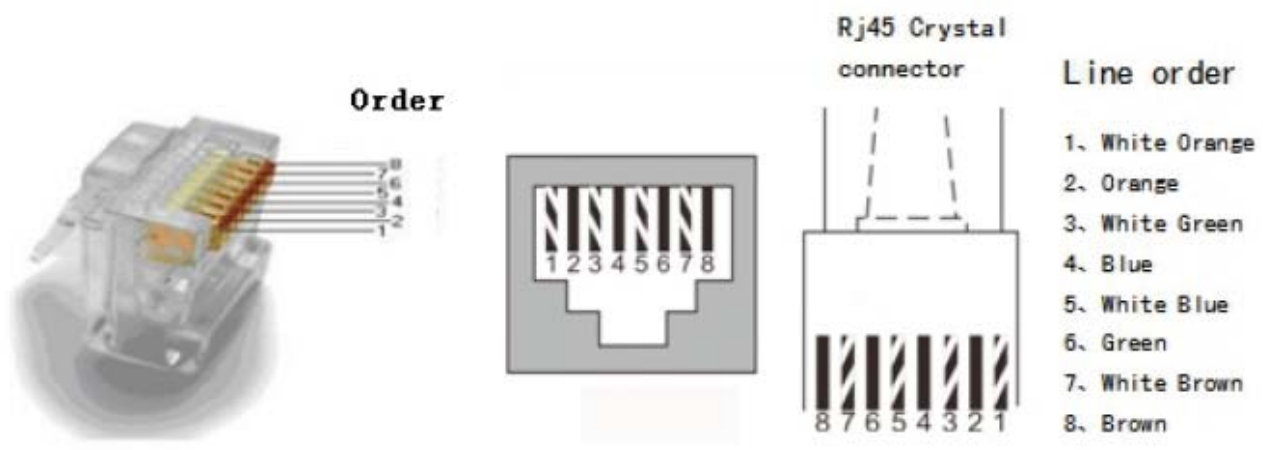

Device	Order	Color	RJ45	RS485	RS422	RS232
WiFi Kit	1	White orange	Pin1	NC	NC	NC
	2	Orange	Pin2	NC	NC	NC
	3	White green	Pin3	NC	RX+	RXD
	4	Blue	Pin4	A	TX+	NC
	5	White blue	Pin5	B	TX-	NC
	6	Green	Pin6	NC	RX-	TXD
	7	White brown	Pin7,	GND	GND	GND
	8	Brown	pin8	GND	GND	GND

IV Confirm connection

When connection between inverter and data logger is finished and with the power on for about 5 minutes, please check the 4 LEDs. If POWER, RS485/422 and STATUS are permanently on, the connection should be successful. If any problems, please refer to [G. Debug](#).

D : Connection setting

The Kit can transfer information via either WiFi or Ethernet, users may choose the appropriate method accordingly.

The configuration of the kit may be set via PC or APP Tool for iPhone and smart phones with Android operation system.


Please visit App Store or Google Play to get SolarMAN App for free.

I. Connection via WiFi


Notice: The setting hereinafter is operated with Windows XP for reference only. If other operating systems are used, please follow the corresponding procedures.

1. Prepare a computer or device with WiFi, e.g. tablet PC and smartphone with WiFi function.
2. Obtain an IP address automatically.

④ Open **Wireless Network Connection Properties**, double click **Internet Protocol (TCP/IP)**

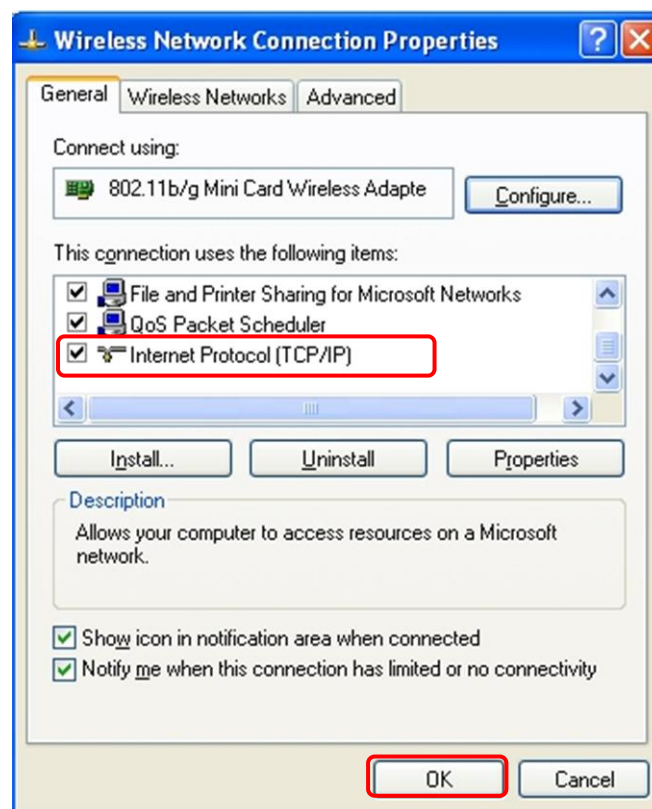


④ Select **Obtain an IP address automatically**, and click **OK**

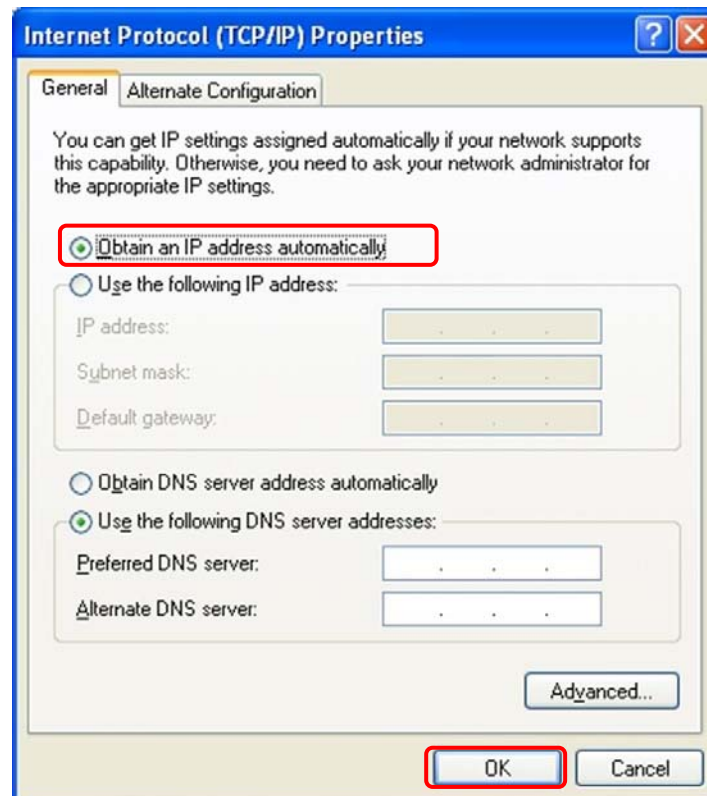


3. Set WiFi connection to the data logger


① Open wireless network connection and click **View Wireless Networks**

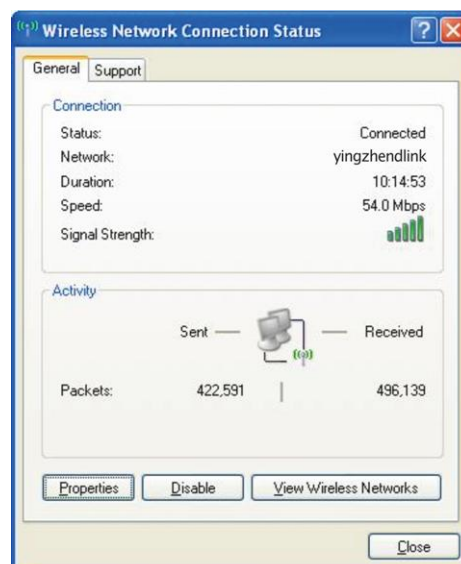

② Select wireless network of the data logger, no passwords required as default. The network name consists of **AP** and the **serial number of the product**. Then click **Connect**.

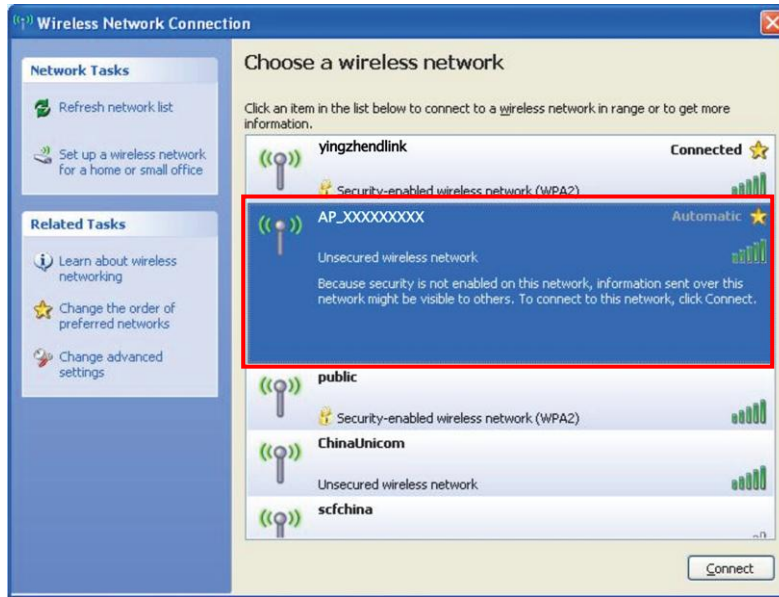

③ Connection successful

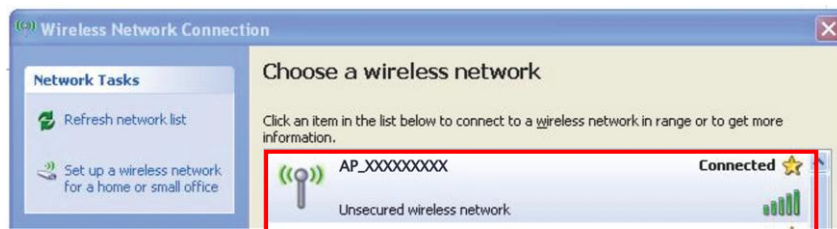



Notice: If **AP_(serial number of product)** is not available in the wireless network list, there may be problems in the connection or setting of data logger. Please refer User Manual for troubleshooting.

4. Set parameters of data logger

④ Open a web browser, and enter **10.10.100.254**, or **http://wifi/** then fill in username and password, both of which are **admin** as default.

Recommended browsers: Internet Explorer 8+, Google Chrome 15+, Firefox 10+

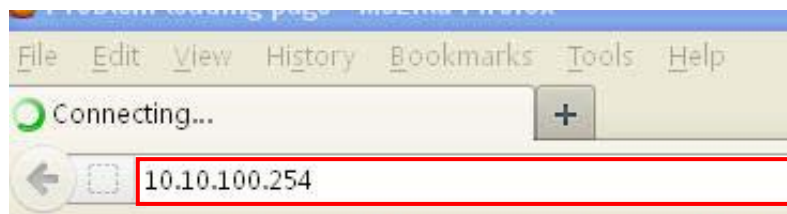

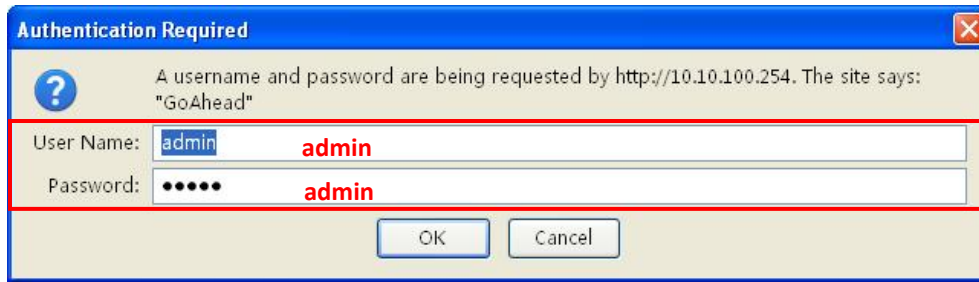

② In the Status page, you can view general information of the data logger.

中文 | English

Status	<p>Device information</p> <p>Device serial number: 601000000</p> <p>Firmware version: H4.01.36Y1.0.04W1.0.04(KL_V1.1)</p> <p>Wireless AP mode: Enable</p> <p>SSID: AP_601000000</p> <p>IP address: 10.10.100.254</p> <p>MAC address: AC:CF:23:10:F3:64</p> <p>Wireless STA mode: Enable</p> <p>Router SSID: yingzhendlink</p> <p>Signal Quality: 34%</p> <p>IP address: 192.168.1.187</p> <p>MAC address: AC:CF:23:10:F3:65</p> <p>Cable mode: Enable</p> <p>IP address: 192.168.1.187</p> <p>MAC address: AC:CF:23:10:F3:67</p> <p>Remote server information</p>	Help
--------	--	------

The device can be used as a wireless access point (AP mode) to facilitate users to configure the device, or it can also be used as a wireless information terminal (STA mode) to connect the remote server via wireless router.


Ver.1.0.06

③ Follow the setup wizard to start quick setting.

(a) Click **Wizard** to start, then click **Start** to continue..



(b) Select **Wireless connection**, and select the type of your inverter, then click **Next**

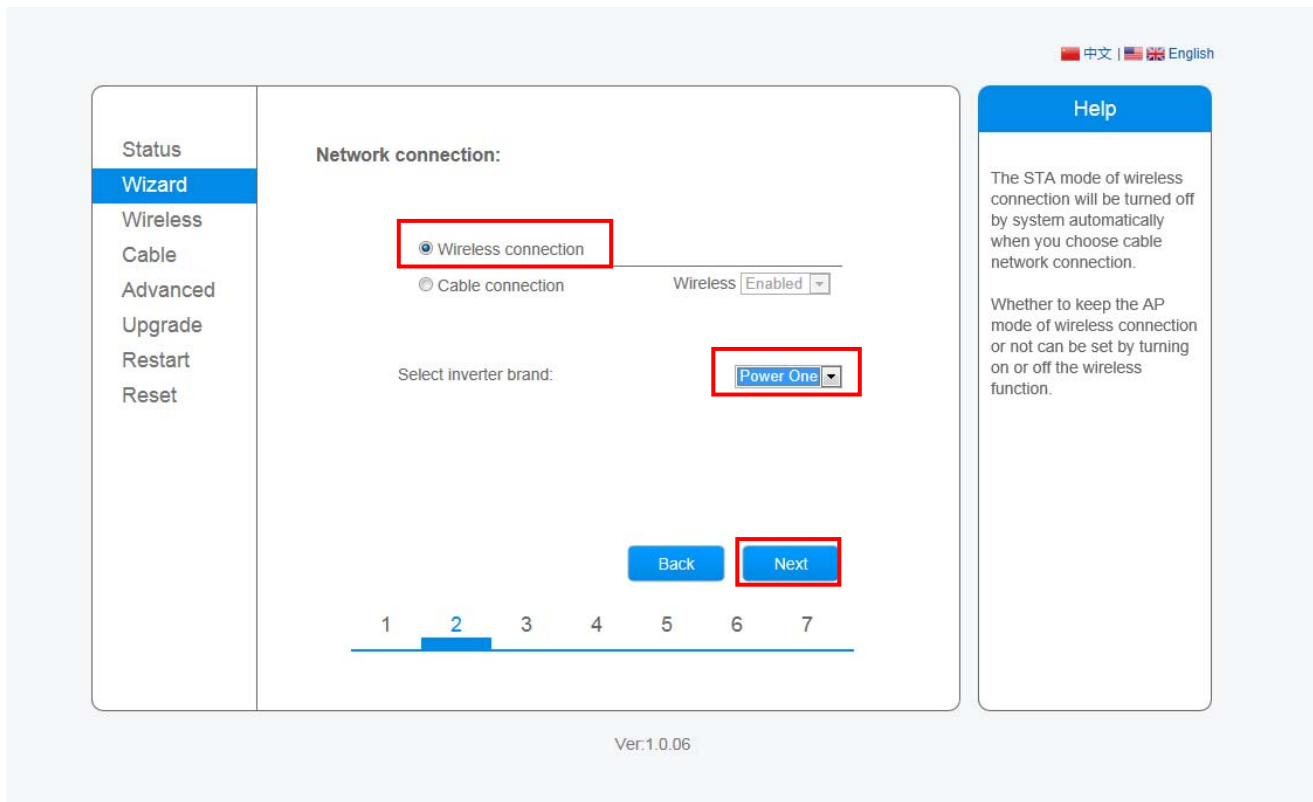

(c) Click **Refresh** to search available wireless networks, or add it manually.

(d) Select the wireless network you need to connect, then click **Next**

Status

Wizard

Wireless

Cable

Advanced

Upgrade

Restart

Reset

Please select your current wireless network:

Site Survey

SSID	BSSID	RSSI	Channel
<input type="radio"/> AP_603890570	ac:cf:23:10:f3:38	55%	1
<input type="radio"/> ChinaNet-SFVe	0c:4c:39:10:65:c9	70%	1
<input type="radio"/> iTV-SFVe	5a:4c:39:10:65:ca	70%	1
<input type="radio"/> AP_603040574	ac:cf:23:10:f3:48	20%	1
<input checked="" type="radio"/> yingzhendlink	ec:6c:9f:04:b3:2c	50%	1
<input type="radio"/> AP_604779731	ac:cf:23:12:1e:9c	55%	1
<input type="radio"/> AP_501201091	ac:cf:23:10:84:04	10%	1
<input type="radio"/> AP_901000414	ac:cf:23:ff:33:2c	39%	1
<input type="radio"/> on lead	a8:15:4d:6c:fb:a4	0%	1
<input type="radio"/> AP_SOLAR_PORTAL_M2M_20120615	a4:99:47:29:67:f0	55%	5

★Note: When RSSI of the selected WiFi network is lower than 15%, the connection may be unstable, please select other available network or shorten the distance between the device and router.

Refresh

Add wireless network manually:

Network name (SSID)
(Note: case sensitive)

Encryption method

Encryption algorithm

Back
Next

1 2 3 4 5 6 7

Help

This step will help to connect the device to your desired WLAN. If you do not find your wireless router on the left list, please refresh several times or add it manually.


Please check your wireless router for the right encryption method and encryption algorithm.

If your wireless router does not broadcast SSID, please add a wireless network manually.

Notice: If the signal strength (RSSI) of the selected network is <15%, which means unstable connection, please adjust the antenna of the router, or use a repeater to enhance the signal.


The SSID of your selected router network should be less than 30 characters, in which blank space should not be included.

(e)Enter the password for the selected network, then click **Next**

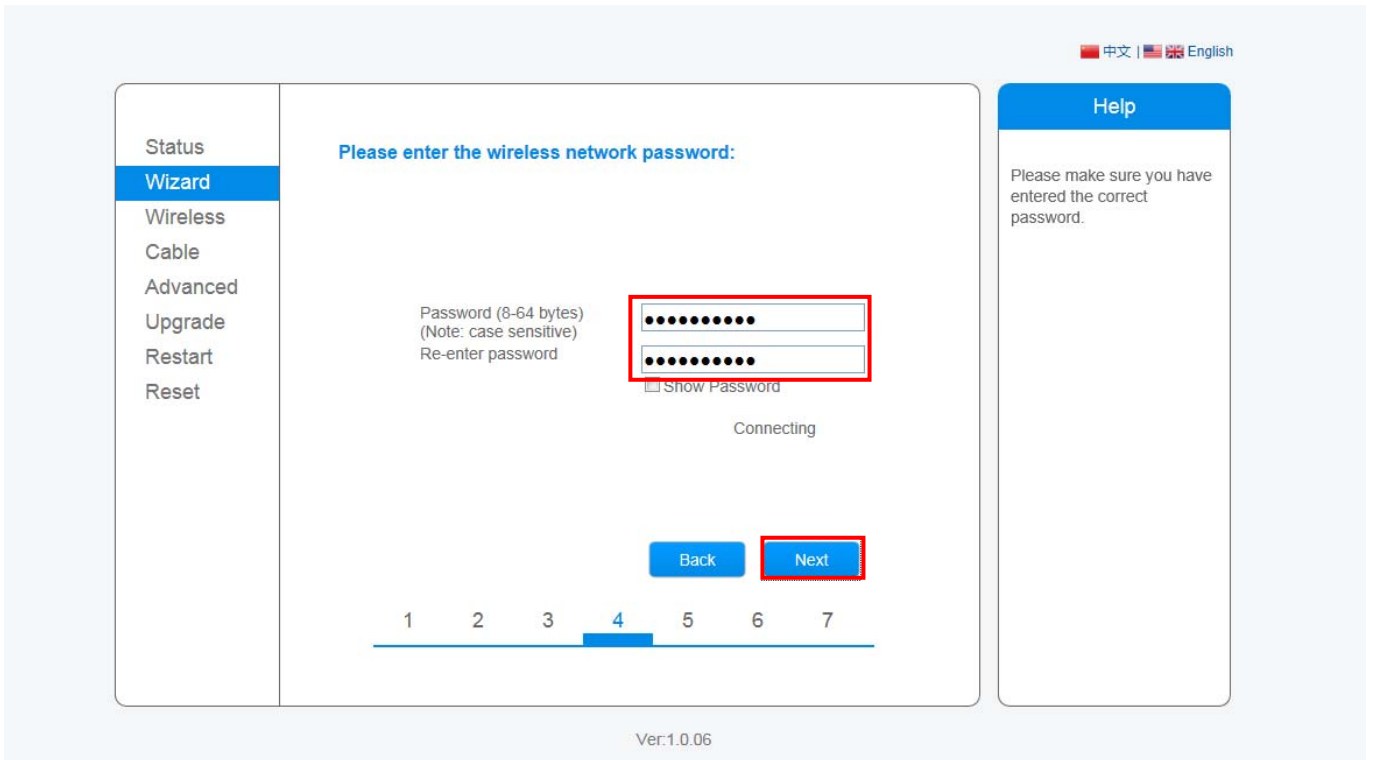

Notice: Router password cannot be recognized if it contains any character such as '&', '#', '%', and blank space.

The password is being verified, please wait for a while. If you have entered an invalid password or encryption method, an error notice will pop up.

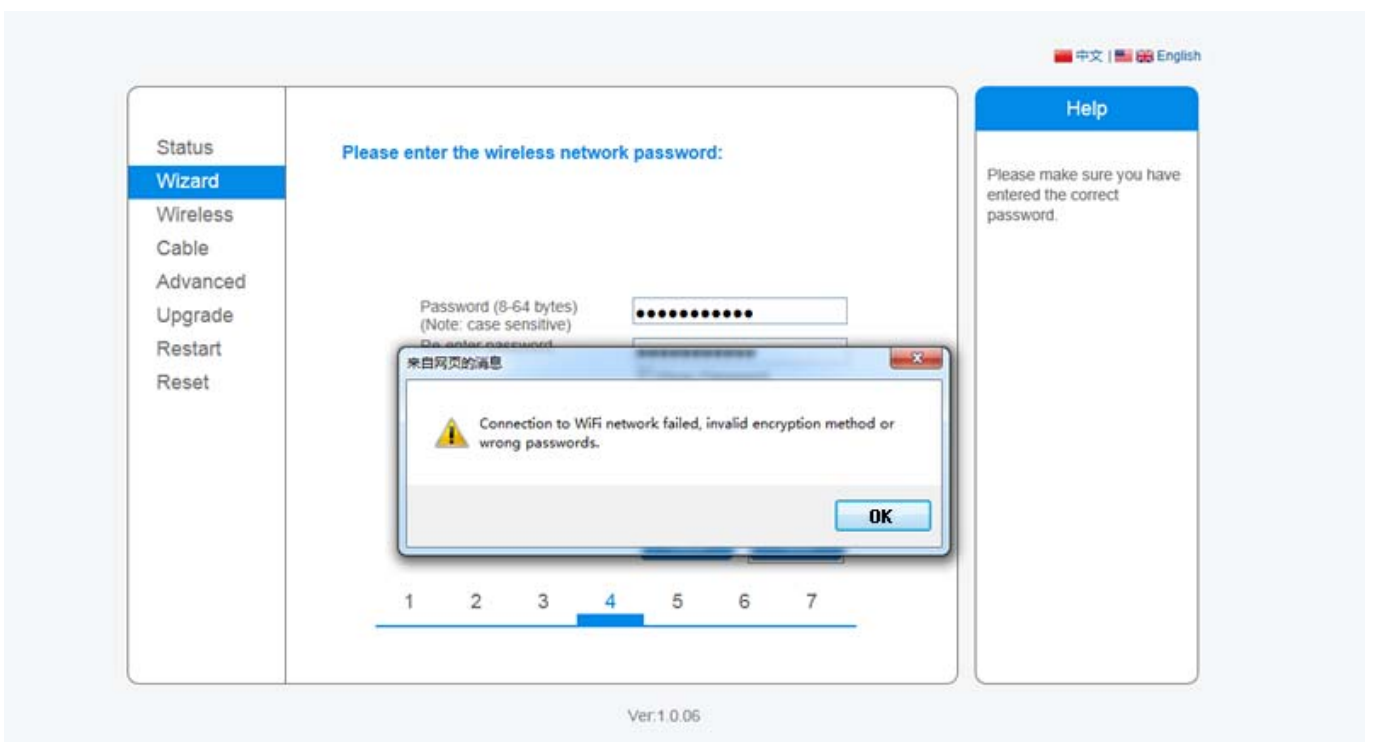

(f) Select **Enable** to obtain an IP address automatically, then click **Next**

Ver:1.0.06


(g) Enhance security settings of the WiFi Kit by selecting any options as listed, then click **Next**.

- Option1

Ver:1.0.06


If you choose to **hide AP**, the SSID of the AP network for your WiFi Kit will be invisible on your wireless network list. Please reconfirm the IP address of the WiFi Kit on your router before you log in this server next time.

- Option2

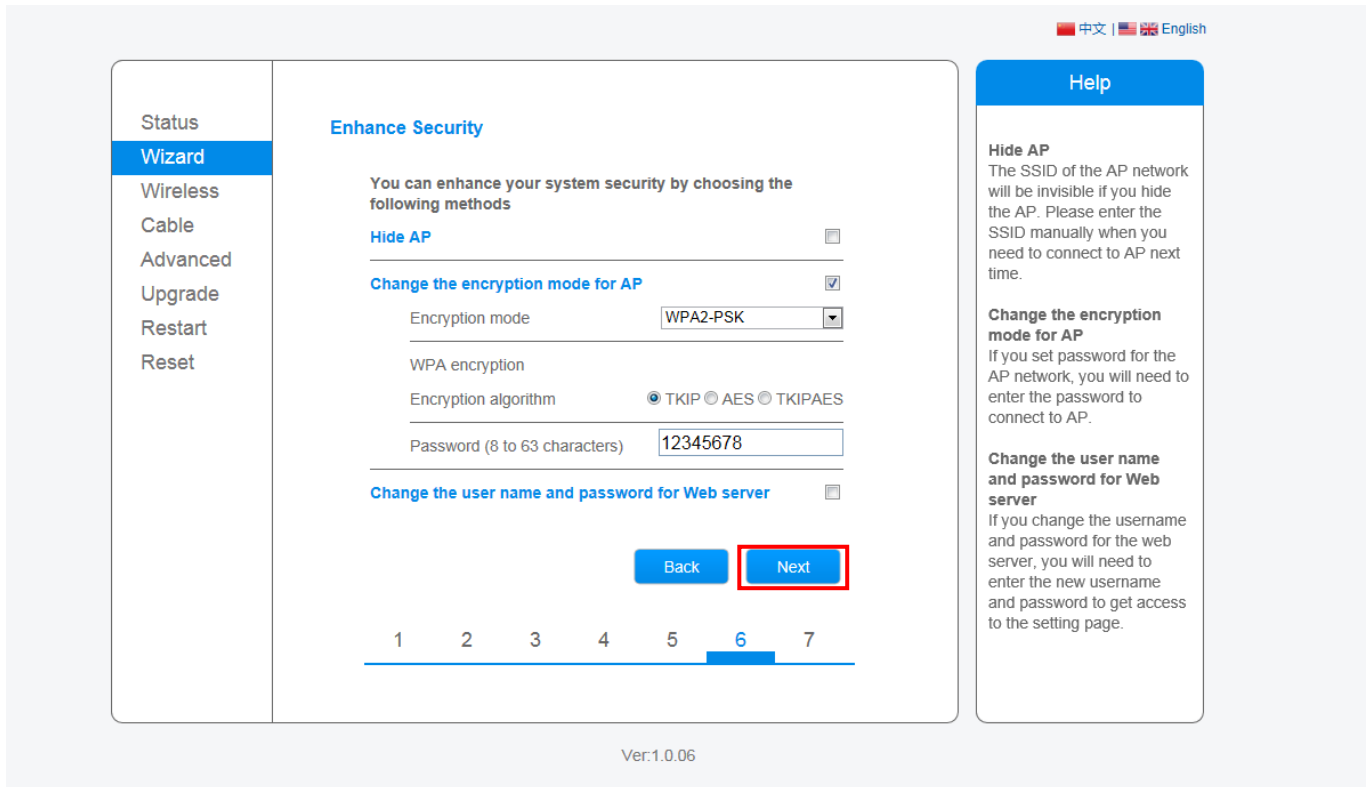

If you wish to change the **encryption mode** of the AP network, you will need to enter the correspondent encryption method and password before you connect to this WIFI Kit next time.


- Option3

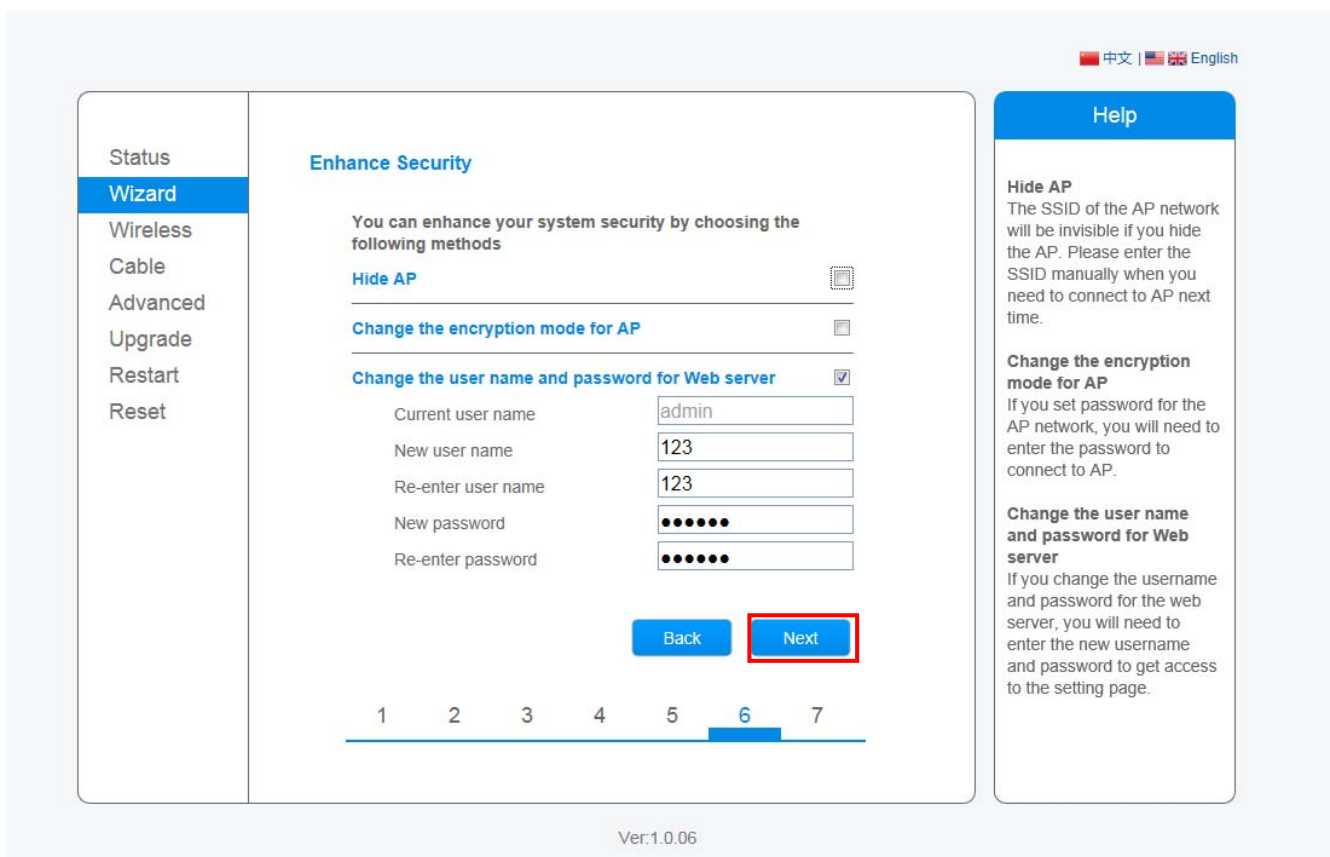


If you wish to change the user name and the password of the Web server, please enter the new username and password

when you need to re-log in this server.

(h) If setting is successful, the following page will display. Click **OK** to restart.

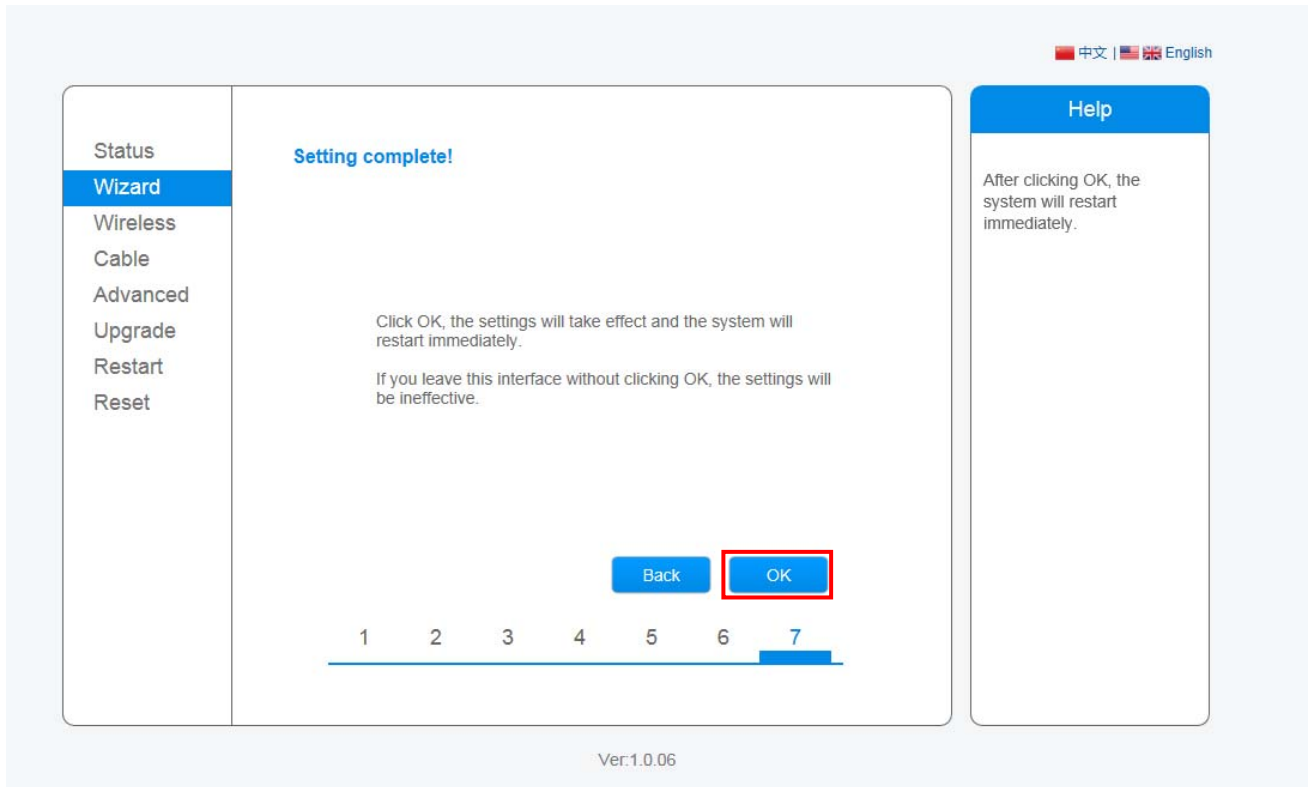

(i) If restart is successful, the following page will display. If this page does not display automatically, please refresh your browser.

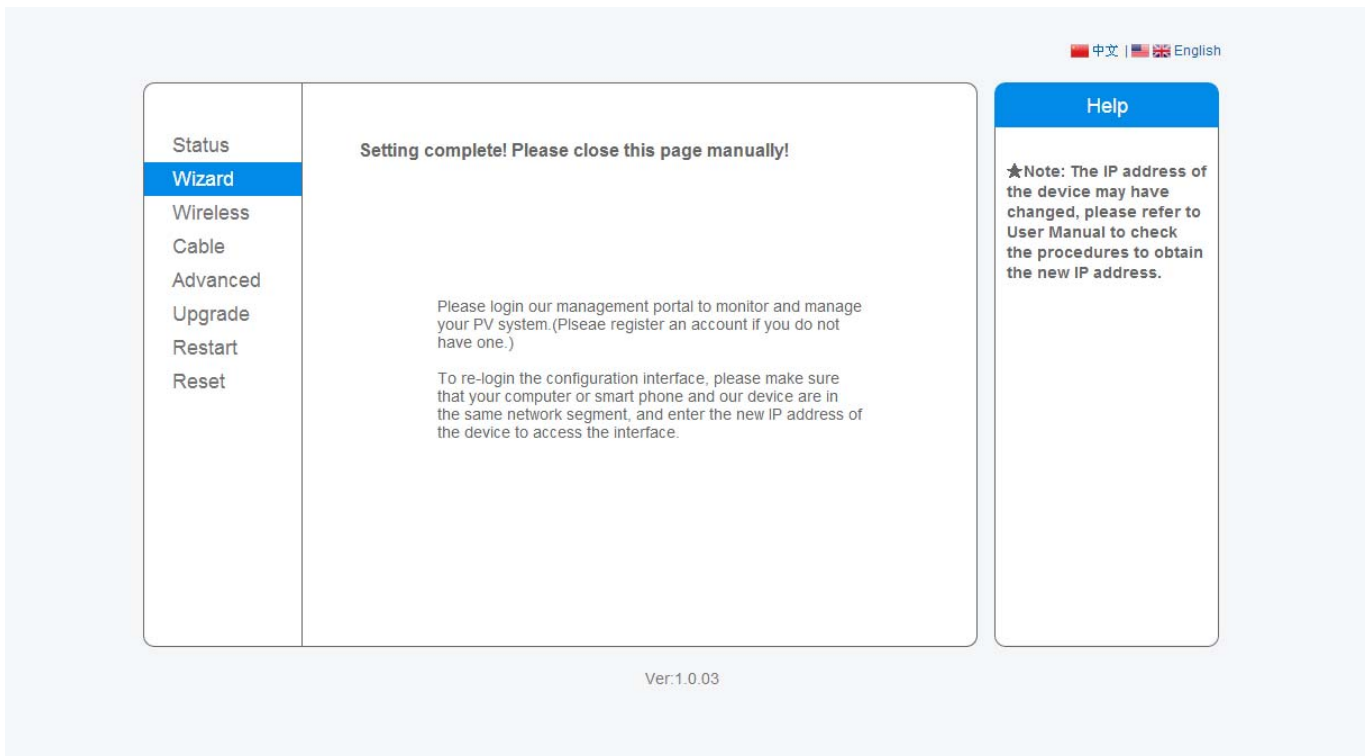

(j) Re- log on this setting page to Status interface after the Web server restart, and check the network connection status

of the data logger.

The screenshot shows the WiFi Kit web interface. At the top right, there are language options: 中文 and English. On the left, a navigation menu includes: Status (highlighted), Wizard, Wireless, Cable, Advanced, Upgrade, Restart, and Reset. The main content area is divided into sections:

- Device information:**
 - Device serial number: 603040574
 - Firmware version: H4.01.40Y2.0.02W1.0.03
 - Wireless AP mode: **Enable**
 - SSID: AP_603040574
 - IP address: 10.10.100.254
 - MAC address: AC:CF:23:10:F3:48
 - Wireless STA mode: **Enable**
 - Router SSID: yingzhendlink
 - Signal Quality: 76%
 - IP address: 192.168.1.130
 - MAC address: AC:CF:23:10:F3:49
 - Cable mode: **Disable**
 - IP address: _____
 - MAC address: _____
- Connected Inverter:** (Collapsed)
- Remote server information:** (Collapsed)

Below this, a second section shows:

- MAC address: AC:CF:23:10:F3:49
- Cable mode: **Disable**
 - IP address: _____
 - MAC address: _____
- Connected Inverter:** (Collapsed)
- Remote server information:**
 - Remote server A: Pingable
 - Remote server B: Unpingable
 - Remote server C: Unpingable

At the bottom center, the version number is displayed: Ver:1.0.03.

Notice: After network setting is complete, the Wireless STA mode should be enabled and relative information of your router will display on the interface automatically. Besides the Remote server A should be pingable as the picture described.

II. Connection via Ethernet



1. Connect the data logger to the router via Ethernet port with network cable. Make sure that your computer and the data logger are connected within the same local area network.
2. Reset the data logger.

Press the reset button with a needle or open paper clip and hold for a while when the 4 LEDs should be the same as before. Reset is successful when 3 LEDs, except POWER, turn off.

3. Set network to the data logger

Enter the configuration interface of your router, and check the IP address of the data logger assigned by the router. Open a web browser and enter the assigned IP address to get access to the configuration interface of the data logger. Fill in username and password, both of which are **admin** as default.

Recommended browsers: Internet Explorer 8+, Google Chrome 15+, Firefox 10+

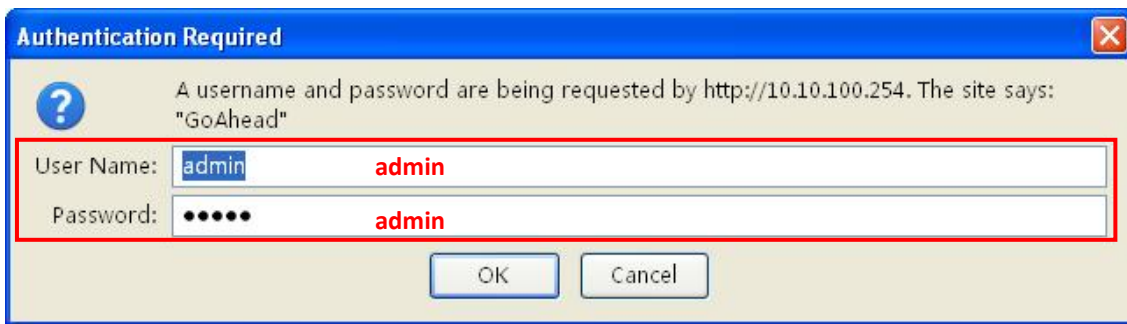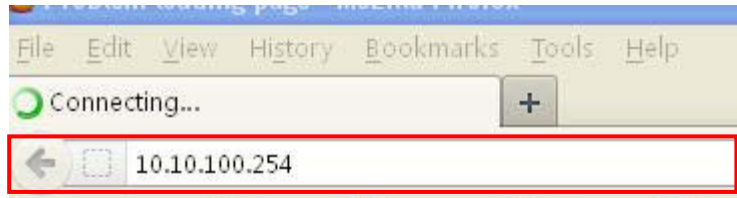

In the Status page, you can view general information of the device.


中文 | English

<ul style="list-style-type: none"> <li style="background-color: #0070C0; color: white; padding: 5px;">Status <li style="padding: 5px;">Wizard <li style="padding: 5px;">Wireless <li style="padding: 5px;">Cable <li style="padding: 5px;">Advanced <li style="padding: 5px;">Upgrade <li style="padding: 5px;">Restart <li style="padding: 5px;">Reset 	<p>Device information</p> <table style="width: 100%; border-collapse: collapse;"> <tr><td style="border-bottom: 1px solid black;">Device serial number</td><td style="text-align: right;">601000000</td></tr> <tr><td style="border-bottom: 1px solid black;">Firmware version</td><td style="text-align: right;">H4.01.36Y1.0.04W1.0.04(KL_V1.1)</td></tr> <tr><td style="border-bottom: 1px solid black;">Wireless AP mode</td><td style="text-align: right;">Enable</td></tr> <tr><td style="border-bottom: 1px solid black;"> SSID</td><td style="text-align: right;">AP_601000000</td></tr> <tr><td style="border-bottom: 1px solid black;"> IP address</td><td style="text-align: right;">10.10.100.254</td></tr> <tr><td style="border-bottom: 1px solid black;"> MAC address</td><td style="text-align: right;">AC:CF:23:10:F3:64</td></tr> <tr><td style="border-bottom: 1px solid black;">Wireless STA mode</td><td style="text-align: right;">Enable</td></tr> <tr><td style="border-bottom: 1px solid black;"> Router SSID</td><td style="text-align: right;">yingzhendlink</td></tr> <tr><td style="border-bottom: 1px solid black;"> Signal Quality</td><td style="text-align: right;">34%</td></tr> <tr><td style="border-bottom: 1px solid black;"> IP address</td><td style="text-align: right;">192.168.1.187</td></tr> <tr><td style="border-bottom: 1px solid black;"> MAC address</td><td style="text-align: right;">AC:CF:23:10:F3:65</td></tr> <tr><td style="border-bottom: 1px solid black;">Cable mode</td><td style="text-align: right;">Enable</td></tr> <tr><td style="border-bottom: 1px solid black;"> IP address</td><td style="text-align: right;">192.168.1.187</td></tr> <tr><td style="border-bottom: 1px solid black;"> MAC address</td><td style="text-align: right;">AC:CF:23:10:F3:67</td></tr> </table> <p>Remote server information</p>	Device serial number	601000000	Firmware version	H4.01.36Y1.0.04W1.0.04(KL_V1.1)	Wireless AP mode	Enable	SSID	AP_601000000	IP address	10.10.100.254	MAC address	AC:CF:23:10:F3:64	Wireless STA mode	Enable	Router SSID	yingzhendlink	Signal Quality	34%	IP address	192.168.1.187	MAC address	AC:CF:23:10:F3:65	Cable mode	Enable	IP address	192.168.1.187	MAC address	AC:CF:23:10:F3:67	<p style="text-align: center; background-color: #0070C0; color: white; padding: 5px;">Help</p> <p>The device can be used as a wireless access point (AP mode) to facilitate users to configure the device, or it can also be used as a wireless information terminal (STA mode) to connect the remote server via wireless router.</p>
Device serial number	601000000																													
Firmware version	H4.01.36Y1.0.04W1.0.04(KL_V1.1)																													
Wireless AP mode	Enable																													
SSID	AP_601000000																													
IP address	10.10.100.254																													
MAC address	AC:CF:23:10:F3:64																													
Wireless STA mode	Enable																													
Router SSID	yingzhendlink																													
Signal Quality	34%																													
IP address	192.168.1.187																													
MAC address	AC:CF:23:10:F3:65																													
Cable mode	Enable																													
IP address	192.168.1.187																													
MAC address	AC:CF:23:10:F3:67																													


Ver:1.0.06

Follow the setup wizard to start quick setting.

① Click **Wizard** to start, then click **Start** to continue.

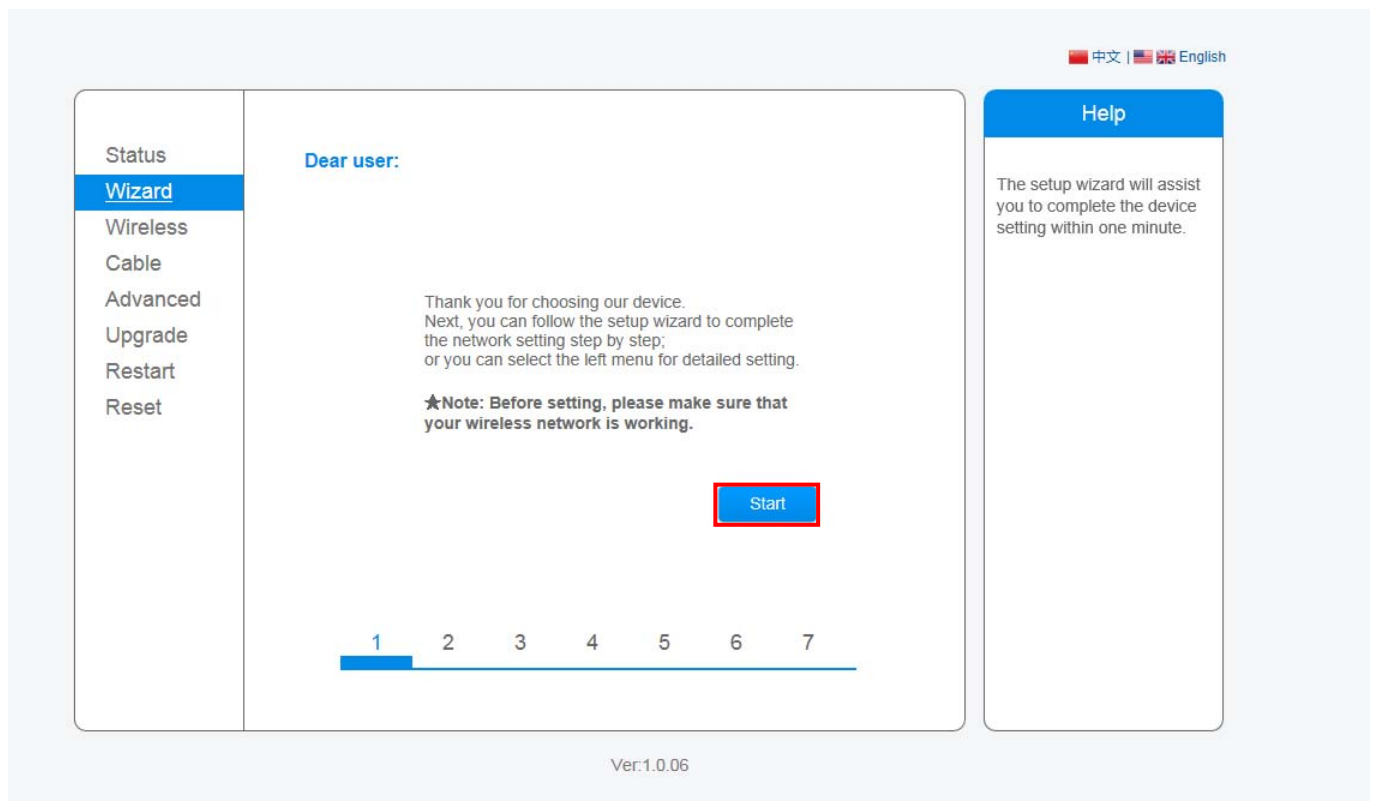

② Select **Cable Connection** and the type of your inverter, and you can choose to enable or disable the wireless function, then click **Next**

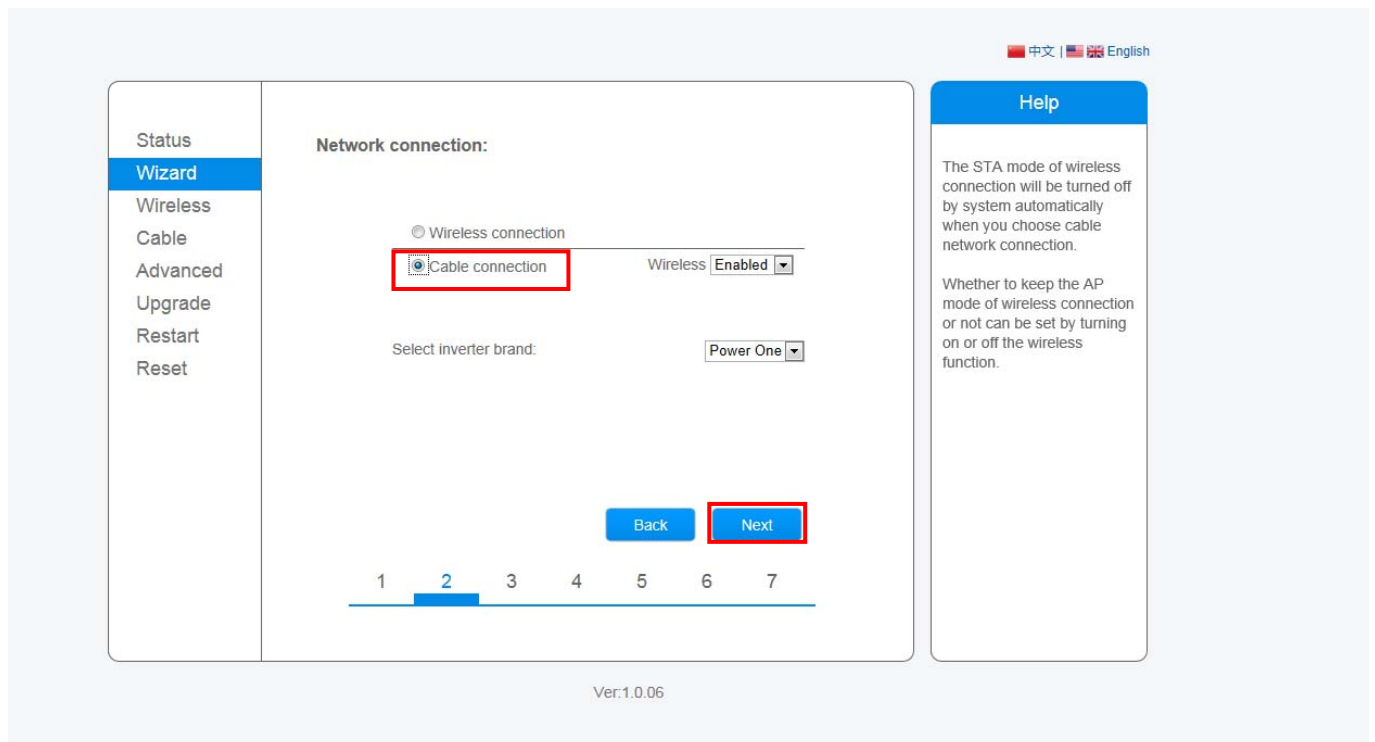

③ Please referring to Step (f) to (h) from page 12 for the following procedures.

E : Register on SolarMAN Portal

Open a web browser and visit the portal website: <http://www.solarmanpv.com/portal>.

Supported browsers: Internet Explorer 8+, Google Chrome 10+, Firefox 9+, Safari 4+

① Click **Register Now**



The screenshot shows the SolarMAN portal homepage. The logo at the top left reads "SolarMAN beta" with the tagline "Monitored Analyzed Networked". Below the logo is a large image of solar panels on a green hill under a blue sky. On the right side, there is a "Sign In" form with the following elements:

- Sign In** header
- Email:
- Password:
- Remember me
- Buttons: **Sign In** and **Register Now** (the "Register Now" button is highlighted with a red box)
- Links: [Public Sites](#) and [Demo Account](#)
- Text: "Forgotten your password?"

② Fill in your email address and password, then click **Next**



The screenshot shows the "Create a New Account" registration form on the SolarMAN portal. The form includes the following fields and options:

- Language selector: [中文](#) | [English](#)
- SolarMAN logo and tagline: "SolarMAN beta Monitored Analyzed Networked"
- Section header: **Create a New Account**
- Image: A small image of solar panels on a green hill.
- Email: * Please input a valid Email address, used for login and password retrieving
- Confirm Email: * Please re-input a valid Email address
- Account Type: ▼
- Password: * 6-16 characters, case sensitive
- Confirm Password: * 6-16 characters, case sensitive
- Checkbox: I accept [SolarMAN Terms of Service](#)
- Buttons: **Next** and **Cancel**

③ Fill in the information as required, then click **Complete**



The screenshot shows the 'Create a New Account' registration form on the SolarMAN website. The form includes the following fields and options:

- Site Name: Text input field with a note '*Maximum 20 Letters'.
- Upload Image: A preview of a solar panel installation on a green hill under a blue sky, with an 'OK' button below it.
- Country: Dropdown menu set to 'China'.
- Province/State: Dropdown menu set to 'Anhui'.
- City: Text input field set to 'WUJI'.
- Street: Text input field with a 'Locate Your Site' button.
- On Map: A small map icon.
- ZIP Code: Text input field.
- Timezone: Dropdown menu set to 'GMT+08:00 Beian'.
- Number Format: Dropdown menu set to '1234567.89'.
- Temperature Unit: Dropdown menu set to '°C'.
- System Size(kwp): Text input field.
- Feed-in Tariff(FIT): Text input field with a 'FIT' button.
- Panel Type: Dropdown menu set to '30'.
- Inverter Type: Dropdown menu set to '3Phase'.
- Description: Text area.
- Make This Site Public

Registration section:

- Datalogger SN: Text input field with a green checkmark icon.
- Installer: Text input field.

Contact section:

- Name: Text input field.
- Phone: Text input field.

At the bottom of the form are two buttons: 'Complete' and 'Cancel'.

④ If registration is successful, the following page will display. Click **OK** to return to the homepage of the portal.



F : Log in SolarMAN Portal to manage power station

After successful registration and account activation, open the login page of SolarMAN Portal, and input the correct E-mail and password to access the monitoring system and start monitoring and management of power plants.




Notices: If users access the monitoring system for the first time within ten minutes after successful registration, please check the "Real Time" interface as shown below. If there are data shown in the Real Time interface, network setting of data logger and other connection are deemed successful.

The screenshot shows the SolarMAN monitoring interface. At the top, there is a navigation bar with 'Home', 'My Site', 'Public Sites', and 'Account'. Below this is a sub-menu with 'Overview', 'Real Time', 'History', 'Alert', 'Report', 'Analysis', and 'Setting'. The 'Real Time' tab is selected. The main content area displays weather alerts for three locations: 7/9 Chance of Storm 77-93F, 7/10 Chance of Storm 79-102F, and 7/11 Chance of Storm 79-100F. Below the alerts is a table with navigation icons. The table has columns for 'No.', 'Inverter S/N', 'DC Input', 'AC Output', 'Total Energy', 'Temperature', and 'Time'. The 'DC Input' and 'AC Output' columns are further divided into sub-columns: 'Channel', 'Voltage(V)', 'Current(A)', 'Phase', 'Voltage(V)', 'Current(A)', 'Power(W)', and 'Frequency(Hz)'. The table contains data for two inverters, each with three PV channels.

No.	Inverter S/N	DC Input			AC Output				Total Energy (kWh)	Temperature(°C)	Time
		Channel	Voltage(V)	Current(A)	Phase	Voltage(V)	Current(A)	Power(W)			
1	DEDN402011800003	PV1	233.1	2.25	R	230.2	4.3	1022	50.07	1841.7	2012-07-09 10:01:14
		PV2	242.9	2.16	S	0.0	0.0	0			
		PV3	0	0	T	0.0	0.0	0			
2	GBDN202011800031	PV1	247.4	0.3	R	231.0	0.3	0	50.05	442	2012-04-16 17:34:48
		PV2	0.0	0.0	S	0.0	0.0	0			
		PV3	0	0	T	0.0	0.0	0			

G : Debug

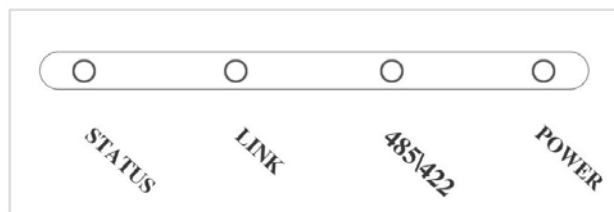

I. LED indication

LEDs	Status	Meaning
POWER	On	Power is normal
	Off	Power is abnormal
485\422	On	Connection between data logger and inverter is normal
	Flashing	Data is transmitting between data logger and inverter
	Off	Connection between data logger and inverter is abnormal
LINK	On	Connection between data logger and server is normal

	Flashing	Data logger is under cable mode or AP mode of wireless mode
	Off	Connection between data logger and server is abnormal
STATUS	On	Data logger works normally
	Off	Data logger works abnormally

II. Trouble shootings

Phenomenon	Meaning	Solutions
Power off	No power supply	Connect power supply and ensure good contacts.
RS485/422 off	Connection with inverter is abnormal	Check the connection cable, and ensure that the cable order comply with descriptions of part III in this text, or the line order described in Inverter quick guide .
		Ensure the stability of RJ-45.
		Ensure that inverter is working under normal condition.
LINK flashing	Wireless setting In AP mode	The data logger has not been connected to Internet.Please configure internet connection to the data logger by following Quick Guide.
LINK off	Connection to remote	Check if router can connect to Internet

	server failed	Check if the antenna is loose or falls off. If so, please screw to tighten.
		Check if the device is covered by the range of the router.
		Please refer to User Manual for further information or have the data logger tested with our diagnosis tool.
Status off	Data logger works abnormally	Reset. If reset failed for several times, please contact customer service.
Weak WiFi		Check the connection of antenna
		Add WiFi repeater
		Connect via Ethernet
<p><i>Note 1 : Please check the status of these 4 LEDs 5 minutes later after the data logger is powered on.</i></p> <p><i>Note 2 : When screw or adjust the antenna, please note that only the metal part can be touched, and do not screw the plastic part, otherwise the antenna may be damaged.</i></p> <p><i>Note 3 : If the equipment still fails to work upon above solutions, please contact your device customer service.</i></p>		

III. Reset

Press the reset button with a needle or open paper clip and hold for a while when the 4 LEDs should be on. Reset is successful when 3 LEDs, except POWER, turn off.

H : Contact

If any technical problems, please contact us, with the following information in hand:

- ◆ Device model
- ◆ Serial number of data logger
- ◆ Number of inverters connected
- ◆ Problem description
- ◆ Screen shot of Status page

IGEN Tech. Co., Ltd.

Add: Rm.405, BuildingA, Tian' an iPark, No.228, Ling Hu Ave., Wuxi, Jiangsu Province, P.R.China 214028

Tel: +86-510-6800 5664

Fax: +86-510-8181 6208

E-mail: customerservice@solarmanpv.com

www.solarmanpv.com

Text version : QG-WE02-V1.1-1213-EN