ATTENTION!

a) N'alimentent pas la sortie de la prise GFCI à un Panel de sélection / Charger Centre où la position neutre est lié à la terre. *Ce qui déclenche le disjoncteur.*
b) Si une rallonge est utilisée, veuillez vous assurer que le cordon est de type mise à la terre bipolaire (3 broches).

4.13 AC SIDE INSTALLATION FOR MODEL NTX-3000-12/24 and NTX-3000S-12/24

4.13.1 Ground Fault Circuit Interrupter (GFCI) in Model NTX-3000-12/24 and NTX-3000S-12/24

An un-intentional electric path between a source of current and a grounded surface is referred to as a "Ground Fault" (Refer to Section 4.8 for additional details on grounding and ground fault). Ground Faults occur when current is leaking somewhere. In effect, electricity is escaping to the ground. How it leaks is very important. If your body provides a path to the ground for this leakage (dry human body has a low resistance of only around 1 K Ohm), you could be injured, burned, severely shocked or electrocuted. A Ground Fault Circuit Interrupter (GFCI) protects people from electric shock by detecting leakage and cutting off the AC source

In NTX-3000-12/24 and NTX-3000S-12/24 models, a customized, built-in GFCI circuitry has been used. The Grounding Slot receptacle is NOT connected to the chassis of the inverter but to the input section of a customized GFCI circuitry. If a "Ground Fault" occurs in the load side (*Please see Section 4.8 regarding information on "Ground Fault"*), fault current from the load will travel along the Grounding Conductor from the load to the Grounding Slot of the Receptacle. A fault current of 4 to 5 mA will activate the built-in GFCI circuit and the AC output of the inverter will be shut down and Red Fault LED (6 in Fig 3.2.1) will be lighted. The unit will be required to be reset manually as follows:

- Remove the cause of Ground Fault in the load side
- Switch off the unit using the On/Off Switch (2 in Fig 3.2.1 & 3.2.2)
- Wait for 2 minutes and switch the unit on again

AC Side Grounding

The Grounding Slot [1(c) & 1(f) in Fig 3.2.1] is internally NOT bonded to the metal chassis of the inverter. It is internally wired to built-in GFCI circuitry to trip the inverter in case of any ground fault on the AC load side. See Section 4.13.5 for more details.

Floating Neutral

The Neutral Slot [1(b) & 1(f) in Fig 3.2.1] is floating i.e. it is internally NOT bonded to the metal chassis of the inverter / Grounding Slot [1(c) & 1(f) in Fig 3.2.1 & 3.2.2]. Hence, there will be around 66 VAC between the Neutral Slot and the metal chassis of the inverter / the Grounding Slot [1(c) in Fig 3.2.1 & 3.2.2]. See CAUTION! below:

CAUTION!

As the Neutral slot of the Receptacle in NTX-3000-12/24 [1(b) & 1(f)in Fig 3.2.1 & 3.2.2] is floating i.e. it is internally NOT bonded to the metal chassis of the inverter / the Grounding Slot, there will be a voltage of around 66 VAC between the Neutral Slot and the L-shaped Grounding Slot. Do not touch the Neutral Slot or bare conductor connected to the Neutral Slot!

ATTENTION!

Comme l'emplacement neutre de la prise du NTX-3000-12/24 [1(b) de la figure 3.2.1 et 3.2.2] est flottant, c'est-à-dire qu'il n'est PAS lié en interne au châssis métallique de l'onduleur/à l'emplacement de mise à la terre, il y aura un tension d'environ 66 VAC entre l'emplacement neutre et l'emplacement de mise à la terre en forme de L. Ne touchez pas la fente neutre ou le conducteur nu connecté à la fente neutre!

4.13.2 Floating Neutral and Monitoring Voltage on NEMA L5-30R and NEMA L5-15P Connections

AC output of NTX-3000-12/24 and NTX-3000S-12/24 is supplied through Receptacles as shown in Figures (3.1.1, 3.2.1 and 3.2.2). Internal conductors connected to the 3 slots of the outlet are as follows:

a) **The longer "Line" Slot [1(a)]:** This in internally connected to the first current carrying conductor
b) **The shorter "Neutral" Slot [1(b)]:** This in internally connected to the second current carrying conductor. Internally, this slot is **NOT** connected to the metal chassis of the inverter and hence, technically, it cannot be considered as "Neutral" (A "Neutral" is a current carrying conductor that is intentionally bonded to Earth Ground). *The Neutral Slot is, therefore, floating.*

CAUTION!

As the Neutral Slot [1(b)] & 1(f) in Fig 3.2.1 & 3.2.2 is floating i.e. it is internally **NOT** bonded to the metal chassis of the inverter / the Grounding Slot, *there will be a voltage of around 66 VAC between the Neutral Slot and the L-shaped Grounding Slot*. Do not touch the Neutral Slot or bare conductor connected to the Neutral Slot!

ATTENTION!

Comme l'emplacement neutre [1(b) et 1(f) sur la Fig. 3.2.1 et 3.2.2] est flottant, c'est-à-dire qu'il **n'est PAS** lié de manière interne au châssis métallique de l'onduleur / de l'emplacement pour la mise à la terre, *il existera une tension d'environ 66 VAC entre l'emplacement neutre et Fente de mise à la terre en forme de L*. Ne touchez pas le connecteur neutre ou le conducteur nu connecté au connecteur neutre!

c) **L shaped "Grounding" Slot [1(c)]:** This is internally **NOT** connected to the metal chassis of the inverter. It is wired to a customized Ground Fault Circuit Interruption (GFCI) circuitry (Refer to Section 4.13.1 for details).

CAUTION!

As the L-shaped Grounding Slot is wired to a customized Ground Fault Circuit Interruption (GFCI) circuitry (See Section 4.13.1), the AC output of the inverter will be shut down due to Ground Fault on the load side. Hence, if a power cord with standard NEMA Plug is used to feed AC output of this inverter to an Electrical Breaker Panel / Load Center where the Neutral is bonded to Earth Ground, the inverter will trip immediately due to activation of the internal customized Ground Fault Circuit Interruption (GFCI) circuitry. *To circumvent this protection and power an electrical panel with the NTX-3000-12/24, a NEMA L5-30P Plug has been provided. Use this plug on the inverter side of the 30A cord as per wiring connections described in Section 4.13.2 (c).*

ATTENTION!
Comme la mise à la terre en forme de L'emplacement est relié à un circuit de défaut à la terre (GFCI) Interruption des circuits (voir Section 4.13.5), la sortie AC de l'onduleur sera éteint en raison d'un défaut de masse sur le côté charge. Par conséquent, si un cordon d'alimentation de 30 A à la norme NEMA L5-30P est utilisé pour l'alimentation AC de sortie de ce convertisseur d'un disjoncteur électrique / Centre de charge où le neutre est relié à la masse de la Terre, de l'inverseur se déclenche immédiatement dû à l'activation de la mesure interne à la terre (GFCI) Interruption des circuits. *Pour contourner cette situation, NEMA L5-30P a été fournie. Utilisez ce connecteur sur le côté de l'onduleur du cordon 30A selon les connexions de câblage décrit à la section 4.13.2 (c).*

4.13.3 Connecting AC Loads to NTX-3000S-12/24 through 3 xNEMA 5-15R Receptacles

AC output for the NTX-3000S-12 and NTX-3000S-24 is provided through three receptacles. Each 15 amp receptacle is protected by it's own push button circuit breaker. All three receptacles are protected by a single GFCI protection circuit (as described in Section 4.13.1).

4.13.4 Connecting AC loads to NTX-3000-12/24 through NEMA L5-30R, 30A Locking Receptacle

A suitable power cord will be required to feed AC loads as follows:

a) **Loads that use 30A power cord with NEMA L5-30P Locking Plug**: Plug directly into the Receptacle
b) **Loads that use 15A power cord with NEMA5-15P Plug or 20A Power Cord with NEMA5-20P Plug:** Use appropriate Adapter Type of Power Cord that has NEMA L5-30P Locking Plug for mating with the NEMA L5-30R Locking Receptacle on the NTX-3000-12/24 end and NEMA5-20R Adapter Receptacles on the other end for connecting to the loads. Example is shown at Fig 4.3:

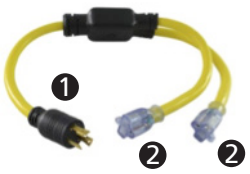

❶ **NEMA L5-30P Plug:** Insert this into the NEMA L5-30R Receptacle on NTX-3000-12/24.

❷ **NEMA5-20R Plug:** For loads provided with 15A power cord with NEMA5-15P Plug or 20A cord with NEMA5-20P Plug.

Fig 4.3 Adapter to convert NEMA L5-30R outlet to NEMA5-15 / NEMA5-20 outlets

c) **Hard wiring to 30A Breaker Panel or Load Center that has Neutral to Ground Bond:** As the L-shaped Grounding Slot of the NEMA L5-30R outlet ([1(c) & 1(f)in Fig 3.2.1 & 3.2.2] is wired to a customized Ground Fault Circuit Interruption (GFCI) circuitry (See Section 4.13.1), the AC output of the inverter will be shut down due to Ground Fault on the load side (Please refer to Section 4.8 for more information on Ground Fault). *Hence, if a 30A pre-wired power cord with molded NEMA L5-30P Plug is used to feed AC output of this inverter to a Breaker Panel / Load Center where the Neutral is bonded to Earth Ground, the inverter will trip immediately due to activation of the internal customized Ground Fault Circuit Interruption (GFCI) circuitry. To circumvent this situation, a NEMA L5-30P Plug has been provided to connect the 3 wires of the inverter end of the 30A Cord as shown in Fig 4.4 and described on next page:*

i. Connect the "Line" conductor (Black wire) to the Line Prong of the NEMA L5-30P Plug (Terminal for Line Prong has brass screw)
ii. Join the "Neutral" conductor (White wire) and the "Grounding" Conductor (Green wire) together and connect both the wires to the same Neutral Prong (W) of the NEMA L5-30P

Plug (Terminal for Neutral Prong has steel screw)

iii. The "Grounding"Prong of the NEMA L5-30P Plug is **NOT** connected [Terminal for Grounding Prong (G) has Green colored screw]

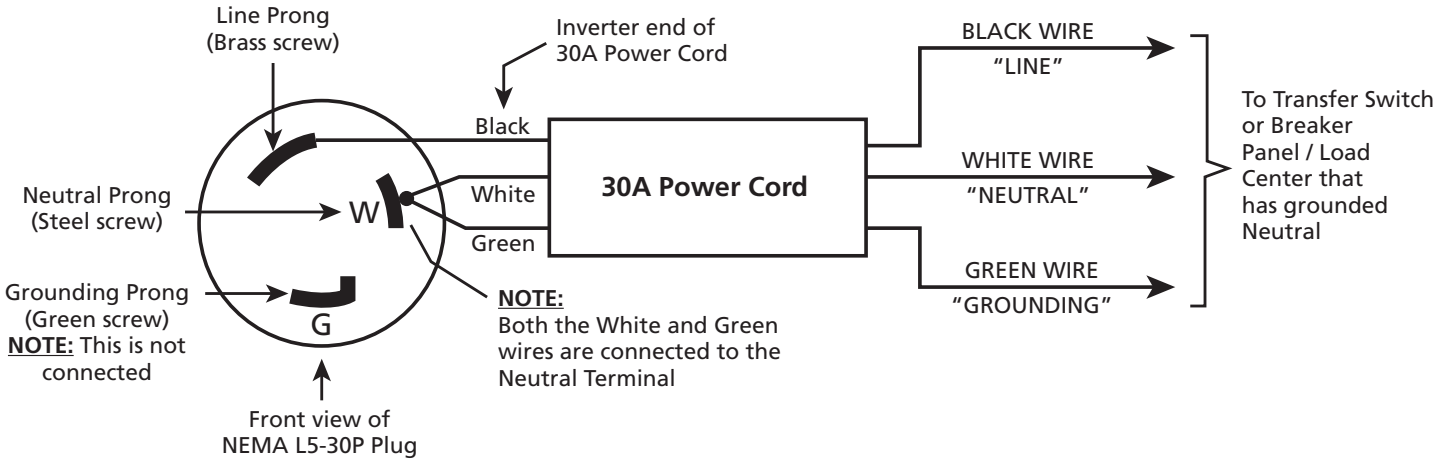

Fig 4.4 NEMA L5-30P Plug connection for 30A Power Cord that will feed AC output of NTX-3000-12/24 to Transfer Switch or Breaker Panel / Load Centre that have Neutral to Ground Bond

Wiring arrangement shown in Fig 4.4, the NTX-3000-12/24 will result in the following:

- The Grounding Conductor (Green wire) from the Transfer Switch or Electrical Panel / Load Center will NOT be connected to the Grounding Terminal (G) of the inverter side NEMA L5-30P Plug. Hence, the built-in customized GFCI will not trip despite the fact that the Neutral and Ground in the Transfer Switch or Breaker Panel / Load Center are bonded (See details of operation of this GFCI at Section 4.9).
- The internal GFCI of NTX-3000-12/24 will be disabled.

4.14 REMOTE CONTROL

Remote Control Model NTX-RC has been provided with the unit. Please refer to separate manual provided for this remote control.

CAUTION!

When using Remote Control NTX-RC, the ON/OFF Switch on the inverter (2, Fig 3.1.1, 3.2.1 and 3.2.2) should be in OFF position. If this switch is left in ON condition and the Remote Control is switched OFF using the ON/OFF Button on the Remote control, the inverter will not switch OFF completely. This will result in draining of the battery due to (i) self consumption of the inverter and (ii) continuous running of the cooling fan at slow speed.

ATTENTION!

Lors de l'utilisation de Télécommande NTX-RC, l'interrupteur ON/OFF sur l'inverseur (2, Fig 3.1.1, 3.2.1 et 3.2.2) doit être en position ARRÊT. Si ce commutateur est laissé en l'état et sur la télécommande s'éteint à l'aide du bouton ON/OFF de la télécommande, le convertisseur s'éteint pas complètement. Cela se traduira dans le drainage de la batterie en raison de (i) la consommation de l'inverseur et (ii) un fonctionnement continu du ventilateur de refroidissement à vitesse lente.

SECTION 5 | Operation

5.1 OPERATING ENVIRONMENT

Before operating the inverter, please ensure that all installation requirements given in Section 4 and safety requirements given in Section 1 have been met.

5.2 SWITCHING ON AND SWITCHING OFF ON LOAD

Please ensure that the following procedure is used for switching ON and switching OFF the inverter when a load is already connected to the inverter:

5.2.1 Switching ON

1. Switch OFF the load connected to the inverter
2. Switch ON the inverter
3. Wait for a few seconds
4. Switch ON the load

5.2.2 Switching OFF

1. Switch OFF the load connected to the inverter
2. Switch OFF the inverter

5.3 CONNECTING LOADS

1. Make sure that the single load or the combined load requirement of your equipment does not exceed the inverter's output rating.
2. Switch OFF the inverter
3. Switch OFF the load
4. Plug the cord(s) from the load(s) into the AC receptacle(s) of the inverter
5. Switch on the inverter. Wait for a few seconds
6. The Green LED indicator (5 in Figs 3.1.1, 3.2.1 and 3.2.2) will be lighted to indicate that the inverter is functioning. Green LED on the GFCI Receptacle on NTX-1000/1500/2000 [1(b) in Fig 3.1.1] will also be lighted if the GFCI is not in tripped condition.
7. Switch on the load(s)

5.4 RATED VERSUS ACTUAL CURRENT DRAW OF EQUIPMENT

Most electrical tools, appliances and audio/video equipment have labels that indicate the power consumption in Amps or Watts. Be sure that the power consumption of the item(s) you wish to operate is less than inverter's power. (If the power consumption is rated in Amps AC, simply multiply by the AC Volts (115) to determine the Apparent Input Power in Volt Amps (VA). The inverter will shut down if it is overloaded. The overload must be removed before the inverter will restart. Resistive loads are the easiest for the inverter to run. However, larger resistive loads, such as electric stoves or heaters, usually require more power than a smaller inverter can deliver. Inductive loads, such as TV's and stereos, etc. require more current to operate than do resistive loads of the same power rating. Induction motors, as well as some televisions, may require 2 to 6 times their power rating to start up. The most demanding in this category are those that start under load, such as compressors and pumps. To restart the unit after a shutdown due to overloading, remove the overload if necessary, turn the power switch OFF, **wait for 2 to 3 minutes** and then switch ON again (Refer to Sections 6.4 and 7 for more details regarding overload symptoms and protections).

5.5 SIZING CHART FOR TYPICAL LOADS THAT REQUIRE HIGH STARTING SURGE

The manufacturers' specifications of the appliances and devices indicate only the running power required.

The surge power required by some specific types of devices has to be checked with the manufacturer, actually tested or guessed at best.

Table 5.1 lists some common loads that require high surge power on start up. A "Sizing Factor" has been recommended against each which is a Multiplication Factor to be applied to the rated running Watt rating of the load to arrive at the continuous power rating of the inverter (Multiply the running Watts of the device / appliance by the Sizing Factor).

Table 5.1 Sizing of Inverter for Loads with Starting Surge

Type of Device or Appliance	Sizing Factor
Air conditioner	5
Refrigerator / Freezer (Compressor based)	5
Air Compressor	4
Sump Pump / Well Pump / Submersible Pump	3
Dishwasher	3
Clothes Washer	3
Microwave (In cases where the rated output power is the Cooking Power)	2
Furnace Fan	3
Industrial Motor	3
Portable Kerosene / Diesel Fuel Heater	3
Circular Saw	3
Bench Grinder	3
Incandescent / Halogen / Quartz Lamps	3
Laser Printer / Other Devices using Infrared Quartz Halogen Heaters	4
Switched Mode Power Supplies (No Power Factor correction)	2
Photographic Strobe / Flash Lights (with respect to its Watt Sec rating)	4*

*** In the case of photographic strobe / flash unit, the RMS surge power of the inverter should be more than 4 times the Watt Sec rating of the photographic strobe / flash unit.**

5.6 DETERMINING BATTERY SIZE

The power inverter will require DEEP CYCLE Lead Acid Batteries of appropriate capacity.
The automotive SLI (Starting/lighting/Ignition) battery is not designed for repeated deep discharges.
The SLI battery may not supply enough energy and its service life may be reduced.

To determine the minimum battery size that you will need to operate appliances, follow these steps:

1. Determine the Active AC Input Power in Watts for each appliance and / or tool you will need to simultaneously operate from the inverter. To do this, read the label on the equipment to be operated. Usually, the label will specify the Active Power drawn in Watts. Sometimes the label will specify the current draw in Amperes (A). Multiply this value of current draw in Amperes (A) by the AC input voltage (V) to determine the Apparent AC Input Power in Volt Amperes (VA). The Active Input Power will be equal to the Apparent Input Power (VA) multiplied by the Power Factor (PF) of the load. Depending upon the type of load, the Power Factor (PF) may range from 1 (Resistive type of load) to 0.6 (Reactive type of load). For practical purposes, the Power Factor (PF) may be

considered as 1. Hence, Active Power in Watts will be equal to the Apparent Power (VA).

2. For each appliance, estimate the number of hours the appliance will be in use between battery recharges.
3. For each appliance, determine the Watt-Hours of energy required by multiplying the AC wattage by the number of hours of use.
4. Add the Watt-Hours of energy for each appliance to get the total Watt-Hours of energy for all appliances to be used.
5. Divide the total Watt-Hours of energy on the AC side by 10 to get the total Ampere-Hour of energy on the 12 VDC side to support the operation of the appliances.
6. The Ampere-Hour (Ah) capacity of the battery should be 2 times the total Ampere-Hour energy required on the 12 VDC side to support the operation of the devices (as calculated at step 5 above). Two times factor is necessary because batteries are normally not discharged below 50% capacity.

To get an estimate of the current (in Amps) that the battery is delivering to power a particular AC side load, divide the load's AC consumption power (in Watts) by (10).

Keep in mind that most appliances are not operating for long periods of time. For example, a typical home-use coffee maker draws 500 Watts during its brew time of 5 minutes, but it maintains the temperature of the pot at about 100 Watts. Typical use of a microwave is only for a few minutes, sometimes at low power. Similarly, refrigerator compressor does not remain ON at full rated power at all times but switches ON and OFF based on its thermostat setting, ambient temperature, frequency of opening/closing and the temperature of food item(s) when first stored. As a Rule of Thumb, its operating Duty Cycle [ON Time ÷ (ON Time + OFF Time)] is around 30%. Hence, a refrigerator rated at say 100W will draw Watt-Hour Energy of 720 Watt Hour in a 24 Hour cycle [(100W x 24Hrs) x 30% = 720W]. Some exceptions to brief operating times are TVs, computers etc.

In most instances, the inverter can be left connected to the battery when not in use. However, make sure that the inverter is switched OFF using the ON/OFF Switch (2 in Fig 3.1.1, 3.2.1 and 3.2.2) or using the ON/OFF Button on the Remote Control Model NTX-RC (Section 4.14). This will prevent unnecessary drain on the batteries due to self consumption and operation of cooling fan(s).

Battery performance drops in low temperature environment. Higher capacity batteries should be installed if the environmental temperature is below 20°C.

5.7 MONITORING OF ALARMS & FAULTS

Please refer to Section 6.8 for monitoring of alarms and faults through front panel LEDs and buzzer.

5.8 PROTECTIONS

Please refer to Section 6 for details on various protections.

5.9 TROUBLESHOOTING

Please refer to Section 7 for Troubleshooting Guide.

SECTION 5 | Operation

6.1 OVER TEMPERATURE PROTECTION

In case the fan fails or if the cooling is inadequate due to higher ambient temperature or restricted air flow, the temperature inside the inverter will rise. Temperature rise is sensed at a critical internal hot spot. If this temperature is around 105°C, the AC output will be switched OFF temporarily. The unit will reset automatically after the internal hot spot has cooled down. The unit may be reset manually by switching off the ON/OFF Switch (2 in Figs 3.1.1, 3.2.1 and 3.2.2), waiting for 15 minutes for the unit to cool down and then, switching ON again.

Refer to Table 6.1 for front panel indications for this condition.

Refer to Section 7 - Troubleshooting Guide for more details of symptoms, causes and remedies related to this protection.

6.2 LOW BATTERY VOLTAGE PROTECTION

This condition is not harmful to the inverter but could reduce life of the batteries. The inverter automatically shuts down when input voltage drops below 10.5V (12V units) / 21V (24V units). The unit will automatically turn ON when the voltage rises above 11.5V (12V untis) / 23V (24V units).

Refer to Table 6.1 for front panel indication for this condition.

Refer to Section 7 - Troubleshooting Guide for more details of symptoms, causes and remedies related to this protection.

6.3 OVER VOLTAGE PROTECTION

The inverter will automatically shut down when the input voltage exceeds 16.3V (12V units) / 32V (24V units). The unit will reset automatically when the voltage drops to 16V (12V units) / 32V (24V units).

Refer to Table 6.1 for front panel indications for this condition.

Refer to Section 7 - Troubleshooting Guide for more details of symptoms, causes and remedies related to this protection.

6.4 OVERLOAD PROTECTION

The inverter will automatically shut down under overload of 115% to 125% lasting for 3 to 5 sec. Refer to Table 6.1 for front panel indications under this condition.

The inverter will remain latched in shut down condition and will require manual reset as described below:

a) **From the Front Panel of the unit:**
   i. Switch off the On/Off Switch (2 in Figs 3.1.1, 3.2.1 and 3.2.2).
   ii. Wait for around 2 minutes (Internal latching circuit does not de-energize immediately after switching off)
   iii. Switch on using the On/Off Switch

b) **From Remote Control Model No. NTX-RC**
   i. Ensure that the On/Off Switch (2 in Figs 3.1.1, 3.2.1 and 3.2.2) on the front panel of the unit is in off position. (**NOTE:** When Remote Control NTX-RC is being used to operate the inverter, the On/Off Switch on the front panel of the inverter is required to be in off condition. If the front panel On/Off Switch is in on condition, the inverter cannot be switched off (Please refer to the manual for the Remote Control NTX-RC)
   ii. Press the On/Off Key to switch off the inverter
   iii. Wait for around 3 minutes
   iv. Press the On/Off Key to switch on the inverter

Refer to Section 7 – Troubleshooting Guide for more details of symptoms, causes and remedies related to this protection.

6.5 SHORT CIRCUIT PROTECTION

During a short circuit, abnormally high current is drawn by the inverter. The inverter will automatically shut down under short circuit condition within a very short period of around 0.1 sec. Refer to Table 6.1 for front panel indications under this condition.

The inverter will remain latched in shut down condition and will require manual reset as described below:

a) **From the Front Panel of the unit:**
   i. Switch off the On/Off Switch (2 in Figs 3.1.1, 3.2.1 and 3.2.2).
   ii. Wait for around 3 minutes (Internal latching circuit does not de-energize immediately after switching off)
   iii. Switch on using the On/Off Switch

b) **From Remote Control Model No. NTX-RC**
   i. Ensure that the On/Off Switch (2 in Figs 3.1.1, 3.2.1 and 3.2.2) on the front panel of the unit is in off position. (**NOTE:** When Remote Control NTX-RC is being used to operate the inverter, the On/Off Switch on the front panel of the inverter is required to be in off condition. If the front panel On/Off Switch is in on condition, the inverter cannot be switched off (Please refer to the manual for the Remote Control NTX-RC)
   ii. Press the On/Off Key to switch off the inverter
   iii. Wait for around 3 minutes
   iv. Press the On/Off Key to switch on the inverter

6.6 GROUND FAULT PROTECTION

6.6.1 Ground Fault Circuit Interrupter (GFCI) Protection in Models NTX-1000-12/24 / NT X-1500-12/24 / NTX-2000-12/24

Please see Sections 4.12.1 to 4.12.4 for complete details of function, features and operation of GFCI protection in Models NTX-1000-12/24 / NTX-1500-12/24 / NTX-2000-12/24.

If there is a leakage of 4 to 6mA due to ground fault on the load side or, there is a Neutral to Ground bond on the load side, the GFCI will trip and the “Reset Button” [1(c) in Fig 3.1.1] will pop out. AC power to the two NEMA5-20R outlets (on the Load Side of the GFCI) will be cut off. Green LED [1(b) in Fig 3.1.1] will switch OFF. Remove the ground fault in the load circuit. Reset the tripped GFCI as follows:

a) Remove the cause of ground fault on the load side
b) Ensure that the inverter is in ON condition so that 115VAC power is available to the internal Line Side of the GFCI [Green LED (5 in Fig 3.1.1) will be ON].
c) Press the “Reset Button” [1(c) in Fig 3.1.1]. The GFCI will reset and AC power to the NEMA5-20R outlets (on the Load Side of the GFCI) will be restored. Green LED [1(b) in Fig 3.1.1] will switch ON.

INFO

For the Reset Button [1(c) in Fig 3.1.1] to operate, the Inverter has to be in ON condition so that 115VAC power is available to the internal Line Side of the GFCI. Tripped GFCI [When the inverter is ON and is feeding 115 VAC to the internal Line Side of the GFCI, Green LED (5 in Fig 3.1.1) will be ON] can be reset only if AC power is available on the Load Side of the GFCI

6.6.2 Ground Fault Circuit Interrupter (GFCI) Protection in Model Models NTX-3000-12/24 and NTX-3000S-12/24. Please see Section 4.13.1 for complete details on function, features and operation of GFCI protection in NTX-3000-12/24 and NTX-3000S-12/24 models.

NTX-3000-12/24 and NTX-3000S-12/24, a customized, built-in GFCI circuitry has been used. The Grounding Slot of the receptacle is NOT connected to the chassis of the inverter but to the input section of a customized GFCI circuitry. If a "Ground Fault" occurs in the load side, fault current from the load will travel along the Grounding Conductor from the load to the Grounding Slot of the Receptacle. A fault current of 4 to 5 mA will activate the built-in GFCI circuit and the AC output of the inverter will be shut down and Red Fault LED (6 in Fig 3.2.1 and 3.2.2) will be lighted. The unit will be required to be reset manually as follows:

- Remove the cause of Ground Fault in the load side
- Switch off the unit using the On/Off Switch (2 in Fig 3.2.1 and 3.2.2)
- Wait for 2 minutes and switch the unit on again

6.7 LOW INPUT VOLTAGE ALARM

An alarm will sound when the voltage at the input terminals of the inverter drops below the low voltage alarm point. This is an indication that either the battery terminal voltage has dropped due to its discharged condition and needs to be re-charged OR there is an excessive voltage drop across the wires connecting the inverter to the battery (due to use of thinner and longer length of wires that will produce higher voltage drop at higher loads OR due to loose connections). The user should stop operation of the load at this time since the inverter will shut down automatically shortly thereafter, when the input voltage at the inverter further drops to the low voltage shudown point. In case the alarm is due to the discharged condition of the battery, start your engine to recharge the battery / use an appropriate battery charger.

The alarm resets automatically when the DC input voltage rises to 1V above the alarm point.

Refer to Section 7 - Troubleshooting Guide for more details of symptoms, causes and remedies related to this protection.

SECTION 6 | Protections

NOTE: It is normal for the alarm to sound while the unit is being connected to or disconnected from the power source. This is not indicative of a problem.

6.8 MONITORING OF ALARMS AND FAULTS THROUGH FRONT PANEL LEDS AND BUZZER

Table 6.1 below shows operation of Green, Yellow and Red monitoring LEDs in the front panel (4,5 and 6 in Figs 3.1.1, 3.2.1 and 3.2.2), Green and Red LEDs on the GFCI for NTX-100/1500/2000 [1(b) and 1(e) in Fig 3.1.1] and internal Buzzer under various alarm / fault conditions. Refer to Troubleshooting Guide under Section 7 for additional details.

Table 6.1 Alarm & fault monitoring through Front Panel LEDs, GFCI LEDs and internal buzzer

Description of Fault / Alarm	Buzzer	LED			GFCI Green LED [1(b), Fig 3.1.1]	GFCI Red LED [1(e), Fig 3.1.1]	AC Output
		Green	Yellow	Red			
Low voltage shutdown	On	On	On	Off	Off	Off	No
Low voltage alarm	On	On	Off	Off	On	Off	Yes
High voltage shutdown	Off	On	On	Off	Off	Off	No
Over temperature shutdown	Off	On	On	Off	Off	Off	No
Overload shutdown	Off	On	Off	On	Off	Off	No
Short circuit shutdown	Off	On	Off	On	Off	Off	No
Ground fault on load side (Only for NTX-1000/1500/2000)	Off	On	Off	Off	Off	Off	No
Ground fault on load side (Only for NTX-3000)	Off	On	Off	On	-	-	No
GFCI end of life (Only for NTX-1000/1500/2000)	Off	On	Off	Off	Off	On	No

SECTION 7 | Troubleshooting Guide

TROUBLE / SYMPTOMS	POSSIBLE CAUSE(S)	SUGGESTED REMEDIES
NO AC OUTPUT ***On the Inverter Front Panel*** • Green LED is ON • Yellow LED is ON • Red LED is OFF • There is no buzzer alarm ***On Remote Control NTX-RC*** • DC input voltage is being displayed • Power Bar Graph is OFF • Message "Input Fault" is flashing	**Over Temperature Shutdown** In case the fan fails or if the cooling is inadequate due to higher ambient temperature or restricted airflow, the temperature inside the inverter will start rising. Temperature rise is sensed at a critical hot spot. If this temperature is around 105°C, the AC output will be switched OFF.	1. The inverter will remain latched in this shut down condition and will be required to be reset manually by switching OFF, waiting for 15 minutes and switching ON again. 2. Before using the inverter again, please ensure that the cause of over temperature has been removed
NO AC OUTPUT ***On the Inverter Front Panel*** • Green, Yellow & Red LED are OFF • There is no buzzer alarm ***On Remote Control NTX-RC*** Remote Control display is OFF and cannot be switched ON	**No activity due to loss of DC input power to the inverter** 1. If there is no voltage at the DC input terminals: • Battery is dead • External DC input fuse is blown • Loose connection along the circuit from the battery to the DC input terminals 2. If there is voltage at the DC input terminals: • Internal DC input fuses have blown	1. Check DC side wire connections and fuses OR contact Technical Support
NO AC OUTPUT ***On the Inverter Front Panel*** • Green LED is ON • Yellow LED is OFF • Red LED is ON • There is no buzzer alarm ***On Remote Control NTX-RC*** • DC input voltage is being displayed • Power Bar Graph is OFF • Message "Output Fault" is flashing	**Shut down due to overload or short circuit or ground fault / leakage** 1. Inverter has shut down because the power drawn by the load is more than the continuous / surge ratings or there is a short circuit on the load side. 2. In Model NTX-3000-12, this shut down could also be due to ground fault / leakage on the load side (This model has built in Ground Fault Protection Circuit. Refer to Section 6.6.2 for details).	1. Reduce the load or disconnect the load that is causing overloading 2. Check for short circuit and remove the short. Also, check for ground fault on the load side 3. When the inverter shuts down due to overload / short circuit, it will be latched in shutdown condition and will require a manual reset as follows: a) From the front panel of the unit: • Switch the On/Off Rocker Switch to off position • Wait for 2 to 3 minutes for the internal latching circuit to de-energize completely • Switch the On/Off Rocker Switch to on position b) From the Remote Control NTX-RC • Switch off the inverter by pressing the On/Off Key on the remote (**NOTE**: The inverter cannot be switched off through the Remote Control NTX-RC if the On/Off Rocker Switch on the front panel of the inverter is in on condition. When NTX-RC is being used, the On/Off Switch on the front panel of the inverter should be in off condition) • Wait for 2 to 3 minutes for the internal latching circuit to de-energize completely • Press the On/Off Key on the remote to switch on the inverter
NO AC OUTPUT ***(For NTX-1000 / 1500 / 2000)*** ***On the NEMA5-20R Duplex GFCI outlet*** • The small Green LED light on the GFCI outlet is OFF • The "Reset Button" has popped out ***On the Inverter Front Panel*** • Green LED is ON • Yellow LED and Red LED are OFF • There is no buzzer alarm ***On the Remote Control NTX-RC*** • Power Bar Graph is OFF • Backlight is dimmed • DC input voltage is being displayed	**GFCI has tripped due to ground fault / leakage on the load side (Refer to Section 6.6.1 for more details)** 1. Due to ground fault / leakage on the Load Side of the GFCI, the Load Side has been mechanically disconnected from its AC input side by the relay inside the GFCI. 2. Internally, the inverter will still be working normally and the rated AC output voltage will be available on the internal Line Side of the GFCI but not on the external Load Side of the GFCI due to tripped relay in the GFCI.	Press the "Reset" button on the GFCI outlet to reset the GFCI after removing the cause of the ground fault / leakage.

SECTION 7 | Troubleshooting Guide

TROUBLE / SYMPTOMS	POSSIBLE CAUSE(S)	SUGGESTED REMEDIES
AC OUTPUT IS AVAILABLE ***On the Inverter Front Panel*** • Green LED is ON • Red LED is OFF • Buzzer alarm sounds intermittently when DC input voltage drops to Low DC Input Voltage Alarm Threshold of 11V +/- 0.3V when delivering high power loads • Yellow LED comes ON when buzzer alarm is sounded. ***On the Remote Control NTX-RC*** • DC input voltage is being displayed and intermittently drops to Low DC Input Voltage Alarm Threshold of 11V +/- 0.3V when delivering high power loads • Message "Input Fault" intermittently flashes whenever DC input voltage drops to Low DC Input Voltage Alarm Threshold of 11V +/- 0.3V • Power Bar Graph will be ON if the output power is > 50W to 100W	**Intermittent buzzer alarm due to intermittent high AC loads** 1. DC input wire size is not adequate for higher capacity loads OR there is loose connection between the battery and the inverter leading to DC input voltage falling below the Low DC Input Voltage Alarm Threshold 2. The battery has developed sulfation due to undercharging. In this condition, the internal resistance of the battery rises above normal and hence, causes abnormal voltage drop on its terminals at higher discharge current consumed by higher capacity load	1. Use thicker wires between the battery and the inverter and tighten all DC input circuit connections 2. Check internal resistance of the battery and remove sulfation by equalizing the battery or replace the battery 3. Alarm resets automatically when battery voltage rises to 11.5 VDC (12V units) / 23 VDC (24V units)
NO AC OUTPUT ***On the Inverter Front Panel*** • Green LED is ON • Red LED is OFF • Buzzer alarm sounds all the time • Yellow LED is ON ***On the Remote Control NTX-RC*** • DC input voltage is being displayed and has dropped to Low DC Input Voltage Shutdown Threshold of 10.5V +/- 0.3V • Message "Input Fault" is flashing • Power Bar Graph is OFF • LCD is dimmed	**Shutdown due to low DC input voltage** 1. DC input wire size is not adequate for the capacity of the AC load OR there is loose connection between the battery and the inverter leading to DC input voltage falling below the Low DC Input Voltage Shutdown Threshold 2. The battery has developed sulfation due to undercharging. In this condition, the internal resistance of the battery rises above normal and hence causes abnormal voltage drop on its terminals at higher discharge current consumed by higher capacity load	1. Use thicker wires between the battery and the inverter and tighten all DC input circuit connections 2. Check internal resistance of the battery and remove sulfation by equalizing the battery or replace the battery 3. Alarm resets automatically when battery voltage rises to 11.5 VDC (12V units) / 23 VDC (24V units)
AC OUTPUT IS AVAILABLE ***On the Inverter Front Panel*** • Green LED is ON • Red LED is OFF • Buzzer alarm sounds when DC input voltage drops to Low DC Input Voltage Alarm Threshold of 11V +/- 0.3V even on low AC loads • Yellow LED is OFF. ***On the Remote Control NTX-RC*** • DC input voltage is being displayed and drops to Low DC Input Voltage Alarm Threshold of 11V +/- 0.3V even at low loads • Power Bar Graph is ON if the output power is > 50W to 100W	**Buzzer alarm due to low DC input voltage even at low AC loads** The battery is almost discharged	1. Recharge the battery. 2. Alarm resets automatically when DC input voltage rises to > 11 VDC (12V units) / > 22 VDC (24V units)

SECTION 7 | Troubleshooting Guide

TROUBLE / SYMPTOMS	POSSIBLE CAUSE(S)	SUGGESTED REMEDIES
NO AC OUTPUT ***On the Inverter Front Panel*** • Green LED is ON • Red LED is OFF • Buzzer alarm is OFF • Yellow LED is ON ***On the Remote Control NTX-RC*** • DC input voltage is being displayed and has risen to High DC Input Voltage Shutdown Threshold of 16.3V +/- 0.3V • Message "Input Fault" is flashing • Power Bar Graph is OFF • LCD is dimmed	**Shutdown due to high DC input voltage** DC input voltage has risen to High DC Input Voltage Shutdown Threshold of 16.3 V (12V units) / 32 VDC (24V units)	1. Switch OFF the AC load and the inverter 2. Disconnect the DC input to the inverter 3. Check the output voltages of the battery and charging source and ensure these are below the High DC Input Voltage Shutdown Threshold of 16.3V +/- 0.3V 4. Check that a 24V battery is not being used instead of 12V battery for 12V units 5. The unit will reset automatically once the voltage drops to 16V (12V units) / 32V (24V units)
INVERTER DOES NOT SHUT DOWN WHEN IT IS SWITCHED OFF USING REMOTE CONTROL *NTX-RC*	**The ON / OFF switch on the front panel of the inverter is in ON condition**	When using the remote control NTX-RC, ensure that the ON / OFF switch on the inverter is in OFF position
MOTORIZED POWER TOOL WILL NOT START	Excessive start-up current from the load is activating the Soft Start Circuit and is reducing the output voltage and consequently, the current to a level where the starting torque required by the motor is not sufficient to turn the motor. (Starting torque in a motor is proportional to Voltage and the Current)	If appliance does not start, then the appliance is drawing excessive power and will not work with the inverter
MOTORIZED POWER TOOL DOES NOT OPERATE AT CORRECT SPEED	Purely inductive load with higher reactive power and lower Power Factor is activating the soft start circuitry and reducing the output voltage resulting in reduced speed	Make the load not purely inductive. Operate an incandescent lamp at the same time as the motor. This will reduce the reactive power and raise the Power Factor so that the Soft Start Circuit is not activated

SECTION 8 | Fuse Replacement

8.1 FUSES INSIDE THE INVERTER

The AC side is protected by an integral electronic overload circuit and will automatically reset in some cases.

The DC side is protected by fuses that are located inside the inverter. Normally, these fuses will not blow unless a serious problem occurs. See Section 9 - Specifications for details of fuses.

Please DO NOT replace the fuses yourself. We recommend you contact technician to find and fix the problems. High voltage and high temperature inside!

CAUTION!

NO USER-SERVICEABLE COMPONENTS INSIDE. DO NOT ATTEMPT TO OPEN THE INVERTER.

ATTENTION!

IL N'Y A PAS DE COMPOSANTES ACCESSIBLES POUR L'UTILISATEUR À L'INTÉRIEUR. NE TENTEZ PAS D'OUVRIR LE CONVERTISSEUR.

SECTION 9 | SPECIFICATIONS

MODEL NO.	NTX-1000-12	NTX-1500-12	NTX-2000-12	NTX-3000-12
INPUT				
DC INPUT VOLTAGE RANGE	10.5 - 16.3 VDC (± 0.3 VDC)			
DC INPUT CURRENT AT RATED LOAD	100A	150A	200A	300A
DC INPUT CURRENT AT NO LOAD	< 0.8A	< 0.9A	< 1.0A	<1.1A
OUTPUT				
AC OUTPUT VOLTAGE	115 VAC (± 5 VAC)			
AC OUTPUT FREQUENCY	60 Hz (± 1Hz)			
AC OUTPUT WAVE FORM	Pure Sine Wave			
CONTINUOUS ACTIVE OUTPUT POWER	1000W	1500W	2000W	3000W
MAXIMUM ACTIVE SURGE POWER (LESS THAN 1 SEC)	2000W	3000W	4000W	6000W
PEAK EFFICIENCY	90.5%	90.5%	90.5%	90.5%
PORTS				
REMOTE CONTROL PORT (RJ-45 JACK, 8P8C)	Yes	Yes	Yes	Yes
PROTECTIONS				
LOW INPUT VOLTAGE WARNING ALARM	11.0 VDC ± 0.3 VDC			
LOW INPUT VOLTAGE SHUTDOWN	10.5 VDC ± 0.3 VDC			
HIGH INPUT VOLTAGE SHUTDOWN	16.3 VDC ± 0.3 VDC			
GROUND FAULT/OVERLOAD/ SHORT CIRCUIT SHUTDOWN	Yes. Manual reset			
OVER TEMPERATURE SHUTDOWN	Yes. Auto reset			
COOLING	Load and temperature controlled variable speed fan			
INTERNAL FUSES	4 x 40A in parallel	8 x 30A in parallel	10 x 35A in parallel	16 x 30A in parallel
	(Automotive Blade Fuses, Type ATO/ATC, 32 VDC)			
CONNECTIONS				
INPUT	NUT AND BOLT (M9)			
OUTPUT	NEMA5-20R Duplex Receptacles			NEMA L5-30R Receptacle
ACCESSORIES INCLUDED				
REMOTE CONTROL NTX-RC	Yes	Yes	Yes	Yes
COMPLIANCE				
SAFETY	Intertek - ETL Listed. Conforms to UL Std. 458 and certified to CSA Std. C22.2 No.107.1			
EMI / EMC	FCC Part 15(B), Class A			
ENVIRONMENT				
OPERATING AMBIENT TEMPERATURE	-25°C to 50°C; -13°F to 122°F			
STORAGE TEMPERATURE	-30°C to 70°C; -26°F to 158°F			
GENERAL				
DIMENSIONS, IN (W X D X H)	8.50 x 11.06 x 3.62	8.50 x 13.11 x 3.62	8.50 x 13.11 x 3.62	8.50 x 17.75 x 3.62
DIMENSIONS, MM (W X D X H)	216 x 281 x 92	216 x 333 x 92	216 x 333 x 92	216 x 451 x 92
WEIGHT, KG	2.5	3.5	3.9	5.5
WEIGHT, LB	5.4	7.8	8.6	12.0

NOTES: 1. All power ratings are specified for resistive load at Power Factor = 1
2. All specifications given above are at ambient temperature of 25°C / 77°F
3. Specifications are subject to change without notice

SECTION 9 | SPECIFICATIONS

MODEL NO.	NTX-1000-24	NTX-1500-24	NTX-2000-24	NTX-3000-24
INPUT				
DC INPUT VOLTAGE RANGE	21.0 - 32.6 VDC (± 0.5 VDC)			
DC INPUT CURRENT AT RATED LOAD	50A	75A	100A	150A
DC INPUT CURRENT AT NO LOAD	< 0.4A	< 0.5A	< 0.6A	<0.6A
OUTPUT				
AC OUTPUT VOLTAGE	115 VAC (± 5 VAC)			
AC OUTPUT FREQUENCY	60 Hz (± 1Hz)			
AC OUTPUT WAVE FORM	Pure Sine Wave			
CONTINUOUS ACTIVE OUTPUT POWER	1000W	1500W	2000W	3000W
MAXIMUM ACTIVE SURGE POWER (LESS THAN 1 SEC)	2000W	3000W	4000W	6000W
PEAK EFFICIENCY	90.5%	90.5%	90.5%	90.5%
PORTS				
REMOTE CONTROL PORT (RJ-45 JACK, 8P8C)	Yes	Yes	Yes	Yes
PROTECTIONS				
LOW INPUT VOLTAGE WARNING ALARM	22.0 VDC ± 0.5 VDC			
LOW INPUT VOLTAGE SHUTDOWN	21.0 VDC ± 0.5 VDC			
HIGH INPUT VOLTAGE SHUTDOWN	32.0 VDC ± 0.5 VDC			
GROUND FAULT/OVERLOAD/ SHORT CIRCUIT SHUTDOWN	Yes. Manual reset			
OVER TEMPERATURE SHUTDOWN	Yes. Auto reset			
COOLING	Load and temperature controlled variable speed fan			
INTERNAL FUSES	2 x 40A in parallel	4 x 30A in parallel	5 x 35A in parallel	8 x 30A in parallel
	(Automotive Blade Fuses, Type ATO/ATC, 32 VDC)			
CONNECTIONS				
INPUT	NUT AND BOLT (M9)			
OUTPUT	NEMA5-20R Duplex Receptacles			NEMA L5-30R Receptacle
ACCESSORIES INCLUDED				
REMOTE CONTROL NTX-RC	Yes	Yes	Yes	Yes
COMPLIANCE				
SAFETY	Intertek - ETL Listed. Conforms to UL Std. 458 and certified to CSA Std. C22.2 No.107.1			
EMI / EMC	FCC Part 15(B), Class A			
ENVIRONMENT				
OPERATING AMBIENT TEMPERATURE	-25°C to 50°C; -13°F to 122°F			
STORAGE TEMPERATURE	-30°C to 70°C; -26°F to 158°F			
GENERAL				
DIMENSIONS, IN (W X D X H)	8.50 x 11.06 x 3.62	8.50 x 13.11 x 3.62	8.50 x 13.11 x 3.62	8.50 x 17.75 x 3.62
DIMENSIONS, MM (W X D X H)	216 x 281 x 92	216 x 333 x 92	216 x 333 x 92	216 x 451 x 92
WEIGHT, KG	2.5	3.5	3.9	5.5
WEIGHT, LB	5.4	7.8	8.6	12.0

NOTES: 1. All power ratings are specified for resistive load at Power Factor = 1
2. All specifications given above are at ambient temperature of 25°C / 77°F
3. Specifications are subject to change without notice

SECTION 9 | SPECIFICATIONS

MODEL NO.	NTX-3000S-12	NTX-3000S-24
INPUT		
DC INPUT VOLTAGE RANGE	10.5 - 16.3 VDC (± 0.3 VDC)	21.0 - 32.6 VDC (± 0.5 VDC)
DC INPUT CURRENT AT RATED LOAD	300A	150A
DC INPUT CURRENT AT NO LOAD	< 1.1A	< 0.6A
OUTPUT		
AC OUTPUT VOLTAGE	115 VAC (± 5 VAC)	
AC OUTPUT FREQUENCY	60 Hz (± 1Hz)	
AC OUTPUT WAVE FORM	Pure Sine Wave	
CONTINUOUS ACTIVE OUTPUT POWER	3000W	3000W
MAXIMUM ACTIVE SURGE POWER (LESS THAN 1 SEC)	6000W	6000W
PEAK EFFICIENCY	90.5%	90.5%
PORTS		
REMOTE CONTROL PORT (RJ-45 JACK, 8P8C)	Yes	Yes
PROTECTIONS		
LOW INPUT VOLTAGE WARNING ALARM	11.0 VDC ± 0.3 VDC	22.0 VDC ± 0.5 VDC
LOW INPUT VOLTAGE SHUTDOWN	10.5 VDC ± 0.3 VDC	21.0 VDC ± 0.5 VDC
HIGH INPUT VOLTAGE SHUTDOWN	16.3 VDC ± 0.3 VDC	32.0 VDC ± 0.5 VDC
GROUND FAULT/OVERLOAD/ SHORT CIRCUIT SHUTDOWN	Yes. Manual reset	
OVER TEMPERATURE SHUTDOWN	Yes. Auto reset	
COOLING	Load and temperature controlled variable speed fan	
INTERNAL FUSES	16 x 30A in parallel	8 x 30A in parallel
	(Automotive Blade Fuses, Type ATO/ATC, 32 VDC)	
CONNECTIONS		
INPUT	NUT AND BOLT (M9)	
OUTPUT	3x NEMA 5-15R Receptacles with 15A Circuit Breaker	
ACCESSORIES INCLUDED		
REMOTE CONTROL NTX-RC	Yes	Yes
COMPLIANCE		
SAFETY	Intertek - ETL Listed. Conforms to UL Std. 458 and certified to CSA Std. C22.2 No.107.1	
EMI / EMC	FCC Part 15(B), Class A	
ENVIRONMENT		
OPERATING AMBIENT TEMPERATURE	-25°C to 50°C; -13°F to 122°F	
STORAGE TEMPERATURE	-30°C to 70°C; -26°F to 158°F	
GENERAL		
DIMENSIONS, IN (W X D X H)	8.50 x 17.75 x 3.62	8.50 x 17.75 x 3.62
DIMENSIONS, MM (W X D X H)	216 x 451 x 92	216 x 451 x 92
WEIGHT, KG	5.5	5.5
WEIGHT, LB	12.0	12.0

NOTES: 1. All power ratings are specified for resistive load at Power Factor = 1
2. All specifications given above are at ambient temperature of 25°C / 77°F
3. Specifications are subject to change without notice

SECTION 10 | WARRANTY

2 YEAR LIMITED WARRANTY

NTX-1000-12/24, NTX-1500-12/24, NTX-2000-12/24, NTX-3000-12/24 and NTX-3000S-12/24 are manufactured by Samlex America Inc. (the "Warrantor") are warranted to be free from defects in workmanship and materials under normal use and service. The warranty period is 2 years for the United States and Canada, and is in effect from the date of purchase by the user (the "Purchaser").

Warranty outside of the United States and Canada is limited to 6 months. For a warranty claim, the Purchaser should contact the place of purchase to obtain a Return Authorization Number.

The defective part or unit should be returned at the Purchaser's expense to the authorized location. A written statement describing the nature of the defect, the date of purchase, the place of purchase, and the Purchaser's name, address and telephone number should also be included.

If upon the Warrantor's examination, the defect proves to be the result of defective material or workmanship, the equipment will be repaired or replaced at the Warrantor's option without charge, and returned to the Purchaser at the Warrantor's expense.
(Contiguous US and Canada only)

No refund of the purchase price will be granted to the Purchaser, unless the Warrantor is unable to remedy the defect after having a reasonable number of opportunities to do so. Warranty service shall be performed only by the Warrantor. Any attempt to remedy the defect by anyone other than the Warrantor shall render this warranty void. There shall be no warranty for defects or damages caused by faulty installation or hook-up, abuse or misuse of the equipment including exposure to excessive heat, salt or fresh water spray, or water immersion.

No other express warranty is hereby given and there are no warranties which extend beyond those described herein. This warranty is expressly in lieu of any other expressed or implied warranties, including any implied warranty of merchantability, fitness for the ordinary purposes for which such goods are used, or fitness for a particular purpose, or any other obligations on the part of the Warrantor or its employees and representatives.

There shall be no responsibility or liability whatsoever on the part of the Warrantor or its employees and representatives for injury to any persons, or damage to person or persons, or damage to property, or loss of income or profit, or any other consequential or resulting damage which may be claimed to have been incurred through the use or sale of the equipment, including any possible failure of malfunction of the equipment, or part thereof. The Warrantor assumes no liability for incidental or consequential damages of any kind.

Samlex America Inc. (the "Warrantor")
www.samlexamerica.com

NOTES:

NOTES:

Contact Information

Toll Free Numbers
Ph: 1 800 561 5885
Fax: 1 888 814 5210

Local Numbers
Ph: 604 525 3836
Fax: 604 525 5221

Website
www.samlexamerica.com

USA Shipping Warehouses
Kent, WA
Plymouth, MI

Canadian Shipping Warehouse
Richmond, BC

Email purchase orders to
orders@samlexamerica.com

samlexamerica®