


KIT NUMBER	TOWER HEIGHT
4.98.0100.010	10'
4.98.0100.020	20'
4.98.0100.030	30'
4.98.0100.040	40'
4.98.0100.050	50'
4.98.0100.060	60'
4.98.0100.070	70'
4.98.0100.080	80'
4.98.0100.090	90'
4.98.0100.100	100'
4.98.0100.110	110'
4.98.0100.120	120'

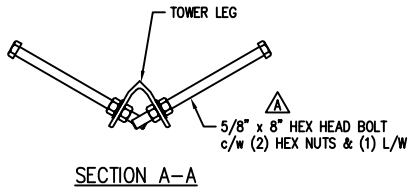


NOTES: 1) WHEN USING AN ANTI-CLIMB SHIELD START STEP PEGS IN FIRST HOLE ABOVE SHIELD.
 2) STEP BOLTS ARE INSTALLED THIS WAY FOR SUPERTITAN SECTION #1 TO #12HD ONLY. SEE DWG #000001.620.0100 FOR STEPBOLT INSTALLATION OF SECTIONS #13 - #21.

REV.	BY:	BY:	DESCRIPTION	DATE
REV.	CHK.	CHK.		

REFERENCE DRAWINGS:

DRAWING NUMBER	DRAWING NUMBER

CONFIDENTIAL: ALL INTELLECTUAL PROPERTY RIGHTS HEREIN ARE THE PROPERTY OF TRYLON INC. ALL DUPLICATION, RECORDING, DISCLOSURE OR USE IS PROHIBITED WITHOUT WRITTEN CONSENT OF TRYLON INC.



DRAWING NO. 000001.620.0041

CUSTOMER: SITE: SCALE: 25,000

DATE: 25 APR 03 BY: CHK: APP:

TITLE: STEP PEG INSTALLATION