


Installation Instructions  
For Small Grounding Kit  
99411399



## Panel Screws Enclosed

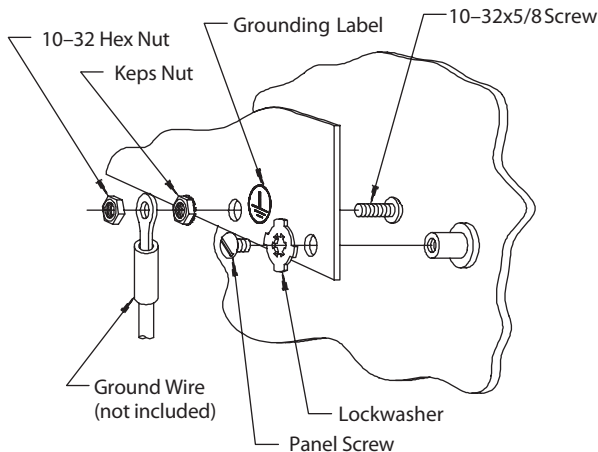

1. Insert the 10-32x5/8 screw through the hole in the panel as shown.
2. Secure screw with Keps nut. The Keps nuts must penetrate into the paint to ensure electrical continuity.
3. Attach the ground wire and secure with 10-32 hex nut as shown.
4. Install the lockwasher under one of the screws securing the panel to ensure grounding between the panel and the enclosure. Recommended torque for grounding washer not to exceed 30 in-lbs.
5. Attach included grounding label adjacent to the bolt as shown.