

PANDUIT **NET-ACCESS S-Type Cable Management Panel**



(Part Numbers - S2BRK6, S2BRK12, S1DR, S2DR, S1LR, S2LR)

INSTRUCTIONS CM615C

© Panduit Corp. 2013


Cable Management Panel (S2BRK6, S2BRK12) Installation

- Center Cable Management Panel vertically on outside of cabinet post at desired location (flat surface of bracket to face inwards)
- Fasten Cable Management Panel to cabinet by passing M5 Torx screws [4 screws for S2BRK6; 6 screws for S2BRK12] through holes of cabinet post into center holes of bracket as shown below

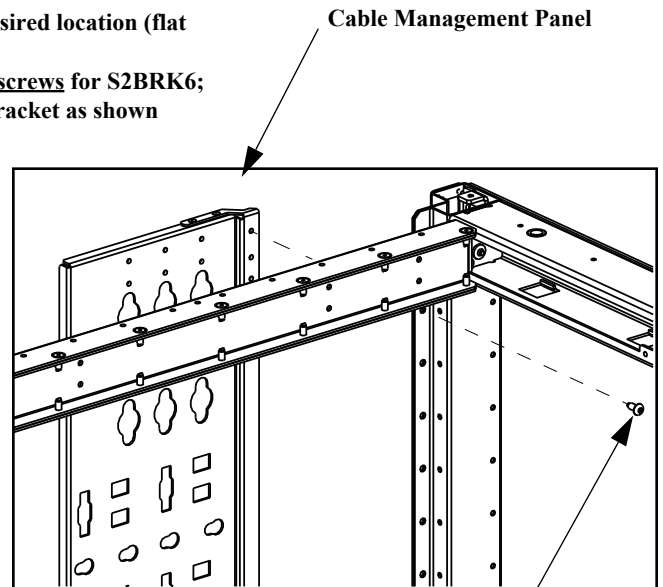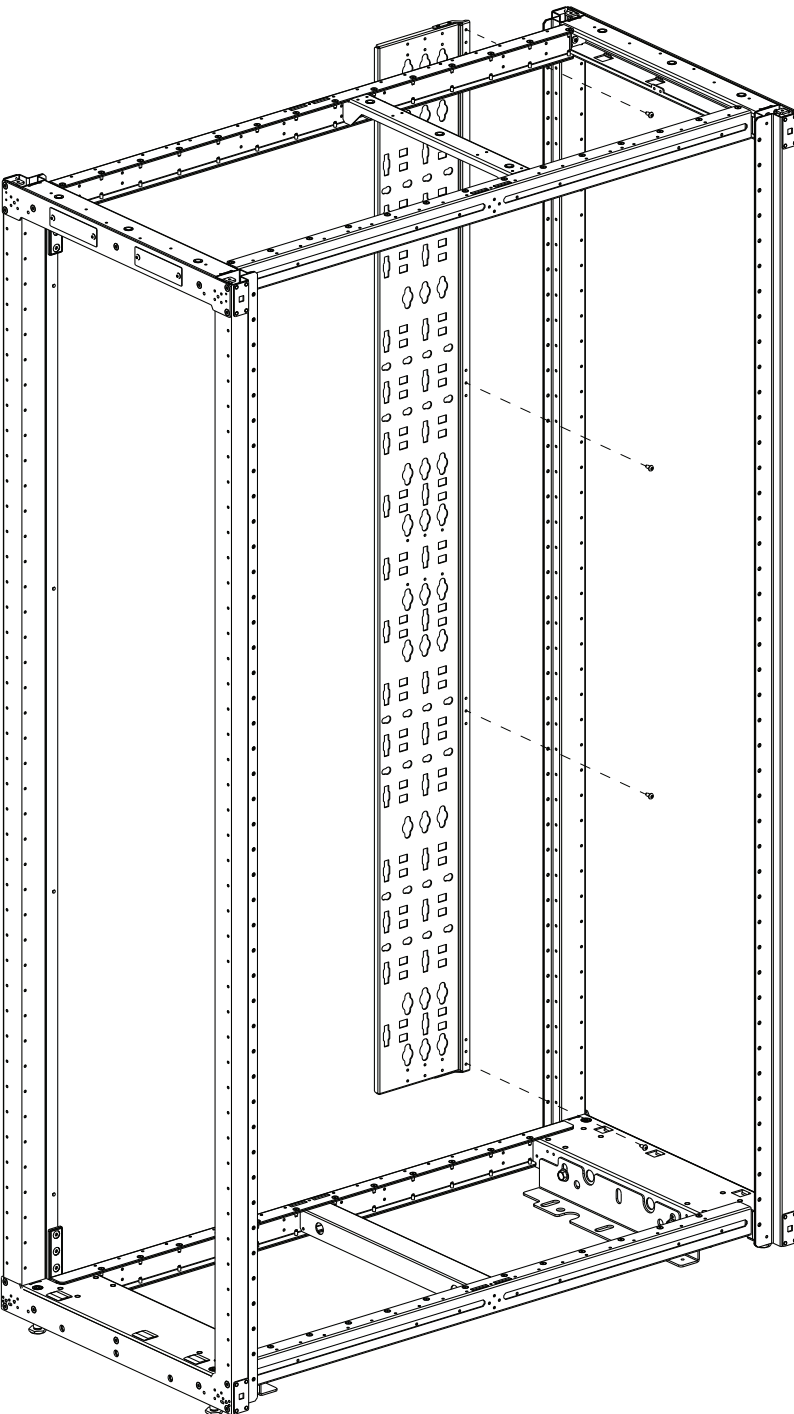

DETAIL VIEW

M5 Torx Screws
-Use T25 Torx driver

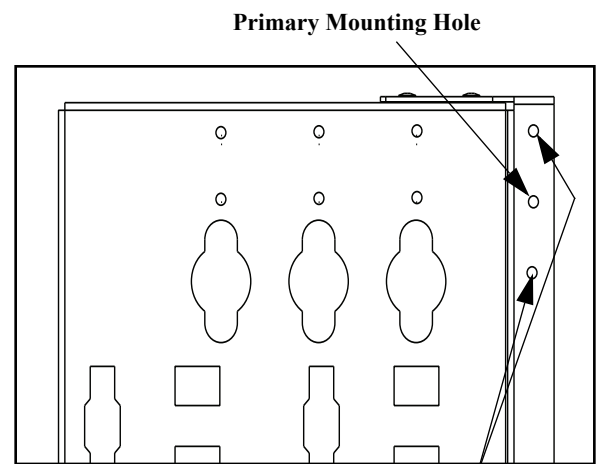


Alternate Mounting Holes

NOTE: Alternate mounting holes are to be used when installing 70"+ POU's on S2BRK6 and S2BRK12 in 42 RU cabinets

D-Ring (S1DR, S2DR) and L-Retainer (S1LR, S2LR) Installation

- Cable Management D-Rings - Insert mounting tab(s) of L-Retainer into round keyhole slot(s) located on the cable management panel. Slide D-Ring in keyhole slot to engage D-Ring.
- Cable Management L-Retainers - Insert mounting tab of L-Retainer into any keyed mounting slot located on the cable management panel. Slide L-Retainer up or down in keyed slot and engage release tab in adjacent cutout. Pull release tab and reverse the process to remove L-Retainer.

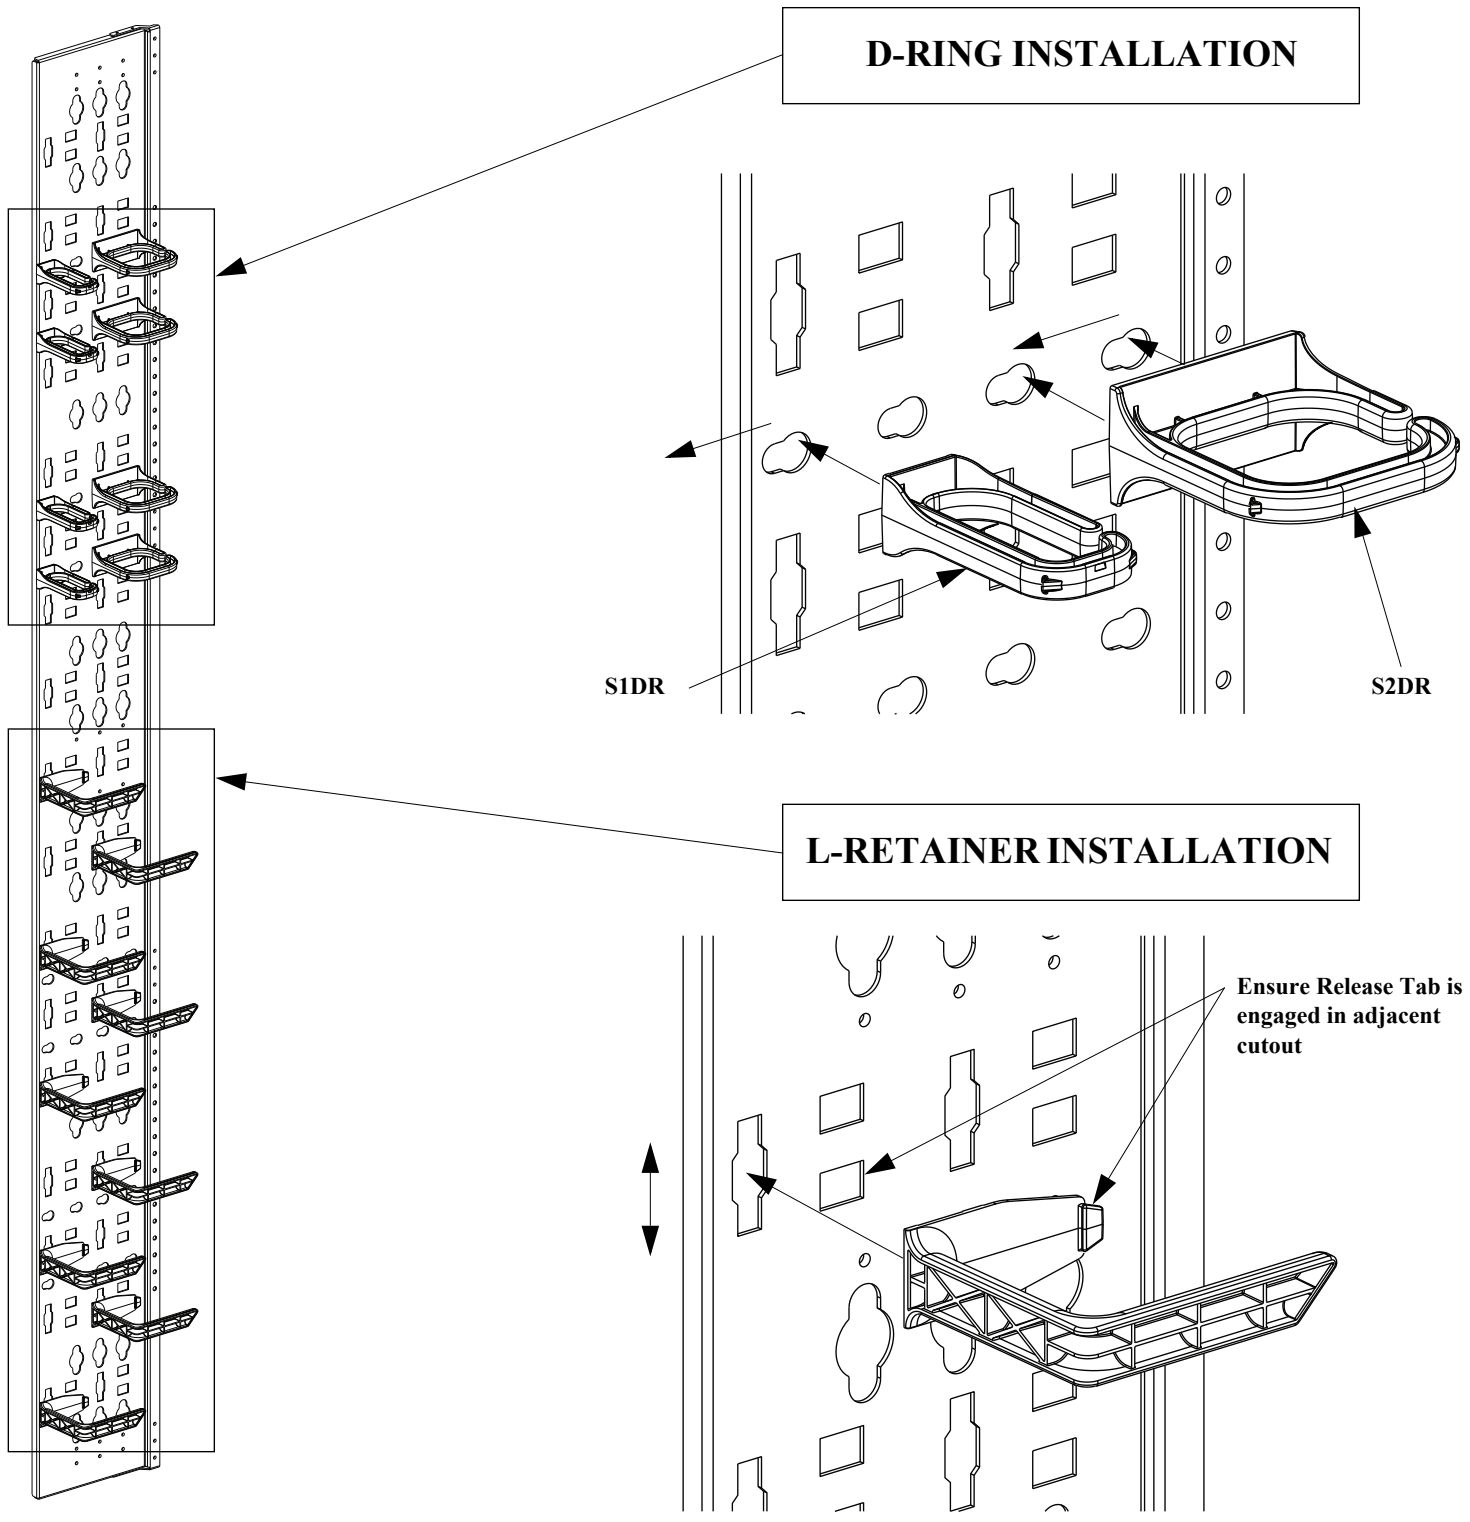

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT
www.panduit.com

E-mail:
techsupport@panduit.com
Phone:
866-405-6654