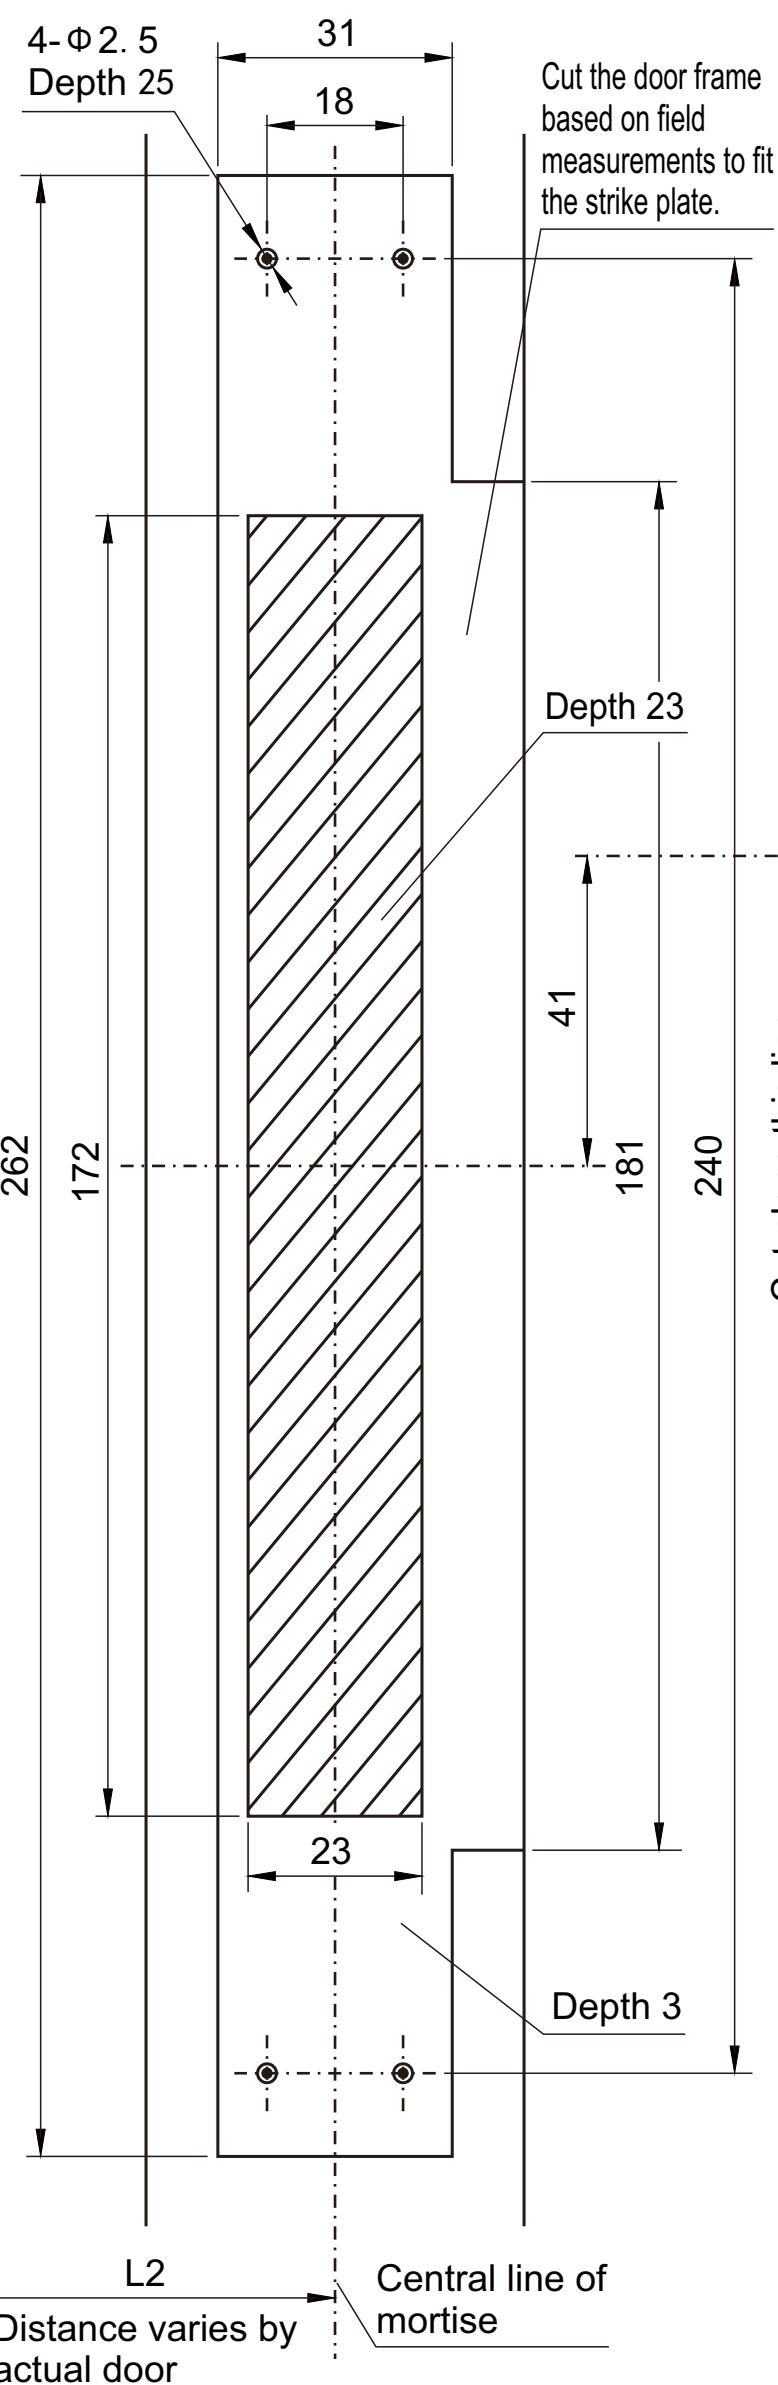
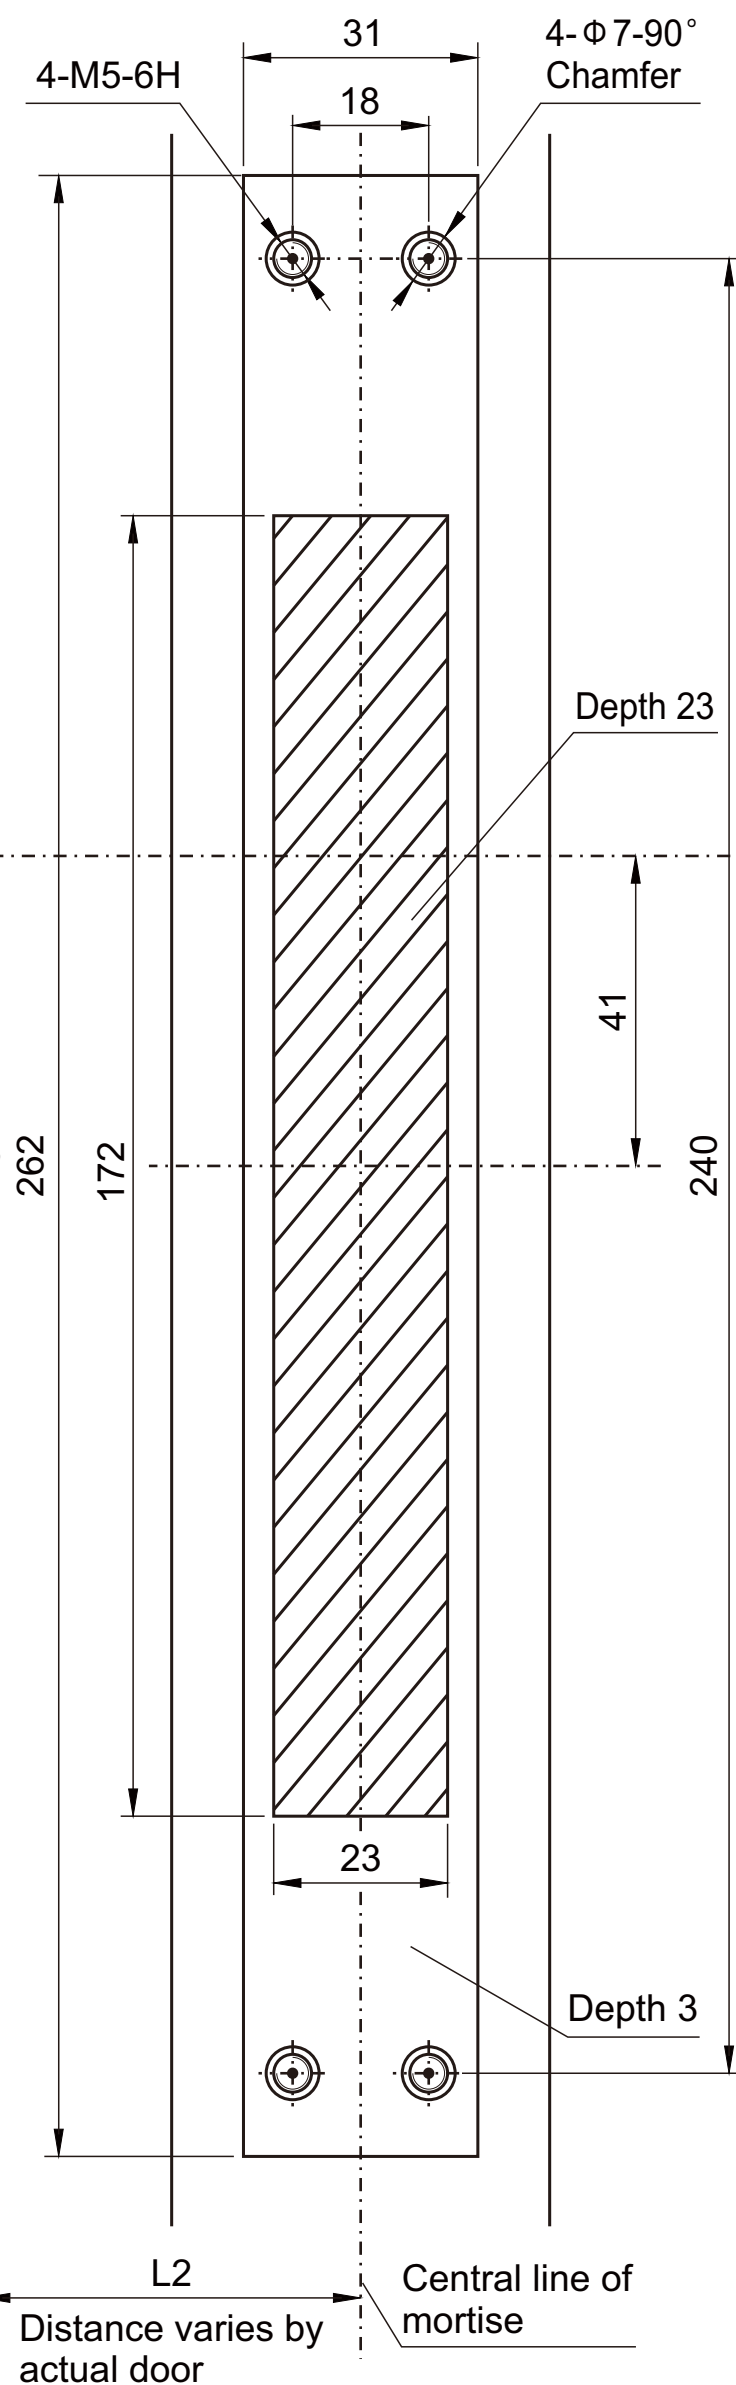
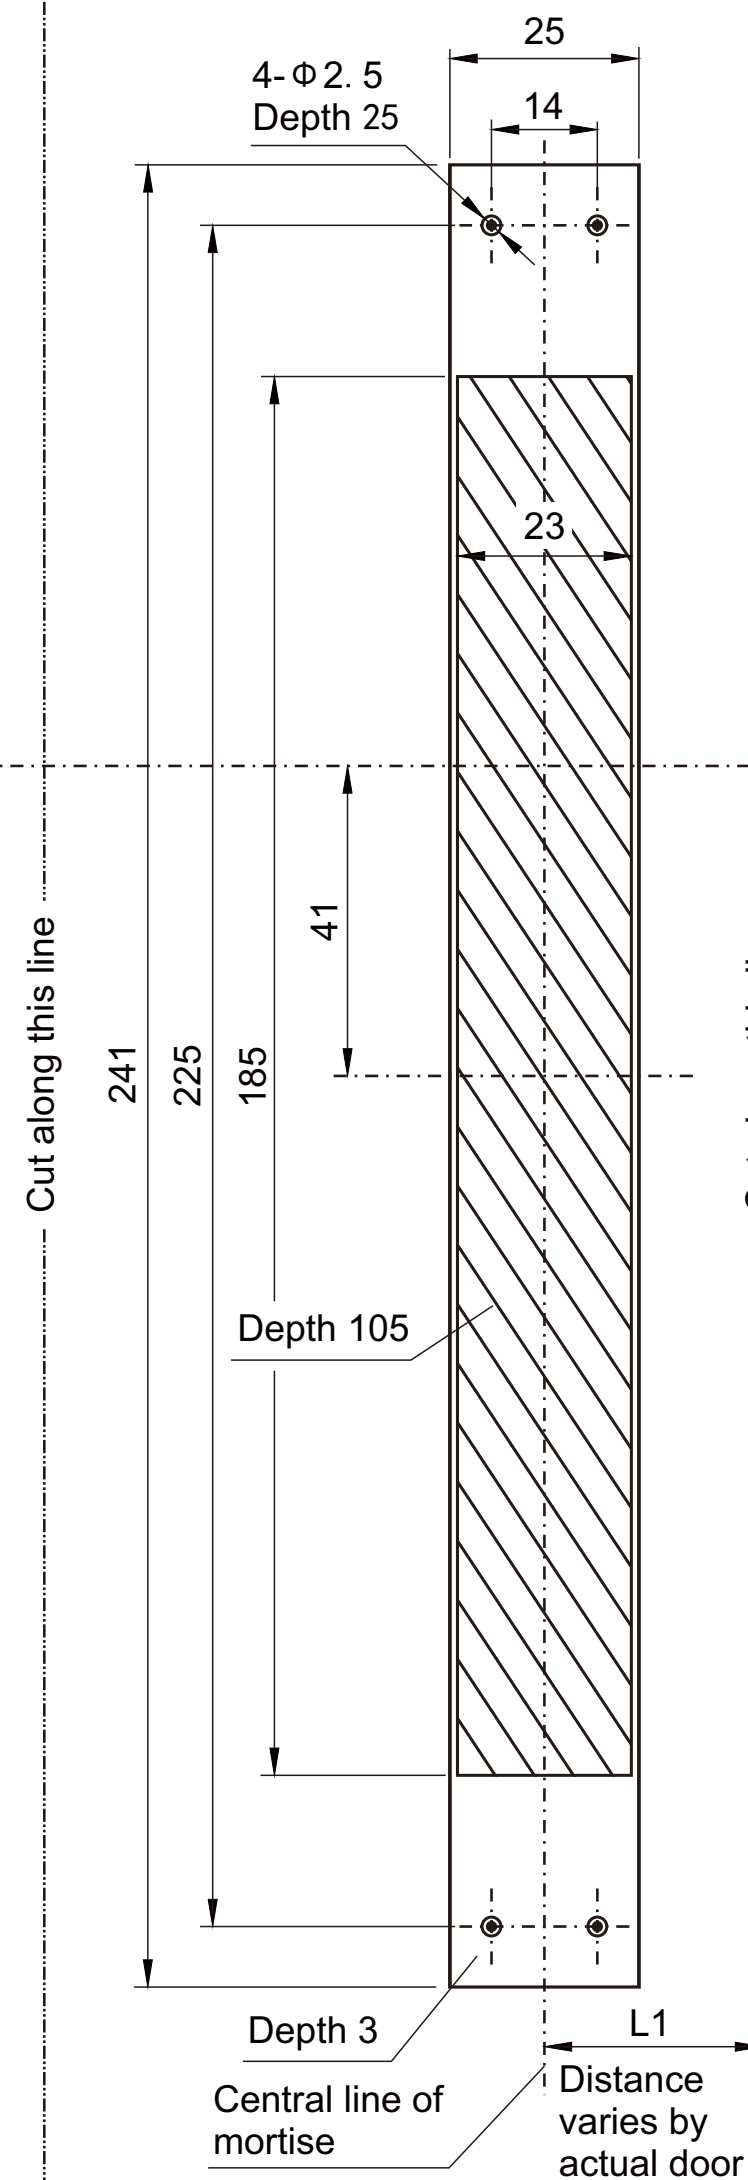
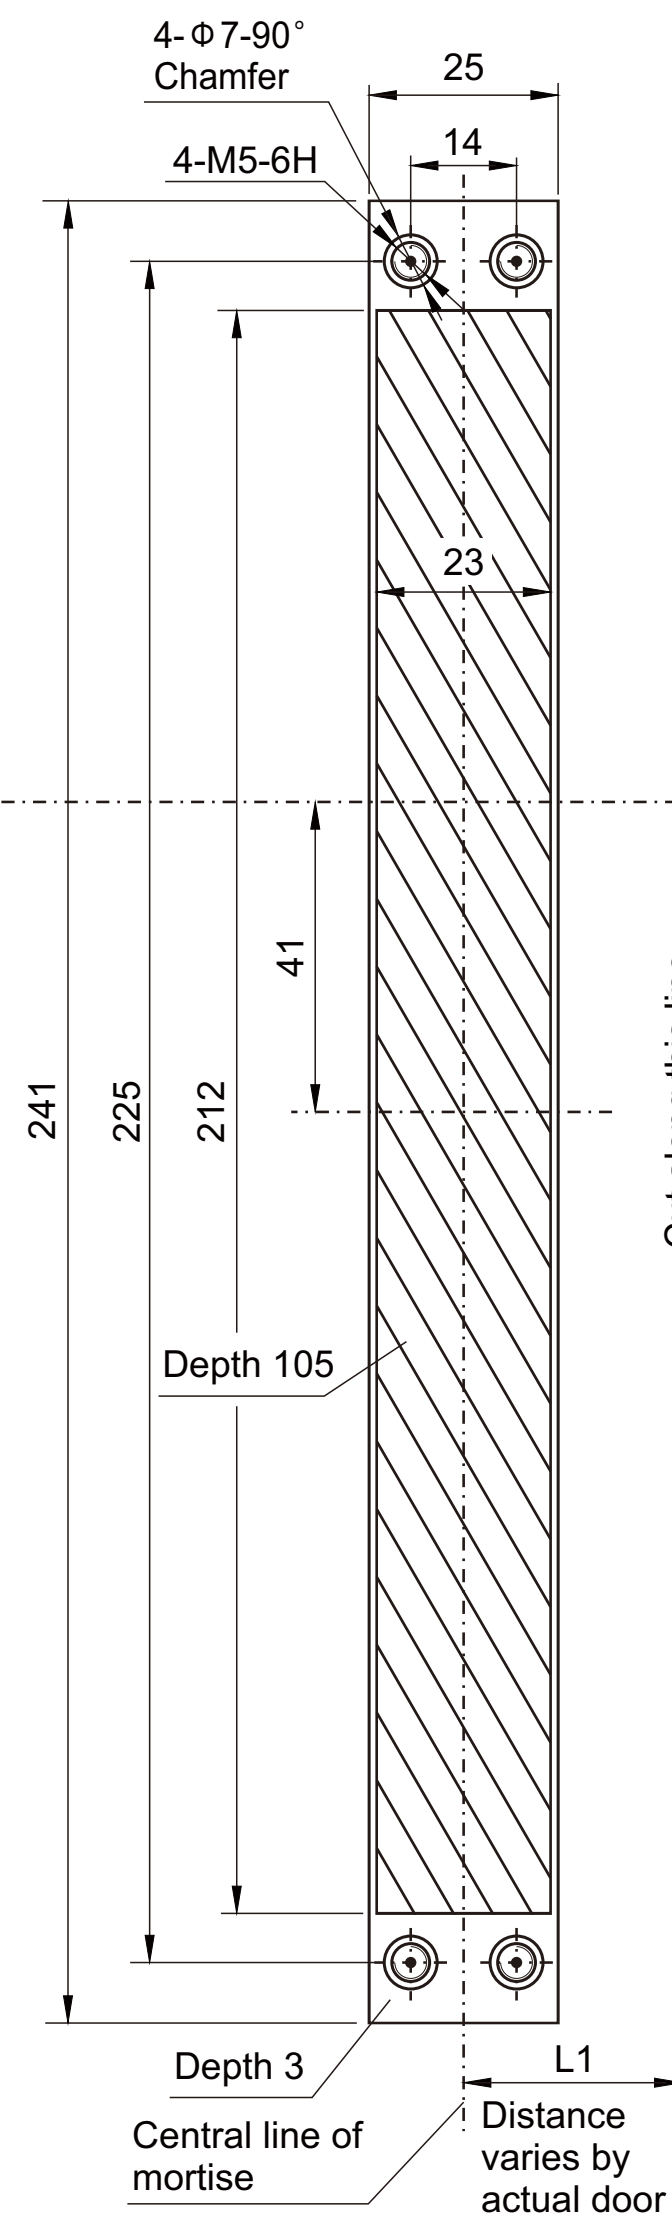


**Strike Plate Drilling Template****! For Wood Doors Only****Strike Plate Drilling Template****! For Metal Doors Only****Drilling Template**

Scale: 1:1 Unit: mm

**Mortise Drilling Template****! For Wood Doors Only**

**!** L1=L2 (Note: This does not apply to right-hand outswing wooden doors or left-hand inswing wooden doors. In such cases, L1 and L2 must be determined based on actual conditions.)

**Mortise Drilling Template****! For Metal Doors Only**

**!** L1 and L2 are the distances from the mortise centerline to the outer edge of the door. For doors with anti-pry edges, if the mortise centerline does not line up with the middle of the door thickness, adjust the installation accessories based on the L1 and L2 measurements for a proper fit.

**Front/Back Body Drilling Template**