

SynopSYS™ Security Management Software



WAN

Long Range Radio Transmitter



x1

Plug-in Fast PSTN Modem
RP432MD2400A



x1 IP or Fast PSTN

Plug-in IP Module
RW132IP0000A



Plug-in GSM/GPRS Module
RP432GSM000A



x1

WAN



LightSYS Main Board
RP432M00000D

- 8-50 Zones
- 4 Partitions
- 4 Groups per Partition
- 4-32 Outputs
- 30 User Codes
- 500 Event Log
- Selectable Zone Resistance

PC to Panel Cable
RW132EUSB00A




RISCO Cloud Server




Monitoring Stations



Configuration Software

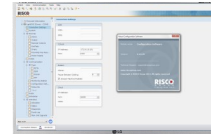

www.riscocloud.com web interface



WAN

RISCOBUS
Save • Control • Win

- Main Panel RS485 Bus line supports up to 32 Bus devices: Keypads, Expanders, Bus Detectors & Sounders
- 300m max. length for Main Panel Bus line and for Detector Bus lines with standard alarm cable
- 1000m max. length per Bus line with shielded twisted pair Cat. 5 cable, and on condition Bus Test result is above 97%

Voice Module
RP432EV0001C



x1

Non-Bus wiring

Listen-in & Speak Module
RW132EVL000A



x4

8 x 100mA O.C. Output Expander
RP296E08000A



x6 Output Expanders per system

4 x 3A Relay Output Expander
RP296E04000A



8 Zone Expander
RP432EZ0800A



x5 per system

Assign Single Zone Expanders to zones 9 & 10 and then add 8 Zone Expanders in order to reach 50 wired zones

1.5A Power Supply
RP296EPS PCB
RP296EPSP00A Boxed, EU




x4 Power Supply Expanders per system

3A Power Supply
RP128EPS000A PCB
RP128PSPSEUA Boxed, EU



Elegant Keypads
RPKELW0000A
RPKELPW0000A with prox
RPKEL0B0000A black
RPKELPW0000A black with prox



x4 wired keypads per system

Touchscreen Keypads
RP128KP0200A
RP128KPP200A with prox



ProSYS Keypads
RP128KCL0ICA
RP128KCLPICA with prox



LightSYS Keypads
RP432KP0000A
RP432KPP000A with prox




x8 per system

Wireless Expander
RP432EW8000A



x2 per system

Bus Zone Expander
RP128EZB000B
Acts as Bus isolator and Bus detector concentrator

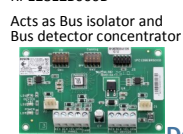

x4 Bus Zone Expanders per system

WatchOUT



WatchOUT



BWare Bus



Seismic Detector



Single Zone Expanders
RP128EZ0100A



Detector Bus Lines

Up to 512 Bus Detectors per system
Up to 32 per Bus Zone Expander, or directly on main panel Bus, with shielded twisted pair Cat. 5 cable
Up to 20 Bus Detectors recommended per Bus Zone Expander or on main panel Bus, for better performance with regular alarm cable, and for higher security

ProSound



x4 sounders per system



Indoor Cube IP Cameras
RVCM11H0000A



Outdoor Bullet IP Cameras
RVCM5200E0100A



Prox Key Readers
RP128PKR300A
For Italian market



Wireless Sounders



x4 wireless sounders per system
x3 per Wireless Expander

2-Way Wireless Slim Keypads



x4 wireless keypads per system
x2 per Wireless Expander

Wireless BWare DT



Wireless Door/Window Contacts



Wireless Curtain PIR



WL Smoke & Heat Detector



Wireless CO & Gas Detectors



Wireless Flood Detector



x50 wireless detectors per system
x32 per Wireless Expander

2-Way Keyfob




x16 Rolling Code Keyfobs per system
x16 per Wireless Expander

1-Way Keyfob



Panic Keyfob



x50 Zone/Panic Keyfobs per system
x32 per Wireless Expander

Wristband Panic

