



BlueParrott M300-XT SE User Manual



© 2023 GN Audio A/S. All rights reserved. Jabra® is a trademark of GN Audio A/S. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by GN Audio A/S is under license.

Made in China

MODEL: OTE970



Declaration of Conformity can be found on
www.jabra.com/doc

1. Welcome.....	4
2. BlueParrott M300-XT overview	5
2.1 Included accessories	
3. How to wear.....	6
3.1 Selecting an EarGel	
3.2 How to get the perfect fit	
4. How to charge.....	8
5. How to connect.....	10
5.1 Power on	
5.2 Power off	
5.3 Pair to your smartphone	
5.4 Connect to your smartphone using NFC	
6. How to use	13
6.1 Calls	
6.2 The BlueParrott button™	
6.3 Multiple call handling	
6.4 Multipoint mode	
6.5 Update firmware	
6.6 Reset the headset	
7. BlueParrott app	18
8. Support.....	19
8.1 FAQ	
8.2 How to care for your headset	
8.3 How to clean your headset	


1. Welcome

Thank you for using the BlueParrott M300-XT. We hope you will enjoy it!

BlueParrott M300-XT features

- **Customizable BlueParrott Button™** - Program for mute, speed dial or Push-to-Talk
- **Walk and talk** - Roam up to 300ft/100m from paired Bluetooth devices
- **All-day conversations** - Up to 14 hours of talk time
- **USB-C charging** - For added convenience
- **Blocks out 80% of background noise** - 2 microphones for crystal-clear calls


2. BlueParrott M300-XT overview

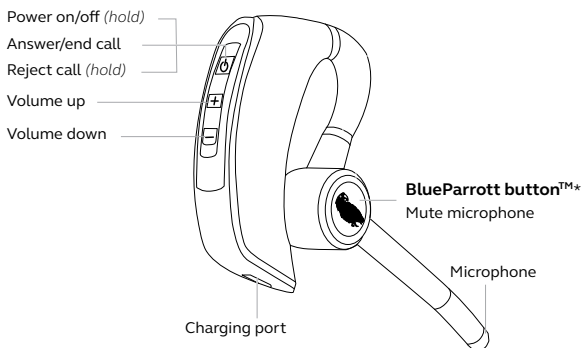

*The BlueParrott button™ is customizable using the BlueParrott app.

2.1 Included accessories

USB cable



EarGels



Small




Medium




Large

3. How to wear

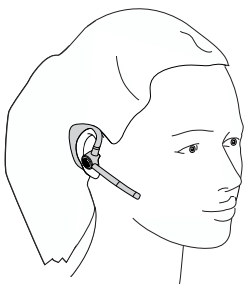

The headset can be worn on the left or right ear.

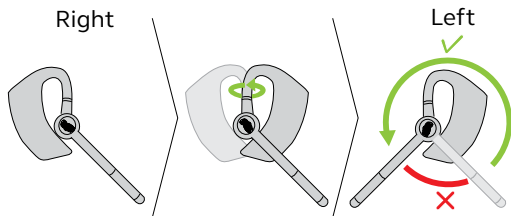

To wear the headset on the other ear, rotate the microphone horizontally to the other side. Then swivel the microphone up and over and point it towards your mouth.

3.1 Selecting an EarGel

To achieve the optimal comfort and sound quality, the fit of the earbud is essential.

The EarGel should rest gently against your ear canal. Do not squeeze or push the EarGel into your ear canal. Make sure you try all three EarGel sizes until you find the fit that gives you the best combination of comfort and sound quality.



Small




Medium



Large


3.2 How to get the perfect fit

For the best audio quality and comfort, the eargel should fit firmly in your ear, but should not be squeezed into your ear canal.

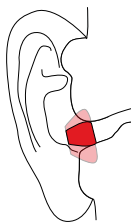


4. How to charge


To charge the headset, connect the USB charging cable to the headset's USB charging port. It is recommended to charge the headset using the supplied charging cable. It takes up to 150 minutes to fully charge the battery.

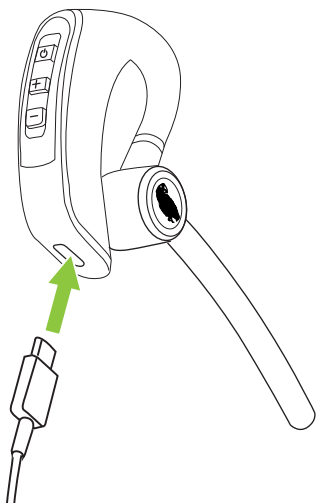

While charging, the LED indicator shows the charging status. Red indicates the headset is charging. Blue indicates the headset is fully charged.

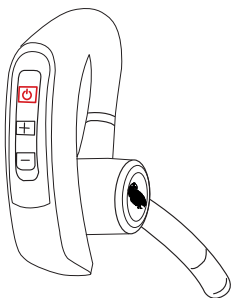

Charging

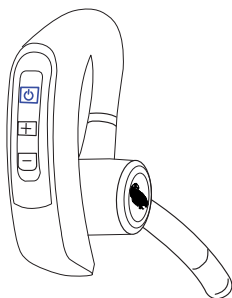


Fully charged

5. How to connect


5.1 Power on

Press and hold the Multi-function button for 1 second until the LED flashes blue and you hear “Power on”.

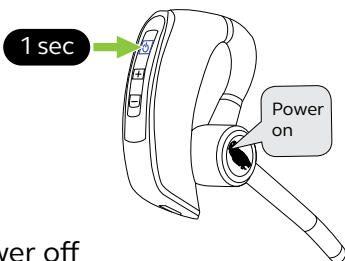


5.2 Power off

Press and hold the Multi-function button for 3 seconds until the LED flashes red and you hear “Power off”.

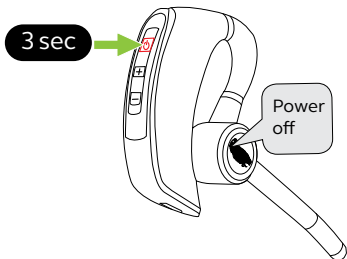

5.3 Pair to your smartphone


1. Ensure the headset is powered off.
2. Press and hold the Multi-function for approx. 6 seconds until you hear “Pair mode” and the LED flashes red and blue. The headset is now ready to pair.
3. Go to the Bluetooth menu on your smartphone and select the M300-XT from the list of available devices.

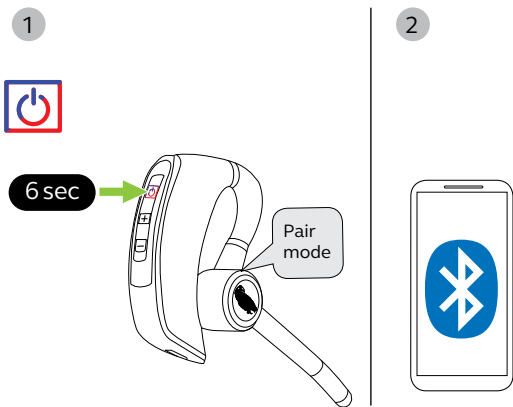

5.4 Connect to your smartphone using NFC


1. Ensure your headset is powered on, and that NFC is enabled on your smartphone.
2. Place the NFC zone of your smartphone against the NFC zone of the headset until your smartphone confirms the connection.

Please note that not all phones support NFC pairing.

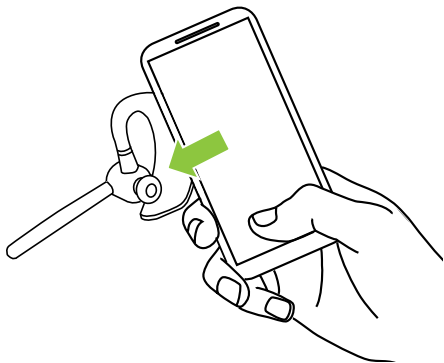

NFC Zone


6. How to use

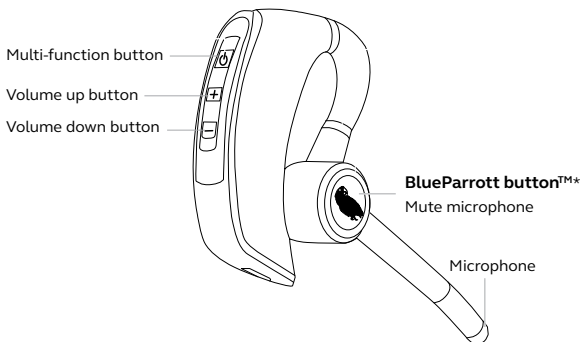

*The BlueParrott button™ is customizable using the BlueParrott app.

6.1 Calls

What the buttons do

	Answer call	Press the Multi-function button
	End call	Press the Multi-function button
	Reject call	Press and hold (2 sec) the Multi-function button
	Activate Voice Assistant (i.e. Siri, Google Assistant)	Press the Multi-function button when not on a call



Adjust volume

Press the **Volume up** or **Volume down** button, when listening to music or on a call.

Turn LEDs on/off

Press both the **Volume up** and **Volume down** buttons simultaneously



Transfer audio from headset to smartphone

While on a call, press and hold (2 sec) the **Volume down** button to transfer the call audio to your paired smartphone. Repeat to transfer the call audio back to your headset.

Redial last number

Press and hold (1 sec) the **volume down** button until you hear a beep.



Mute/un-mute microphone

Press the **BlueParrott** button when on a call. Alternatively, press and hold (2 sec) the Volume up button.

6.2 The BlueParrott button™

By default, the BlueParrott button mutes the microphone. However, the button can be configured for other functions, such as speed speed dial, push-to-talk, access second paired mobile device, or to check the battery level.

To change the BlueParrott button functionality, use the BlueParrott app for Android or iOS.



6.3 Multiple call handling

The headset can accept and handle multiple calls at the same time.

Multiple call handling



End current call and answer incoming call

Press the **Multi-function** button to end the current call. Then press the Multi-function button to answer the incoming call

Put current call on hold and answer incoming call

Quickly press the Multi-function button twice

Reject incoming call when on a call

Press and hold (2 sec) the Multi-function button

6.4 Multipoint mode

The headset can pair to 8 smartphones and connect to two at once (Multipoint mode).

To connect to two smartphones, use the normal pairing process separately for each smartphone (refer to section 5).

The M300-XT will monitor both smartphones and enable you to answer a call on either one using the headset.

If you are on a call and the other smartphone receives a call, you will hear a notification in the headset.

6.5 Update firmware

The BlueParrott M300-XT can be updated to the latest firmware version using the BlueParrott app.


6.6 Reset the headset

Resetting the headset clears the list of paired devices.

1. Ensure the headset is powered on.
2. Press and hold (10 sec) both the Volume up and Volume down buttons until you hear two beeps.
3. Power off the headset.

You will need to re-pair the headset to your smartphone.

7. BlueParrott app

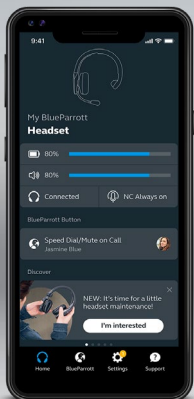

Program your BlueParrott Button™ anywhere, anytime.

Integrate with a range of third-party platforms for a seamless Push-to-Talk (PTT) experience.

Easily access full user guide for your headset.



8. Support

8.1 FAQ

View the FAQs on BlueParrott.com/supportpages/BlueParrott-M300-XT

8.2 How to care for your headset

- To prevent the depletion of the battery lifetime or capacity, avoid storing the headset in hot or cold environments, such as a closed truck in summer or in winter conditions.
- When exposed to water, allow the headset sufficient time to dry. It may take up to one hour for the headset to dry thoroughly and power on.
- Do not store the headset for extended periods of time without recharging them (max. three months).

8.3 How to clean your headset

1. Apply normal dish soap and water to a cloth, making sure to wring out any excess liquid so the cloth is not dripping wet. Use soap and water only; do not use strong cleaning agents.
2. Gently wipe the headset with the wet cloth, making sure the headset is clean with no layer of suds on the surface.
3. Let the headset rest for at least one minute.
4. Wipe the headset clean with a cloth dampened with water only.
5. Allow the product to dry.