


≡ ECOFLOW

EcoFlow Wave 2 Add-on Battery

User Manual V1.0

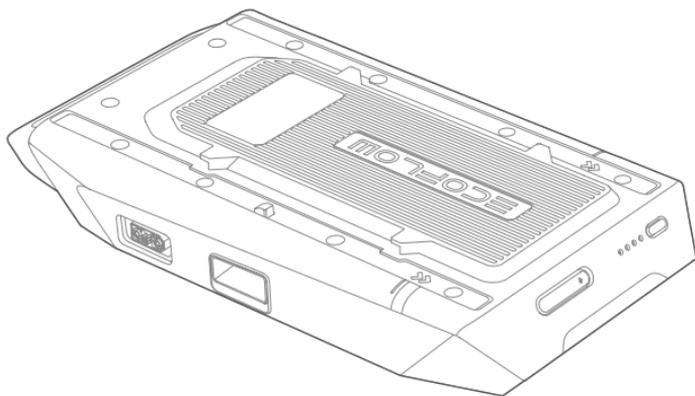

Disclaimer

Please read the product document and ensure that you understand it fully before using the product. After reading this document, keep it properly for future reference. Improper use of this product may cause serious injury to yourself or others, or cause product damage and property loss. Once you use this product, it is deemed that you understand, approve and accept all the terms and content in this document. EcoFlow is not liable for any loss caused by the user's failure to use the product in compliance with the Disclaimer and Safety Instructions.

In compliance with laws and regulations, EcoFlow reserves the right to final interpretation of this document and all documents related to the product. This document is subject to changes (updates, revisions, or termination) without prior notice. Please visit EcoFlow's official website to obtain the latest product information.

Contents

Specifications	1
Safety Instructions	2
Use	2
Disposal	3
What's in the Box	3
Product Details	4
Power On/Off	4
Charging Your Devices	5
Charging Wave 2	5
Charging Other Devices	6
Charging the Add-on Battery	7
AC Charging (Household Outlet)	7
Solar Charging	7
Car Charging	8
Battery Pack Charging	8
Indicator Light and Troubleshooting	9
Care and Maintenance	9

Specifications

Input/Output Specifications	
Model	EFKT210-EB
Capacity	1159 Wh (50.4 V \approx 23 Ah)
USB-A Output	5/9/12 V \approx 2.4/2/1.5 A, 18 W max
USB-C Output	5/9/12/15/20 V \approx 5 A, 100 W max
XT150 Input Power	857 W max
XT150 Output Power	712 W max
Battery Life	2-8 hours
Battery Specifications	
Battery Cell Material	NCM ternary lithium battery
Cycle Life	80%+ capacity after 800 cycles
IP Rating	IP65
Operating Temperature	
Optimal Operating Temperature	20°C—45°C (68°F to 113°F)
Discharging Temperature	-20°C—50°C (-4°F to 122°F)
Charge Temperature	0°C—45°C (32°F to 113°F)
Storage Temperature	Ordinary temperature optimal: 20°C—30°C (68°F—86°F)
General Information	
Net Weight	Approximately 7.8 kg (17.2 lbs)
Dimensions (L \times W \times H)	515 \times 272 \times 92 mm (20.3 \times 10.7 \times 3.6 inch)

Safety Instructions

Use

1. Do not use the product near a heat source, such as fire or a heater, and avoid direct exposure to sunlight.
2. Strictly comply with the recommended ambient temperature set in this user manual when using this product. If the temperature is too high, the battery may catch fire or explode. If the temperature is too low, the product may not work normally.
3. If the product catches fire, we recommend that you use fire extinguishers in the following order: water or water mist, sand, fire blanket, dry powder, and carbon dioxide.
4. If the product is wet inside or it falls into water by accident, immediately stop using the product, turn off the power supply, and place it in a safe open area. Stay away from the product until it is dry. Please take measures to prevent electric shock when touching it. Do not operate or discard the dry product without authorization. Please contact customer service to dispose of it properly.
5. If there is dirt in or on any outlets, clean it with a dry cloth.
6. Do not use this product in environments with strong static electricity or magnetic fields (such as thunderstorm).
7. Do not place the product where the air pressure is extremely low, as this may cause flammable liquids to leak or explode.
8. Do not pile heavy objects on the product.
9. Please store the product in a dry and ventilated space.
10. Please keep the product out of the reach of children and pets.
11. For long-term storage, please discharge and then charge the product every three months (discharge it to 0% first, and then charge it to 30%-50% for long-term storage). The product will not be covered by the warranty if it is not charged or discharged for more than 6 months.
12. Electromagnetic fields created by this product may affect the normal functioning of medical implants or personal medical devices, such as pacemakers, cochlear implants, hearing aids, defibrillators and so on. If you are using these medical devices, please consult the manufacturers about the restrictions on the use of relevant devices to ensure that a safe distance is maintained between this product and the implanted medical devices (such as pacemakers, cochlear implants, hearing aids, defibrillators and so on) during operation.
13. Do not disassemble the product in any way or pierce it with sharp objects.
14. Do not touch product outlets with wires or other metal objects. Please do not wear any metal jewelry when plugging/unplugging the power cord to avoid a short circuit.
15. During the operation or transportation of the product, please avoid external damage, like drops or impact. In case of a strong external impact, immediately stop using the product and turn off the power supply.
16. If the battery has severe swelling, please stop using it, and properly dispose of it according to the method in Article 2 of [Disposal].

Disposal

1. Whenever possible, please completely discharge the battery before placing the product in the designated battery recycling bin. Batteries are hazardous chemicals and should not be disposed of in ordinary trash cans. For details, please follow local laws and regulations on battery recycling and disposal.
2. If the battery cannot be completely discharged due to product failure, please do not dispose of the battery directly in the battery recycling bin, and contact a professional battery recycling company for further processing.
3. If the battery will not start after over discharging, please dispose of it.

What's in the Box

Wave 2 add-on battery

DC charging cable


User Manual &
Warranty Card

Charging the Add-on Battery


The add-on battery can be charged from AC outlets, portable power stations, car charging outlets, and solar panels.

Except for when charging with a portable power station, other charging methods can only be used after the add-on battery is connected to Wave 2 to avoid product damage caused by a voltage mismatch. Refer to the Wave 2 User Manual for more requirements.

AC Charging (Household Outlet)

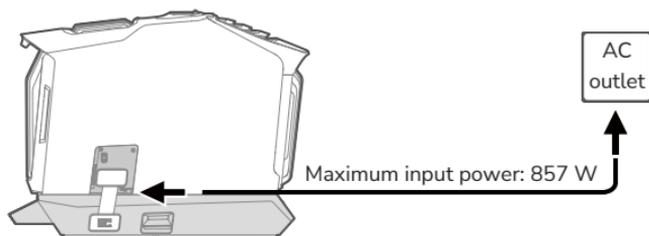


Solar Charging

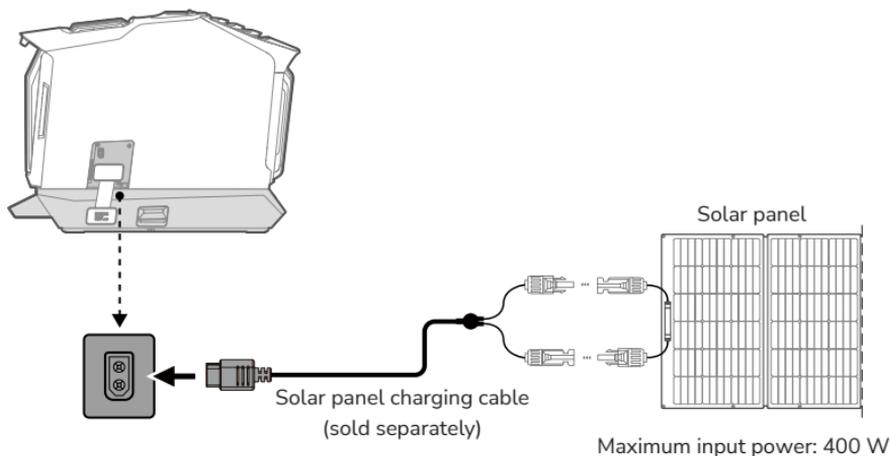


Turn off Wave 2 when charging the add-on battery for improved charging efficiency.

Car Charging

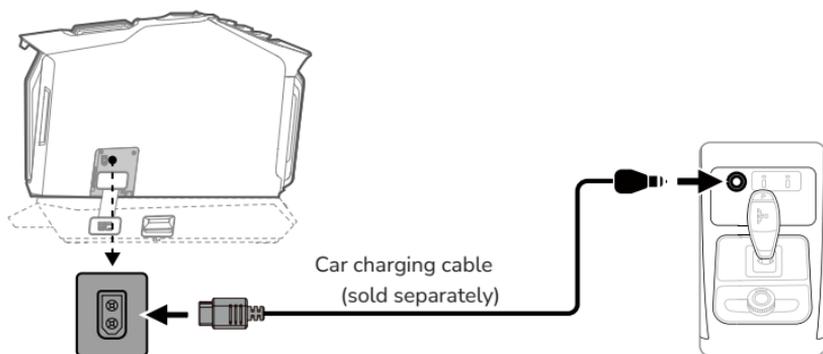

Maximum input power: 200 W

Battery Pack Charging

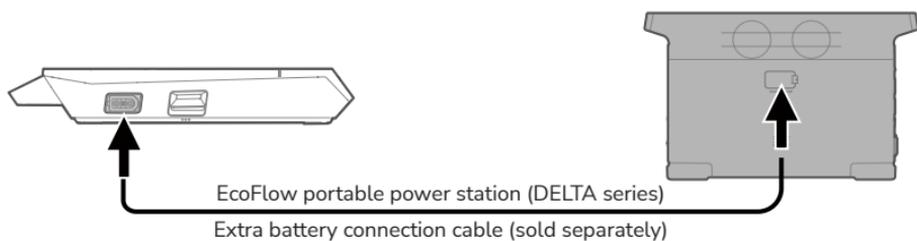

Indicator Light and Troubleshooting

○ Off

● Solid white

◉ Flashing white

◉ Flashing orange

Type	Indicator status	Indications
Power-on	◉ ◉ ◉ ◉	LEDs 1-4 turn on in order
Power-off	◉ ◉ ◉ ◉	LEDs 4-1 turn off in order
Discharging level	◉ ◉ ◉ ◉	≤5%
	● ○ ○ ○	≤25%
	● ● ○ ○	≤50%
	● ● ● ○	≤75%
	● ● ● ●	≤100%
Charging level	◉ ○ ○ ○	≤25%
	● ● ● ◉	75% - 99%
	● ● ● ●	100%
Firmware update	○ ◉ ◉ ○	LEDs 2-3 flash alternately
USB fault	◉ ◉ ○ ○	Contact customer service for help.
The temperature is too high	◉ ○ ◉ ○	Restart after the unit temperature drops.
The temperature is too low	◉ ○ ○ ◉	Restart after the unit temperature rises.
Permanent fault	◉ ◉ ◉ ◉	Contact customer service for help.

Care and Maintenance

1. Use or store this product within an ambient temperature range of 20°C-45°C (68°F-113°F), and keep away from water sources, heat sources, and metal objects.
2. For long-term storage, please recharge the product every three months (discharge it to 0% first, and then charge it to 30-50% for long-term storage). If the battery has been idle for a long time with low power, it will cause irreversible damage to the battery cells. The product will not be covered by the warranty if it is not charged or discharged for more than 6 months.
3. For safety, please do not store the product in ambient temperatures higher than 45°C (68°F) or lower than -10°C (14°F) for a long time.
4. If the product has been idle for too long and the power level is 0%, it will enter a deep sleep protection mode. Charge the product before using it again.

≡COFLOW