

TX-E721 Fresnel Lens Pet Immune PIR

Description

This is the Installation Sheet for the TX-E721 Fresnel Lens Pet Immune PIR. This product is intended for use and designed for compatibility with [Interlogix and Qolsys control panels that receive 319.5 MHz RF protocol.](#)

A motion sensor (passive infrared or PIR) detects movement within a specific area by sensing the infrared energy emitted from a body as it moves across the sensor's field of view. When this motion is detected, the sensor transmits an alarm signal to the control panel.

Figure 1: Pet Immune SAW PIR Motion Sensors



Use these motion sensors to protect locations where door/window sensors are impractical or not needed. For example, use a motion sensor to protect large areas or open floor plans. Motion sensors also provide backup protection for door/window sensors.

The Pet Immune TX-E721 utilizes advanced signal processing, a new custom designed lens, and a new custom designed sensing element. The combination of these improvements provides false alarm immunity for pets with a combined weight of up to 40 pounds while still providing superior human catch performance.

These wireless motion sensors include the following features:


- 35 by 40 ft. (10.6 m by 12 m) coverage area.
- Three-minute transmitter lockout time after an alarm that helps extend battery life.
- Cover-activated tamper
- Supervisory signals transmitted every 64 minutes to the control panel.
- Sensor low battery reports (trouble) to the control panel.
- Field-selectable sensitivity options.

Installation

Installation Guidelines


- Temporarily place the sensor in its intended mounting location. Program and final test the sensor before permanently mounting it.
- If possible, locate sensors within 100 ft. (30.5 m) of the panel. While a transmitter may have a range of 500 ft. (152 m) or more out in the open, the environment at the installation site can have a significant effect on transmitter range. Sometimes a change in sensor location can help overcome adverse wireless conditions.
- The recommended mounting height is 7 1/2 ft.
- Position the sensor to protect an area where an intruder would be most likely to walk across the detection pattern See Figure 2.

Figure 2: Overhead Detection Path

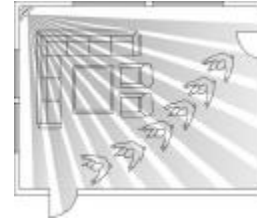

- Mount the motion sensor on a rigid surface which is free from vibrations.
- Do not mount the sensor near duct work or other large metallic surfaces which may affect the RF signals (see RF Testing). Actual acceptable transmitter range should be verified for each installation.
- Mount the sensor permanently on a flat wall or in a corner. Do not set it on a shelf.
- Windows should be closed in any area which has an armed motion sensor.
- The sensor must be incline-mounted at a mounting height of 7.5 ft. See Figure 3.

Figure 3: Wall Mount Options

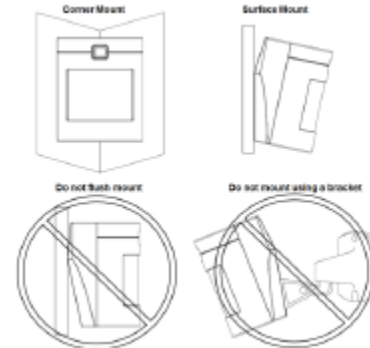

- Room temperature must be kept between 60° and 120°F (16° and 49° C).
- Position the sensor so it faces a solid reference point, like a wall.

Programming

Refer to the panel documentation for information on programming the sensor into the panel.

To Trip the Sensor

1. Set the panel to program mode.
2. Proceed to the Learn Sensors menu.

3. Remove the PIR from its mounting plate (activating the tamper switch).
4. Select the appropriate sensor group and number.
5. Exit the panel's programming mode.
6. Return the PIR to its mounting plate.

Final Testing

Final testing should be done to verify radio signal integrity and confirm control panel programming and response. The actual transmitter range can be determined by performing a sensor test as follows:

1. With the PIR temporarily mounted at its intended location, remove the PIR from its mounting plate and activate the tamper switch to start the walk test mode.
2. Replace the sensor in its mounting plate.
3. Place the control panel in Sensor test mode. Move across the detection pattern until the sensor's LED turns on. STOP your motion.
4. Listen for the appropriate system response. Refer to the specific panel installation manual for details on system response. If the system does not respond as expected, proceed to the "Troubleshooting" section.

Mounting

The sensors must be incline-mounted on a wall surface or incline-mounted in a corner at a mounting height of 7.5 ft. (2.5 m).

To Mount the Sensor

1. Remove the mounting plate by depressing the button on the top of the sensor body. With the opposite hand pull the mounting plate away from the body of the sensor.
2. Punch out the mounting holes that best fit your application. See Figure 3 for wall mount options.
3. See Figure 4 to determine which knockouts to use when mounting the motion sensor. Use the outside 4 holes for corner mounting, or the inside 4 holes for surface mounting.

Figure 4: PIR Mounting Plate Knockouts



4. Mark the location of the required holes on the mounting surface.
5. Use wall anchors and screws to secure into place. Attach the sensor to the mounting plate.
6. When testing is completed the PIR can be securely attached to its mounting plate by screwing the smallest enclosed screw into the hole at the top of the mounting plate.

Setting the Sensitivity

The PIR has two sensitivity settings (standard and high sensitivity). The sensor is set to standard sensitivity at the factory. This sensitivity is preferred for most applications and provides the best immunity to false alarms.

Note: If the shorting jumper is not used or is placed incorrectly, the sensor defaults to standard sensitivity.

Figure 5: Sensitivity Pin Locations



CAUTION: High sensitivity should only be used in environments where the room temperature is very stable.

ATTENTION: La haute sensibilité ne doit être utilisée que dans des environnements où la température ambiante est très stable

1. Remove the mounting plate by depressing the button on the top of the sensor body. With the opposite hand pull the mounting plate away from the body of the sensor.
2. Locate the sensitivity pins directly above the battery when looking at the back of the PIR
3. To change to high sensitivity, move the shorting jumper to the pair of pins that are closer to the left side of the PIR
4. Walk test the PIR to verify the sensitivity.

The difference between the two settings are indicated in Figures 6 and 7 below.

Figure 6: Standard Sensitivity Setting


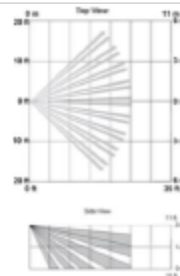


Figure 7: High Sensitivity Setting

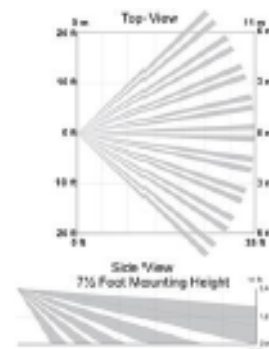

Important information Regarding Sensitivity Settings

The sensitivity settings should be set as followed:

Standard Sense:

- Rooms < 25ft
- Pets < 40 pounds

High Sense:

- Rooms < 35ft
- Pets < 20 pounds

Testing

Walk Testing

Walk testing should be done to determine the sensor's actual coverage area. The edge of the coverage pattern is determined by the first flash of the LED. This may change slightly depending upon the sensitivity setting. Walk test the unit from both directions to determine the pattern boundaries.

CAUTION: Excessive use of the walk test mode may reduce battery life. Use only for initial setup and maintenance testing.

ATTENTION : L'utilisation excessive du mode test de marche peut réduire la durée de vie de la batterie. Utiliser uniquement pour la configuration initiale et les tests de maintenance.

1. Remove the sensor body from the mounted mounting plate and then remount the body to activate the 60 second walk test mode.
2. Walk across the coverage pattern to determine the coverage area, indicated by LED activation. Each activation extends the walk test mode for an additional 60 seconds.

After 60 seconds without motion the walk test mode and the LED will no longer activate when motion is detected.

Note: When the walk test mode has ended, an alarm can be transmitted only after 3 minutes have passed since the previous alarm. This 3 minute lockout time reduces unnecessary RF transmissions in high traffic areas thereby extending battery life.

Environment Testing

Turn on all heating or air conditioning sources which would normally be active during the protection period. Stand away from the sensor and outside the coverage pattern and watch for alarms. When testing the Pet Immune PIR also verify the pets allowed in the coverage pattern do not trip the PIR.

Maintenance

At least once a year, the range and coverage should be verified for proper operation. The end user should be instructed to put the sensor in walk test mode and walk through the far end of the coverage pattern to verify proper detection.

Replacing the Battery

When the system indicates the sensor has a low battery, replace the battery immediately.


1. Remove the mounting plate by depressing the button on the top of the sensor body. With the opposite hand pull the mounting plate away from the body of the sensor. See Figure 8.
2. Remove the old battery and replace with new battery (CR123A)

Note: Observe polarity when replacing the battery. The battery should be inserted with the negative end closest to the left side of the PIR when viewing it from the back. The positive end of the battery should be closest to the right side. See Figure 8.

If a battery is installed incorrectly the unit will not function and the red LED will not light up. The sensor may be damaged if a battery is installed incorrectly.

3. Dispose of the battery as required by local requirements
4. Walk test the PIR to verify proper operation.
Note: When the battery is replaced, wait at least three minutes after installing the battery before activating the walk test mode.

Figure 8: PIR Components, Battery Locations & Tamper Switch

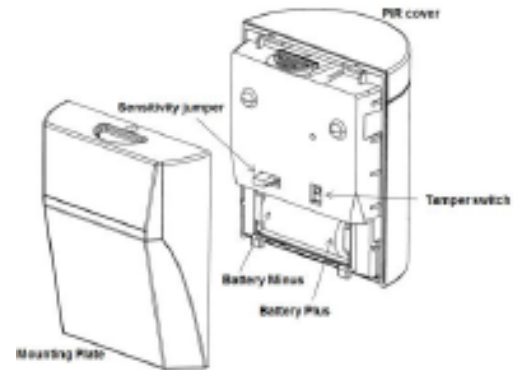

Troubleshooting

Use the following guidelines if the system does not respond correctly when the sensor final testing is conducted.

- Check programming and re-program sensor into panel if necessary.
- Move the sensor to another location and test for correct response.
- Check the mounting height and angle are according to "Mounting" section.

To Relocate a Sensor

1. Test the sensor a few inches from the original position.
2. Increase the distance from the original position and retest until an acceptable location is found.
3. Mount the sensor in the new location.
4. If no location is acceptable, test the sensor as described below:
 - Test a known good sensor at the same location.
 - If the system does not respond, avoid mounting a sensor at that location.
 - If the replacement sensor functions, return the problem sensor for repair or replacement.

Specifications

TX-E721

RF Frequency	319.5 MHz
Compatibility	Interlogix 319.5 MHz control panels/receivers
Battery Type	CR123A
Typical Battery Life	Up to 5 years at 68° F (20° C)
Operating Temperature Range	32° to 110°F (0° to 43°C) Non-pet applications 60° to 110°F (16° to 43°C) Pet applications
Supervisory Interval	64 Minutes
Relative Humidity	0 – 90% non-condensing
Storage Temperature Range	-30 to 140°F (-34 to 60°C)

Dimensions (L x W x H) 2.5 in x 2.1 in x 3.0 in

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Ecolink could void the user's authority to operate the equipment.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme avec Industrie Canada exempts de licence standard RSS (s). Son fonctionnement est soumis aux deux conditions suivantes: (1) cet appareil ne doit pas provoquer d'interférences et (2) cet appareil doit accepter toute interférence, y compris celles pouvant causer un mauvais fonctionnement de l'appareil.

In accordance with FCC requirements of human exposure to radiofrequency fields, the radiating element shall be installed such that a minimum separation distance of 20 cm is maintained from the general population.

Conformément aux exigences d'Industrie Canada en matière d'exposition humaine aux champs de radiofréquences, l'élément rayonnant doit être installé de telle sorte qu'une distance minimale de 20 cm soit maintenue par rapport à la population générale.

FCC ID :XQC-TXE721 IC: 9863B-TXE721

This Class B digital apparatus complies with Canadian ICES-3B.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Contact information

[For sales support, visit www.discoverecolink.com](http://www.discoverecolink.com) or email sales@discoverecolink.com. To provide feedback or to speak to Ecolink customer care directly, email sales@discoverecolink.com or call 855-632-6546 option 3 then option 1 for sales. For a technical support representative call 855-632-6546 Option 2 for security product support. Option 1 for ZWAVE or Zigbee product support. Hours of operation are Monday – Friday 8a to 8p eastern standard time.

Limitation of Liability

IN NO EVENT SHALL ECOLINK OR ANY OF ITS AFFILIATES BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, CONSEQUENTIAL, OR MULTIPLE DAMAGES, INCLUDING BUT NOT LIMITED TO, LOST PROFITS, LOSS OR DAMAGE TO SOFTWARE OR DATA, OR DAMAGE TO EQUIPMENT ARISING OUT OF THE USE OF ANY PRODUCT, EVEN IF ECOLINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. FURTHER, IN NO EVENT SHALL THE LIABILITY OF ECOLINK OR ITS AFFILIATES EXCEED THE INDIVIDUAL PRICE OF THE PRODUCT ON WHICH LIABILITY IS ASSERTED.

Warranty Disclaimers

OTHER THAN THE LIMITED WARRANTY BELOW, ECOLINK HEREBY DISCLAIMS ALL OTHER WARRANTIES AND REPRESENTATIONS, WHETHER EXPRESS, IMPLIED, STATUTORY OR OTHERWISE INCLUDING (BUT NOT LIMITED TO) ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO ITS SECURITY PRODUCTS AND RELATED SOFTWARE, INCLUDING THE FIREFIGHTER AUDIO DETECTOR. ECOLINK FURTHER DISCLAIMS ANY OTHER IMPLIED WARRANTY UNDER THE UNIFORM COMPUTER INFORMATION TRANSACTIONS ACT OR SIMILAR LAW AS ENACTED BY ANY STATE. (USA ONLY) SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS THAT VARY FROM STATE TO STATE. ECOLINK MAKES NO REPRESENTATION, WARRANTY, COVENANT OR PROMISE THAT ITS SECURITY PRODUCTS AND/OR RELATED SOFTWARE, INCLUDING THE FIREFIGHTER AUDIO DETECTOR, (I) WILL NOT BE HACKED, COMPROMISED AND/OR CIRCUMVENTED; (II) WILL PREVENT, OR PROVIDE ADEQUATE WARNING OR PROTECTION FROM, BREAK-INS, BURGLARY, ROBBERY, FIRE; OR (III) WILL WORK PROPERLY IN ALL ENVIRONMENTS AND APPLICATIONS.

Disclaimer

THE INFORMATION IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE. ECOLINK ASSUMES NO RESPONSIBILITY FOR INACCURACIES OR OMISSIONS AND SPECIFICALLY DISCLAIMS ANY LIABILITIES, LOSSES, OR RISKS, PERSONAL OR OTHERWISE, INCURRED AS A CONSEQUENCE, DIRECTLY OR INDIRECTLY, OF THE USE OR APPLICATION OF ANY OF THE CONTENTS OF THIS DOCUMENT. FOR THE LATEST DOCUMENTATION, CONTACT YOUR LOCAL SUPPLIER OR VISIT US ONLINE AT WWW.DISCOVERECOLINK.COM. THIS PUBLICATION MAY CONTAIN EXAMPLES OF SCREEN CAPTURES AND REPORTS USED IN DAILY OPERATIONS. EXAMPLES MAY INCLUDE FICTITIOUS NAMES OF INDIVIDUALS AND COMPANIES. ANY SIMILARITY TO NAMES AND ADDRESSES OF ACTUAL BUSINESSES OR PERSONS IS ENTIRELY COINCIDENTAL.

ADDITIONAL DISCLAIMER INFORMATION

THE FIREFIGHTER AUDIO DETECTOR DOES NOT DETECT THE PRESENCE OF SMOKE, HEAT, OR FIRE DIRECTLY. IT RELIES SOLELY ON THE PRESENCE OF AN AUDIO ALARM SIGNAL GENERATED BY AN EXISTING SMOKE OR FIRE DETECTOR IN PROXIMITY TO THE FIREFIGHTER AUDIO DETECTOR TO MAKE SUCH A DETERMINATION. THE FIREFIGHTER AUDIO DETECTOR MUST BE USED WITH SMOKE DETECTORS CERTIFIED ACCORDING TO UL STANDARDS, AND IN STRICT ACCORDANCE WITH THE INSTALLATION AND OPERATION INSTRUCTIONS PROVIDED WITH SUCH DETECTORS. IT IS THE OWNER'S RESPONSIBILITY TO ENSURE THAT SMOKE OR FIRE DETECTORS USED IN CONJUNCTION WITH THE FIREFIGHTER AUDIO DETECTOR ARE MAINTAINED AND TESTED ON A REGULAR BASIS IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS. ECOLINK EXPRESSLY DISCLAIMS ANY RESPONSIBILITY FOR THE FAILURE OF THE FIREFIGHTER AUDIO DETECTOR TO DETECT THE PRESENCE OF SMOKE OR FIRE DUE TO THE FAILURE OF ANY SMOKE OR FIRE DETECTOR USED IN CONJUNCTION WITH THE FIREFIGHTER AUDIO DETECTOR TO OPERATE PROPERLY DUE TO ANY CONDITION, INCLUDING IMPROPER INSTALLATION, OPERATION, MAINTENANCE OR TESTING OF SUCH SMOKE OR FIRE DETECTOR.

Intended Use

USE THIS PRODUCT ONLY FOR THE PURPOSE IT WAS DESIGNED FOR; REFER TO THE DATA SHEET AND USER DOCUMENTATION. FOR THE LATEST PRODUCT INFORMATION, CONTACT YOUR LOCAL SUPPLIER OR VISIT US ONLINE AT WWW.DISCOVERECOLINK.COM. THE SYSTEM SHOULD BE CHECKED BY A QUALIFIED TECHNICIAN AT LEAST EVERY 3 YEARS AND THE BACKUP BATTERY REPLACED AS REQUIRED.

Limited Warranty

This limited warranty is provided by Ecolink Intelligent Technology ("Ecolink") to you as the original purchaser of the product. Ecolink warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. The determination of whether the product is defective shall be made by Ecolink in its sole discretion with consideration given to the overall performance of the product. If Ecolink determines that any product is defective, Ecolink's sole obligation and your sole and exclusive remedy shall be that Ecolink will replace the

product.

This warranty does not apply to damage caused by shipping or handling, or damage caused by accident, abuse, misuse, misapplication, ordinary wear, improper maintenance, failure to follow instructions or as a result of any unauthorized modifications. The foregoing limited warranty is and shall be in lieu of any and all other warranties, whether expressed or implied and of all other obligations or liabilities on the part of Ecolink. Ecolink neither assumes responsibility for, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning this product. It is recommended that the customer check their equipment on a regular basis for proper operation.

Return Policy

Please visit us at www.discoverecolink.com/return to view our return policy.