FireNET

FNP-1127-SLC Loop Expander Board

Installation and Operation Manual





Hochiki America Corporation 7051 Village Drive, Suite 100 Buena Park, CA 90621-2268 714.522.2246 Corporate Headquarters 800.845.6692 Technical Support http://www.hochiki.com

Version 1.0 Created: 03/19/09 Updated: 12/10/09

PN# 1700-10980

Table of Contents

2	
3	
3	
6	
7	
7	
7	

Section 1 – Introduction

The FNP-1127-SLC is a loop expander board that provides a second SLC loop for the FireNET Plus control panel. The FNP-1127-SLC is listed as compatible for use with the FireNET Plus analog fire alarm control panel.

1.1 Limitations of Fire Alarm Systems

Follow Recommended Installation Guidelines: To achieve early fire detection, fire detection sensors should be installed in all rooms and areas of a house, apartment, or building in accordance with the recommendations of the National Fire Protection Association Standard 72 (NFPA 72), manufacturer's recommendations, state and local codes, and the recommendations contained in <u>Guide for the Proper Use of System Smoke Detectors</u>, which is made available at no charge to all installing dealers. Generally, the standards and recommendations include the following (but installers should refer to the specific guidelines above before installing):

- <u>Sleeping Rooms:</u> Smoke detectors should be installed in every sleeping room.
- <u>Hallways:</u> More than one smoke detector should be installed in a hallway if it is more than 30 feet long.
- <u>At least Two Smoke Detectors:</u> There should never be less than two smoke detectors per apartment or residence.
- <u>Smoke Detectors in Alarm, Electrical, or Phone Locations:</u> Smoke detectors should be located in any room where an alarm control is located or an alarm control connects to an electrical source or phone line. If detectors are not so located, a fire within the room could prevent the alarm control from reporting a fire.
- <u>Notification Systems:</u> All fire alarm systems require notification devices, including sirens, bells, horns, and/or strobes. In residential applications, each automatic alarm initiating device when activated should cause the operation of alarm notification device that should be clearly audible in all bedrooms over ambient or background noise levels (at least 15dB above noise) with all intervening doors closed.
- Alarm in Every Bedroom and Level of Residence: A smoke detector with an integral sounder (smoke alarm) should be located in every bedroom and an additional notification device should be located on each level of a residence.
- <u>Maintenance:</u> A maintenance agreement should be arranged through the local manufacturer's representative and maintenance should be performed annually by authorized personnel only. To keep a fire alarm system in excellent working order, ongoing maintenance is required per the manufacturer's recommendations and UL and NFPA standards. At a minimum the requirements of Chapter 7 of NFPA 72 (1999) shall be followed.
- <u>Test Weekly:</u> The alarm system should be tested weekly to make sure all sensors and transmitters are working properly. The most common cause of an alarm system not functioning when a fire occurs is inadequate maintenance.

<u>Alarms Cannot Guarantee Warning or Protection:</u> Fire alarm system cannot guarantee warning or protection against fire in every potential situation. A study by the Federal Emergency Management Agency (an agency of the United States government) indicated that <u>smoke detectors may not go off</u> or give early warning in as many as 35% of all fires.

<u>Limitation on Fire Alarm Effectiveness:</u> A fire alarm system may not provide timely or adequate warning, or simply may not function, for a variety of reasons. For example:

- No Detection: Particles of combustion or smoke from a developing fire may not reach the sensing chambers of smoke detectors because:
 - 1. **Barriers** (such as closed or partially closed doors, walls, or chimneys) may inhibit particle or smoke flow.
 - 2. Smoke particles may become *cold*, *stratify*, *or not reach* the ceiling or upper walls where detectors are located.
 - 3. Smoke particles may be **blown away** from detectors by air outlets.
 - 4. Smoke particles may be *drawn into air returns* before reaching the detector.
- <u>No Multi-Floor Detection:</u> In general, smoke detectors on one level of a structure cannot be expected to sense fires developing on another level.
- <u>Insufficient Smoke:</u> The amount of smoke present may be insufficient to alarm smoke detectors. Smoke detectors are designed to alarm, at various levels of smoke density. If such density levels are not created by a developing fire at the location of the detector, the detector will not go into alarm.
- Smoldering vs. Flaming Fires: Smoke detectors, even when working properly, have sensing limitations. Detectors that have photoelectric sensing chambers tend to detect smoldering fires better than flaming fires, which have little visible smoke. Detectors that have ionizing-type sensing chambers tend to detect fast flaming fires better than smoldering fires. Because fires develop in different ways and are often unpredictable in their growth, neither type of detector is necessarily best and a given type of detector may not provide adequate warning of a fire.
- <u>False Alarms and Pre-Fire Disconnection:</u> Smoke detectors are subject to false alarms and nuisance alarms and may have been disconnected by users. For example, a smoke detector located in or near a kitchen may go into nuisance alarm during normal operation of kitchen appliances. In addition, dusty or steamy environments may cause a smoke detector to falsely alarm. If the location of a smoke detector causes an abundance of false alarms or nuisance alarms do not disconnect the smoke detector, call a professional to analyze the situation and recommend a solution.
- <u>Fast Fires and Explosions:</u> Smoke detectors cannot be expected to provide adequate warning of fires caused by arson and children playing with matches (especially within bedrooms), smoking in bed, violent explosions (caused by escaping gas, improper storage of flammable materials, etc.).
- <u>Heat Detectors:</u> Heat detectors do not sense particles of combustion and are designed to alarm only when heat on their sensors increases at a predetermined rate or reaches a predetermined level. Heat detectors are designed to protect property, not life.
- Unheeded Warning: Warning devices (including horns, sirens, and bells) may not alert people or wake up sleepers who are located on the other side of closed or partially open doors. A warning device that activates on a different floor or level of a dwelling or structure is less likely to awaken or alert people. Even persons who are aware may not notice the warning if the alarm is muffled by noise from a stereo, radio, air conditioner or other appliance, or by passing traffic. Audible warning devices may not alert the hearing impaired (strobes or other devices should be provided to warn these people). Any warning device may fail to alert people with a disability, deep sleepers, people who have recently used alcohol or drugs, or people on medication or sleeping pills.
 - <u>Strobes:</u> Strobes can under certain circumstances, cause seizures in people with conditions such as epilepsy.
 - <u>Drills:</u> Studies have shown that certain people, even when they hear a fire
 alarm signal, do not respond or comprehend the meaning of the signal. It is the
 property owner's responsibility to conduct fire drills and other training exercises
 to make people aware of fire alarm signals and instruct on the proper reaction
 to alarm signals.
 - <u>Hearing Loss:</u> In rare instances, the sounding of a warning device can cause temporary or permanent hearing loss.

- <u>Telephone Transmissions Problems:</u> Telephone lines needed to transmit alarm signals from a premises to a central station may be out of service or temporarily out of service. For added protection against telephone line failure, backup radio transmission systems are recommended.
- System Failure With Age or Lack of Maintenance: System components, though designed to last many years, can fail at any time. As a precautionary measure, it is recommended that smoke detectors be checked, maintained, and replaced per manufacturer's recommendations.
- <u>Electrical Power Problems:</u> System components will not work without electrical power. If system batteries are not serviced or replaced regularly, they may not provide battery backup when AC power fails.
- <u>High Air Velocity or Dusty or Dirty Environments</u>: Environments with high air velocity or that are dusty or dirty require more frequent maintenance.

<u>Importance of Maintenance:</u> In general, fire alarm systems and devices will not work without power and <u>will not function property unless they are maintained and tested regularly</u>.

<u>Alarm is Not Substitute for Insurance:</u> While installing a fire alarm system may make the owner eligible for a lower insurance rate, <u>an alarm system is not a substitute for insurance</u>. Property owners should continue to act prudently in protecting the premises and the people in their premises and should properly insure life and property and buy sufficient amounts of liability insurance to meet their needs.

Section 2 – General Wiring Specifications

Care should be taken when wiring the system to avoid situations that would contribute to inducing electrical noise from one wire to another. Induced noise can interfere with telephone communications or cause erratic system operation. Follow these general guidelines to plan your system wiring prior to installation.

- Route high and low voltage wiring separately. Maintain a minimum 2" separation between high and low voltage wiring throughout the building.
- Route control panel wiring around the perimeter of the control panel enclosure. A minimum .25" separation is required between high and low voltage wiring.
- Identify which group each wire or cable is associated with from the list below. Isolate each
 group's wiring as much as possible. Avoid running a single multi-conductor cable for multiple
 groups of conductors.
 - AC Power Main Power Supply
 - Notification Appliances
 - SLC Circuits
 - Relay Outputs
 - Voltage Outputs
 - Remote Control and Auxiliary Inputs
 - Network Wiring (Shielded wire required)
 - RS485 Bus Wiring (Shielded wire required)
- Keep wiring from different groups separated as much as possible. If you must share the same conduit with different conductor groups consider using shielded cable.
- If shielded cable is used terminate the shield to the earth ground terminal block in the main control panel and leave open at field side of cable. Do not ground at both ends of cable.

Section 3 – Installing the FNP-1127-SLC

3.1 Overview of the FNP-1127-SLC

The FireNET Plus control panel is provided with one SLC Loop. An additional SLC Loop may be added through the use of a FNP-1127-SLC loop expander board.


The main control unit has terminations for connecting the first SLC loop. The connections for the second loop are located on the FNP-1127-SLC expander board.

3.1.1 Installation of the FNP-1127-SLC

- 1. To install the additional SLC Loop, the control panel must have its AC and battery power removed. Do not attempt to install the SLC expander board while the FireNET Plus panel is powered!
- 2. Remove the screw on the front display panel and open the panel to the left, exposing the back of the circuit board.
- 3. The circuit board containing the additional loop circuit is supplied in a static dissipative bag and should remain in this bag until it is to be installed.

NOTE: As with all electronic components, this circuit board is very sensitive and can be easily damaged by electrostatic discharge.

4. The loop board mounts on the upper left hand side of the rear of the circuit board. Install the mounting standoffs to the main board then attach the expander board using the M3 screws and fiber washers.

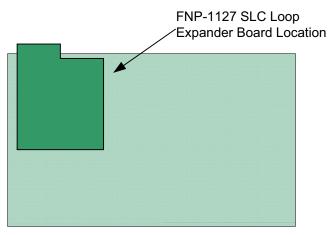

- 5. After ensuring that the new circuit board is properly installed and making good contact with its connectors close the front display panel and secure with the screw.
- 6. Connect the SLC loop wiring and then re-apply power to the control panel. Note that class B SLC circuits require the installation of the supplied 0 ohm jumpers (HA part # 0400-01025)

After the new SLC devices have been installed and connected, they may be automatically detected using the auto learn feature from the menu on the control panel.

Please see the FireNET Plus Installation and Operation manual for more details on panel configuration and programming (HA part # 1700-10840)

WARRANTY

Hochiki America Corporation manufactured equipment is guaranteed to be free from defects in materials and workmanship for a period of one (1) year from date of original shipment. HOCHIKI will repair or replace, at its option, any equipment which it determines to contain defective material or workmanship. Said equipment must be shipped to HOCHIKI prepaid. Return equipment will be prepaid by HOCHIKI. We shall not be responsible to repair or replace equipment which has been repaired by others, abused, improperly installed, altered or otherwise misused or damaged or exposed to conditions outside the products specifications in any way. Unless previously contracted by HOCHIKI, HOCHIKI will assume no responsibility for determining the defective or operative status at the point of installation, and will accept no liability beyond the repair or replacement of the product at our factory service department. Please contact HOCHIKI's Sales department for proper procedure for claims and return of merchandise.

Hochiki America Corporation 7051 Village Drive, Suite 100 Buena Park, CA 90621-2268 1-800-845-6692 technicalsupport@hochiki.com

End of Manual

December 2009