

MEITRACK T355 User Guide



Change History


File Name	MEITRACK T355 User Guide	Created By	Kyle Lv
Project	T355	Creation Date	2011-05-16
		Update Date	2015-05-28
Subproject	User Guide	Total Pages	13
Version	V1.1	Confidential	External Documentation

Contents

1 Copyright and Disclaimer	- 4 -
2 Product Overview	- 4 -
3 Product Function and Specifications	- 4 -
3.1 Product Function	- 4 -
3.2 Specifications	- 4 -
4 T355 and Accessories	- 5 -
5 Panel	- 6 -
5.1 Appearance	- 6 -
5.2 LED Indicator	- 7 -
6 First Use	- 7 -
7 Quick Operation Command	- 8 -
7.1 Real-time Location Tracking	- 8 -
7.2 Smart Sleep – A73	- 10 -
8 Configured on a Computer	- 11 -
9 GPS Tracking System	- 11 -
10 Installing the T355	- 12 -
11 Safety and Usage Instructions	- 13 -

1 Copyright and Disclaimer

Copyright © 2015 MEITRACK. All rights reserved.

 and  are trademarks that belong to Meitrack Group.

The user manual may be changed without notice.

Without prior written consent of Meitrack Group, this user manual, or any part thereof, may not be reproduced for any purpose whatsoever, or transmitted in any form, either electronically or mechanically, including photocopying and recording.

Meitrack Group shall not be liable for direct, indirect, special, incidental, or consequential damages (including but not limited to economic losses, personal injuries, and loss of assets and property) caused by the use, inability, or illegality to use the product or documentation.

2 Product Overview

The T355 is a magnetic GPS tracker developed by Meitrack Group and newly released in 2015. It is mainly used to track goods, valuables, equipment, and other assets.

Two internal magnets make the tracker attached to the vehicle body and free of installation. If the tracker drops, a drop alarm will be generated.

The unique rugged design of the shell ensures that the tracker is water resistant, dustproof, shockproof, and durable. The standby time can last more than 365 days.

3 Product Function and Specifications

3.1 Product Function

- GPS + GSM dual-module tracking
- Power magnet, easy to install
- Drop alarm
- Long standby time
- IP66 water resistant
- Embedded vibration sensor
- Tracking on demand, and by time interval and distance
- Enter/Exit Geo-fence alarm
- Get a location by call
- Rugged design/shockproof
- Direction change report
- Speeding alarm
- External GPS antenna disconnect alarm
- Heartbeat report

3.2 Specifications

Item	Parameter	Specifications
Outer case	Dimension	105 mm x 75 mm x 45 mm
	Material	ABS



	Water resistance	IP66
Power consumption	Working voltage	3.7 V
	Average current	50 mA
	Standby current	0.7 mA
	Internal battery	7400 mAh/3.7 V
	Working hour	Consecutive working hours: > 120 hours Standby time: > 8760 hours
GSM	Frequency band	850/900/1800/1900 MHz
	Network	GSM/GPRS
	Antenna	Internal antenna
GPS	Speed	0.1 m/s
	Tracking sensitivity	-162 dBm
	Positioning time	Cold start < 42s, hot start < 3s, recapture time < 2s
	Positioning accuracy	10m, 2D RMS
	Satellite receiving channel	56 channels
	Antenna	Internal/External antenna
Ambient environment	Operating temperature	-15°C to 65°C
	Storage temperature	-25°C to 70°C
	Humidity	5%–95% non-condensing
Weight	322g	
Sensor	Internal acceleration sensor (used to determine movement, vibration and non-movement.)	
Memory	8 MB flash (8,192 GPRS caches and 100 SMS caches)	
LED indicator	LED indicators showing Power, GPS, and GSM status	

4 T355 and Accessories

Standard Accessories	T355	Travel adapter	Mini USB cable
	CD	Switch sticker	
Optional Accessories	External GPS antenna		

5 Panel

5.1 Appearance

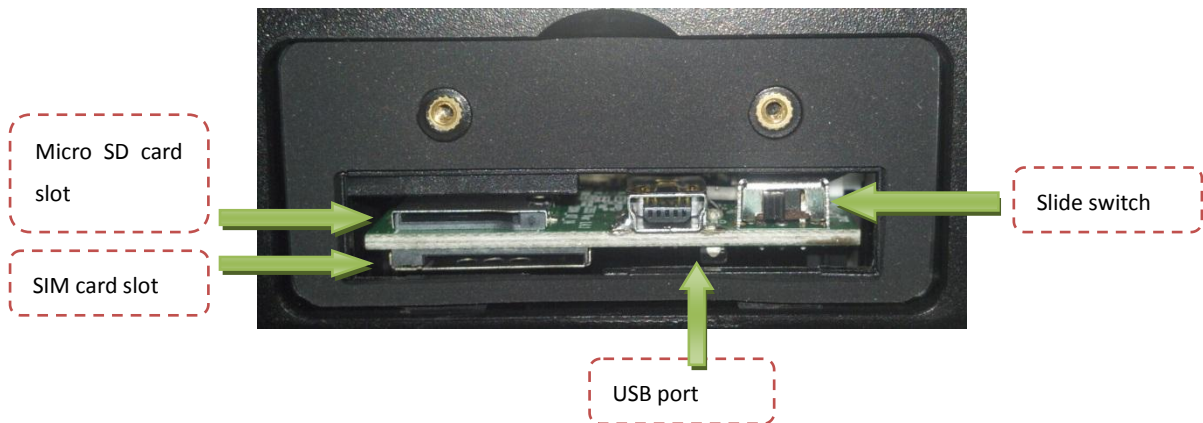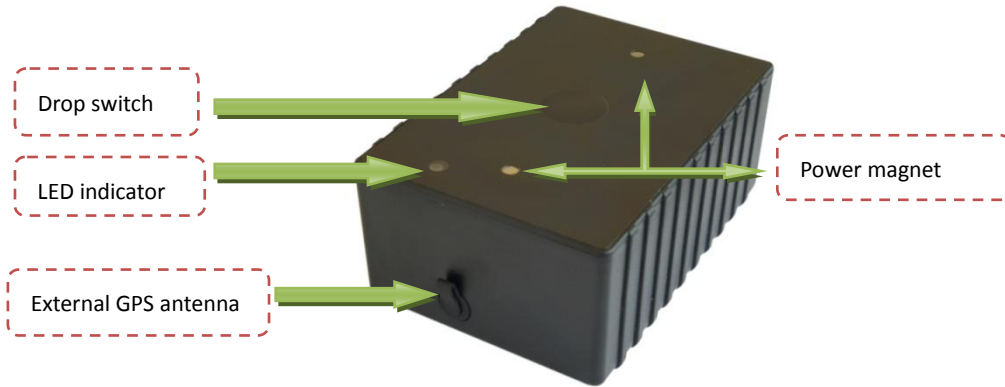

5.2 LED Indicator

Blue Indicator Status	Blue Indicator Description	Blue Indicator Diagram (Unit: second)
Steady on (Consecutive)	The device is charging	
1s on and 1s off (2 cycles within 4s)	The GPS is invalid or the device is being initialized	
0.2s on and 3.8 off (1 cycle within 4s)	The GPS is valid	
0.2s on and 0.2s off (10 cycles within 4s , then indicator is steady on)	The battery power is low	
0.2s on and 0.2s off (2 cycles within 1s)	The device starts (Press the drop switch 3 times within 5s)	
Steady off (Consecutive)	The device enters sleep mode	
Green Indicator Status	Green Indicator Description	Green Indicator Diagram (Unit: second)
Steady on (Consecutive)	The battery power is full	
1s on and 1s off (2 cycles within 4s)	The GSM fails to be registered or is being registering	
2 times on within 1s, and then 1s off (2 cycles within 4s)	The GPRS fails to be connected or is being connecting	
Steady off (Within 4s)	The GPRS connection is complete	
1 time within 4s	The phone is busy	
0.2s on and 0.2s off (2 cycles within 1s)	The device stops (Press the drop switch 3 times within 5s)	

The blue and green LED indicators will alternately blink every 8 seconds.

6 First Use



1. Remove the device cover.


Use the mini screwdriver to remove the two screws to release the cover.

2. Insert the SIM card.

Gently push the SIM card into the slot until you hear a click with the gold-colored side facing up.

Note: Ensure that the SIM PIN lock is closed, and the SIM card has sufficient balance and has subscribed the call ID service. If you want to use the GPRS function, learn about the SIM card GPRS charging first.

Ensure that the device is stopped before replacing the SIM card. Hot plugging is not supported.

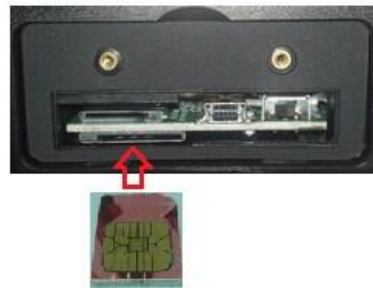

3. Charge the battery.

Before using the device for the first time, you are advised to turn off the device and then charge the battery fully. When the battery power is full, the LED indicator turns green. To charge the battery, you can connect the device to the wall charger or a computer through the USB cable.

While charging, the device may heat up. This is normal, and does not affect your device's lifespan or performance. If the battery is low, it may affect positioning and data transmission. In this way, charge the battery before using.

4. Start the device.


Turn the slide switch to the rightmost position, then press the drop switch 3 times within 5 seconds. The blue LED indicator will blink 0.2s on and 0.2s off, indicating that the device has started. After the device starts, you are advised to wait 15 seconds, and then perform any operations, facilitating internal self-check.



Note: Ensure that the SIM card had properly installed before starting the device.

5. Stop the device.

Press the drop switch 3 times within 5s. The green LED indicator will blink 0.2s on and 0.2s off, indicating that the device has stopped. After the device stops, you are advised to wait 5 seconds, and then perform operations for the drop switch.

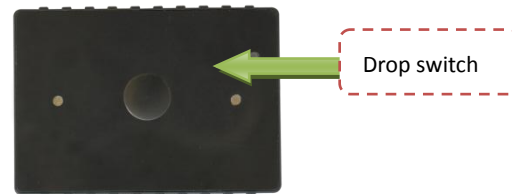

6. Install the device cover.

Place the back cover, and tighten the two screws by using the mini screwdriver.

7 Quick Operation Command

Before normal usage, common parameters must be set either by SMS command or by software.

7.1 Real-time Location Tracking

This section describes how to query the current location of the T355, ensuring that the GPS is working normally.

Call the SIM card phone number that is used in the T355, and hang up after the dial tone rings 2-3 times.

Note: If an authorized phone number was set by SMS command A71, only this authorized phone number can call the SIM card phone number and receive device's location information.

An SMS with a map link is received. Click the link to query the location.



SMS example:


Now,072714 02:48,V,16,23Km/h,61%,http://maps.google.com/maps?f=q&hl=en&q=22.540103,114.082329

The following table describes the SMS format:

Parameter	Description	Remarks
Now	Indicates the current location.	SMS header: indicates the alarm type. For details about the SMS header, see the <i>MEITRACK SMS Protocol</i> and <i>MEITRACK GPRS Protocol</i> .
072714 02:48	Indicates the date and time in MMDDYY hh:mm format.	None
V	The GPS is invalid.	A = Valid V = Invalid
16	Indicates the GSM signal strength.	Value: 1–32 The larger the value is, the stronger the signal is. If the value is greater than 12, GPRS reaches the normal level.
23Km/h	Indicates the speed.	Unit: km/h
61%	Indicates the remaining battery power.	None
http://maps.google.com/maps?f=q&hl=en&q=22.540103,114.082329	This is a map link. Latitude: 22.540103 Longitude: 114.082329	None

If there is no valid GPS available, the tracker will reply the most recent valid position, along with GSM LBS information by AGPS.

If your mobile phone does not support HTTP, enter the latitude and longitude on Google Maps to query a location.

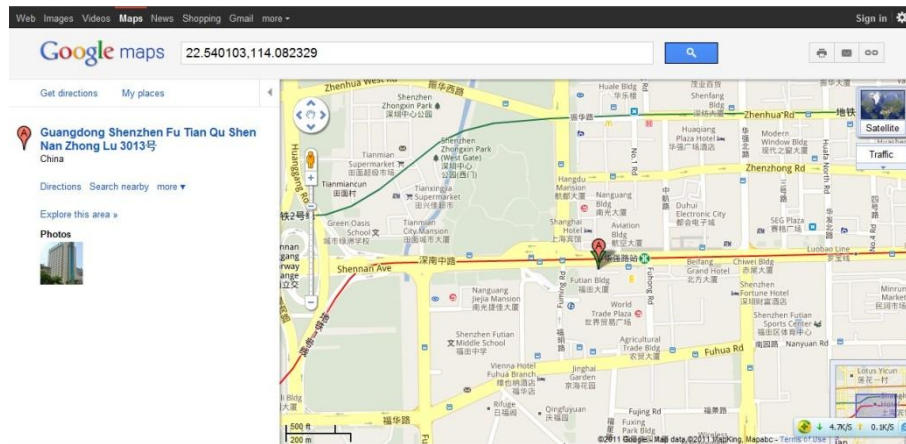

Note: The default password of the tracker is 0000. The password can be changed by using Meitrack Manager or SMS commands. After the password is changed successfully by using an SMS command, only the authorized phone number can receive SMS reports. The common format of an SMS command is: **Password,Command,Parameter**.

7.2 Smart Sleep – A73

This command is used to enable the sleep mode function, prolonging standby time to 8760 hours. In this mode, the scheduled tracking and location tracking functions are disabled.

- SMS text:
0000,A73,Sleep level
Send the text to the embedded SIM card phone number.
The device automatically replies to the SMS: **IMEI,A73,OK**. It indicates that the sleep mode is set successfully.
- If the scheduled tracking function is required, disable the sleep mode.

Note:

When the sleep level is **0**, the sleep mode is disabled.

When the sleep level is **1**, the tracker enters the normal sleep mode. The GSM module always works, and the GPS module occasionally enters the sleep mode. If the tracker is inactive (drop/incoming call/SMS/vibration) for 5 minutes, enable sleep level 1. If the tracker is activated (drop/incoming call/SMS/vibration), sleep level 0 is enabled. In the device running mode, sleep level 0 or 1 will be enabled alternatively.

The mode is not recommended for users who set the scheduled tracking at a short interval. This setting will affect tracking integrity

When the sleep level is **2** (default value), the tracker enters the deep sleep mode. If the tracker is inactive (drop/incoming call/SMS/vibration) for 5 minutes, the tracker enters deep sleep mode. In this way, a triggering event (drop/incoming call/SMS/vibration) can wake the device up, and then the device enters working mode. In deep sleep mode, if there is no triggering event (drop/incoming call/SMS/vibration) within 25 minutes, the device will automatically enter super power-saving mode. In this mode, only a drop or vibration event can wake the device up. GPS and GSM modules can be enabled intelligently based on vehicle driving status, which saves power.

In deep sleep mode, the tracker can be woken up when the tracker drops or vibrates. If the tracker is activated (drop/vibration), sleep level 0 is enabled. In the device running mode, sleep level 0 or 2 will be enabled alternatively. In sleep mode, the scheduled tracking and distance tracking functions will be disabled.

Example: 0000,A73,2

Reply: 353358017784062,A73,OK

For details about SMS commands, see the *MEITRACK SMS Protocol*.

8 Configured on a Computer

This section describes how to use Meitrack Manager to configure the T355 on a computer.

Procedure:

1. Install the USB driver and Meitrack Manager.
2. Connect the T355 to a PC with a USB cable.
3. Run Meitrack Manager, and start the T355. Meitrack Manager will automatically detect the tracker model.



For details about Meitrack Manager, see the *MEITRACK Manager User Guide*.

Note: The CD delivered with the tracker contains Meitrack Manager. The software language will be automatically switched according to the operating system language. Press **Ctrl + L** to manually switch the language.

9 GPS Tracking System

Perform the following operations:

1. Configure parameters in any of the following ways:
 - Configured by SMS: Send SMS commands **0000,A21,1,67.203.13.26,8800,APN,APN account,APN password** and **0000,A12,6,0** to the tracker SIM card phone number.
 - Configure by Meitrack Manager: Connect the tracker to a PC, and run Meitrack Manager to enter the main interface. Then select **GPRS Tracking**, and set parameters including Server IP, Port, APN, Turn on TCP, and Time Interval.
2. Visit ms02.trackingmate.com, and enter the user name and password. Contact us if you have no user name and password or forget your user name and password.



3. Go to the map, and choose **Manage > Admin**.



- Select a user, and Click **Add a New Device**.



- Obtain the tracker IMEI from the packing or Meitrack Manager, register a device, and set the parameters shown in the following figure.

Add a New Device

Device ID:

Password:

Device Name:

SIM Number:

Model:

Select a picture:

- Double-click a device in the panel on the right, and check whether data is updated in **Status**.

Status Alarm Updates

Device Name:	<input type="text" value="T355"/>	Fix:	<input type="text" value="Invalid"/>	Speed:
GPS Time:	<input type="text" value="03-05 00:41:50"/>	Latitude:	<input type="text" value="29.997390"/>	Others:
Received Time:	<input type="text" value="03-05 00:54:28"/>	Longitude:	<input type="text" value="31.159672"/>	
Journey(Km):	<input type="text" value="23500.01"/>	Run Time:	<input type="text" value="0day(s)0:0:0"/>	
Location:	<input type="text" value="GPS Location:benito juarez 329, Zona Centro, 91700 Veracruz, Mexico"/>			

10 Installing the T355

After the device is attached to the body of the vehicle, the drop switch will be triggered. After 5 seconds, two beeps will sound, indicating that the device has been installed successfully.



Note: If the tracker has not been attached to the vehicle for over 5 seconds, a drop alarm will be generated. After 5 minutes, if no event (incoming call/SMS/vibration) is triggered, the device automatically enters the deep sleep mode. In any mode, the deep sleep mode will be automatically enabled after the drop alarm is generated.

11 Safety and Usage Instructions

Use only Meitrack-approved accessories.

Incompatible accessories may cause serious injuries or damages to your device.

Handle the battery and charger carefully.

- Use batteries specified by Meitrack and chargers exclusively designed for your device. Incompatible batteries and chargers may cause serious injuries or damages to your device.
- Do NOT place batteries or devices on fire or in heating devices, such as microwave ovens, ovens, or radiators. Batteries may explode when overheated.

If you have any questions, do not hesitate to email us at info@meitrack.com.