AX-M620L





Magnetic Lock

▶ Specification

Model	Size(unit:mm)	Voltage	Current	Holding Force	Lock Signal	Door Signal	Door
AX-M620L	250.00Lx48.80Wx27.90H	12/24VDC	12V/500mA 24V/250mA	600Lbs(280kg)	Yes	No	Single Door

▶ Diagram(unit:mm)

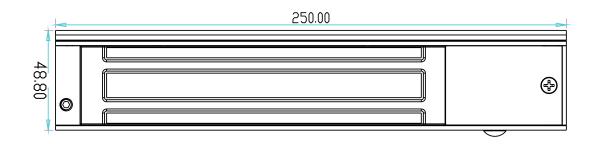

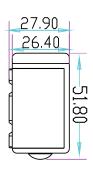


Cautions:


A. The screw of armature plate should not be fi xed t oo ti ght . Proper elasticity should be gua ran tee d for the rub ber ring so that the armature plate can adjust itself to the appropriate position.

B. Check the jumper's position before connecting. Figure out it represents 12VDC or 24VDC.






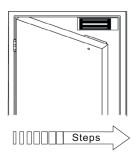


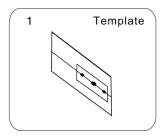


Fold the plate to 90°.

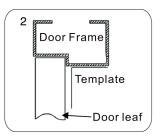


Close the door first, then place the upper side of template on door frame, while adjust the left side next to the door leaf.

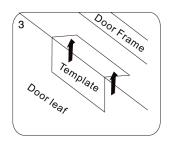

Mark screw positions of armature plate and magnetic lock on door leaf and door frame respectively.

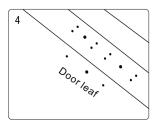

Drill holes based on the marked positions.

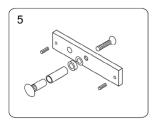

Make a combination based on the picture.



Drill a hole Inside: Diameter is 8mm




Hollow Metal Door Wooden Door Metal Surface Door


Drill a hole Inside: Diameter is 8mm Outside: Diameter is16mm Outside: Diameter is 12.7mm the plastic straight pin




Inside:Drill a hole diameter is 8mm folding

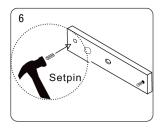


Strike the pin into the armature plate slightly (to avoid movement).

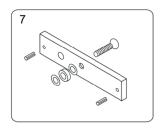


Make a combination based on the picture(add washer accordingly). The rubber ring must be added.

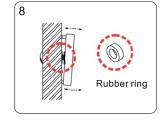


Place the rubber ring between armature plate and door leaf.

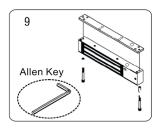


Use Allen key to remove the mounting plate from lock body.

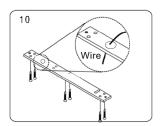


Fix the mounting plate on the door frame according to the holes drilled earlier. mounting plate.

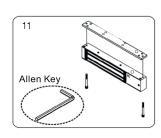

Use Allen key to screw the lock body on the

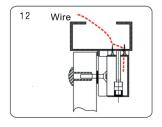

Close the door to test holding force. The angle between armature plate and magnetic lock can be adjusted by adding or reducing washers.

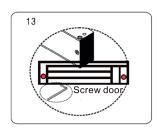

After all the appropriate procedures, the holding force can be maximized. Finally, fix the tamper screw.






Different brackets are available according to different types of doors. For example, narrow door, frameless glass door and inward opening door.

L Bracket-For outward opening door


When the door frame thickness is less than 42mm. L bracket is needed.

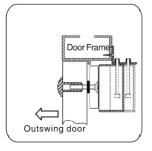



ZL Bracket-For inward opening door


For inward opening door, ZL bracket is needed.

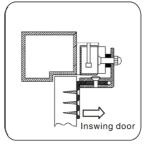



U Bracket


For the frameless glass door. U bracket is needed.

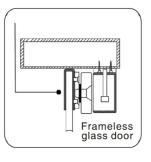




I Bracket for armature plate

When the door frame is too thick, I bracket is needed.

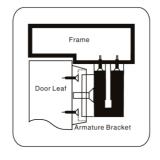





▶ Installation Instruction

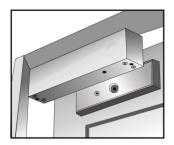


Installation

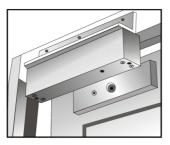

Demonstration of I Bracket Demonstration of L Bracket Demonstration of ZL Bracket Installation

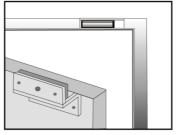

Installation

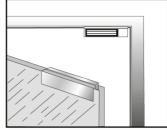

Demonstration of UL Bracket Installation





A.12VDC Input:

Required power 0.5Amp(Minimum). Connect the positive(+)lead from a 12VDC power source to V +.

Connect the ground(-)lead from a 12VDC power source to V -.


Check jumper for 12 VDC operation.

B.24VDC Input:

Required power 0.25Amp(Minimum). Connect the positive(+)lead from a 24VDC power source to V +.

Connect the ground(-)lead from a 24VDC power source to V -.

Check jumper for 24 VDC operation.

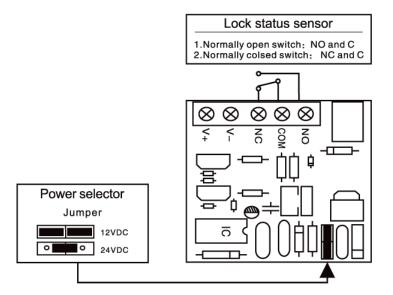

▶ Wire Connection

